



OPERATION MANUAL

intelligent Touch Controller Web Software

MODEL
DCS004A71



Thank you for purchasing intelligent Touch Controller.
This operation manual contains notes for safe use of the product.
Fou correct use, be sure to read this manual carefully before use.
Store this manual close at hand so that it can be referred to as required.

CONTENTS

1. SAFETY CONSIDERATIONS.....	1
2. BEFORE STARTING	3
3. ABOUT WEB INTERFACE	3
3-1. Web Interface of the intelligent Touch Controller.....	3
4. OVERVIEW.....	4
4-1. Web System of the intelligent Touch Controller.....	4
4-2. Restricted Function for each login name	5
4-3. Two Display Modes of the Web Interface	5
4-4. Logging into the Web Interface	5
4-5. Selecting Display Language	6
5. BASIC MODE	7
5-1. Main Screen.....	7
5-2. Icons on the Screen	8
5-3. Information Provided by Indoor Unit Icons.....	9
5-4. Information Provided by HRV Icons.....	10
5-5. Information Provided by Lighting Device, Universal Device, and Zone Icons	11
5-6. Information Provided by the Setting Areas	12
5-7. Starting/Stopping All the Devices in a Specific Group	17
5-8. Starting/Stopping All the Devices in a Specific Zone	17
5-9. Switching the Operation Mode.....	18
5-10. Changing the Temperature Setting.....	19
5-11. Changing the Direction of Air Flow and Air Volume	19
5-12. Changing the Ventilation Amount and the Freshen Up Function	20
5-13. Notes on the Basic Mode	20
5-14. Monitoring Operations of All the Devices in a Specific Zone or Group	21
6. ADVANCED MODE	22
6-1. Main Screen.....	22
6-2. Starting/Stopping All the Devices in a Specific Group	23
6-3. Starting/Stopping All the Devices in a Specific Zone	23
6-4. Starting/Stopping Air Conditioners All Together	24
6-5. Switching the Operation Mode.....	24
6-6. Changing the Temperature Setting	25
6-7. Resetting Filter/Element Signs.....	26
6-8. Changing the Direction of Air Flow and Air Volume.....	27
6-9. Changing the HRV settings.....	27
6-10. Permitting/Prohibiting Remote Controller Operations	28
6-11. Monitoring Operations of All the Devices in a Specific Zone or Group	29
6-12. Monitoring Detailed Information	31
6-13. Monitoring Detailed Operation Status	32
6-14. Monitoring Operation Status of HRVs	33
7. ABOUT SYSTEM SETUP MENU	34
7-1. Overview	34
7-2. System Setup.....	37
8. CREATING SCHEDULES	40
8-1. Main Scheduling Screen	40
8-2. Schedule Setup dialog box	41
8-3. Using the Schedule Menu.....	42
8-4. Creating Regular Schedule Patterns	42
8-5. Creating Ex Schedule Patterns	44
8-6. Copying or Deleting a Schedule Program.....	45
8-7. Copying or Deleting Schedule Events	46
8-8. Naming a Schedule Program.....	47
9. BEFORE CONTACTING US: TROUBLESHOOTING	48
10. AFTER-SALES SERVICE.....	50

1. SAFETY CONSIDERATIONS

Please read these “SAFETY CONSIDERATIONS” carefully before installing air conditioning equipment and be sure to install it correctly.


After completing the installation, make sure that the unit operates properly during the start-up operation.


Please instruct the customer on how to operate the unit and keep it maintained.

Also, inform customers that they should store this installation manual along with the operation manual for future reference.


This air conditioner comes under the term “appliances not accessible to the general public”.

Meaning of danger, warning, caution and note symbols.


 **DANGER**..... Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION**

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **NOTE**

Indicates situation that may result in equipment or property-damage-only accidents.

Keep these warning sheets handy so that you can refer to them if needed.

Also, if this equipment is transferred to a new user, make sure to hand over this operation manual to the new user.

DANGER

- **Any abnormalities in the operation of the air conditioner such as smoke or fire could result in severe injury or death.**

Turn off the power and contact your dealer immediately for instructions.

- **Do not install the unit in an area where flammable materials are present due to risk of explosion resulting in serious injury or death.**

- **Safely dispose of the packing materials.**

Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face the danger of death due to suffocation.

WARNING

- **Ask your dealer for installation of the air conditioner.**

Incomplete installation performed by yourself may result in a water leakage, electric shock, and fire.

- **Ask your dealer for improvement, repair, and maintenance.**

Incomplete improvement, repair, and maintenance may result in a water leakage, electric shock, and fire.

- **Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin which are specifically designed for use with the equipment and have them installed by a professional.**
- **Ask your dealer to move and reinstall the air conditioner or the remote controller.**
Incomplete installation may result in a water leakage, electric shock, and fire.
- **Never let the indoor unit or the remote controller get wet.**
It may cause an electric shock or a fire.
- **Never use flammable spray such as hair spray, lacquer or paint near the unit.**
It may cause a fire.
- **Do not allow children to play on or around the unit as they could be injured.**
- **Never replace a fuse with that of wrong ampere ratings or other wires when a fuse blows out.**
Use of wire or copper wire may cause the unit to break down or cause a fire.
- **Never inspect or service the unit by yourself.**
Ask a qualified service person to perform this work.
- **Cut off all electric waves before maintenance.**
- **Do not wash the air conditioner or the remote controller with excessive water.**
Electric shock or fire may result.
- **Do not touch the switch with wet fingers.**
Touching a switch with wet fingers can cause electric shock.
- **Never touch the internal parts of the controller.**
Do not remove the front panel because some parts inside are dangerous to touch. In addition, some parts may be damaged by touching. For checking and adjusting internal parts, contact your dealer.
- **Check the unit stand for damage on a continuous basis, especially if it had been in use for a long time.**
If left in a damaged condition the unit may fall and cause injury.
- **Placing a flower vase or other containers with water or other liquids on the unit could result in a shock hazard or fire if a spill occurs.**

! CAUTION

- **Avoid placing the controller in a spot splashed with water.**
Water coming inside the machine may cause an electric leak or may damage the internal electronic parts.
 - **Do not operate the air conditioner when using a room fumigation - type insecticide.**
Failure to observe could cause the chemicals to become deposited in the unit, which could endanger the health of those who are hypersensitive to chemicals.
 - **Do not turn off the power immediately after stopping operation.**
Always wait at least five minutes before turning off the power. Otherwise, water leakage and trouble may occur.
 - **The appliance is not intended for use by young children or infirm persons without supervision.**
 - **The remote controller should be installed in such a way that children cannot play with it.**
-

! NOTE

- **Never press the button of the remote controller with a hard, pointed object.**
The remote controller may be damaged.
 - **Never pull or twist the electric wire of the remote controller.**
It may cause the unit to malfunction.
 - **Do not place the controller exposed to direct sunlight.**
The LCD display may get discolored, failing to display the data.
 - **Do not wipe the controller operation panel with benzene, thinner, chemical dustcloth, etc.**
The panel may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. And wipe it with another dry cloth.
 - **Dismantling of the unit, treatment of the refrigerant, oil and eventual other parts, should be done in accordance with the relevant local and national regulations.**
-

2. BEFORE STARTING

To use the web interface of the intelligent Touch Controller, the target PC should meet the following requirements. Check them before starting.

Requirements for the PCs

CPU	CPU Pentium III 800MHz or higher or equivalent
OS	OS Windows 2000 Service Pack 4 or later Windows XP Service Pack 1 or later
Memory	256MB or more
Free Disk Space	100MB or more (required for installing Java plugin)
Network Speed	10 Base-T or higher
Display	Resolution: 1024 × 768 (XGA) or more, Maximum color development simultaneously 65535 colors or more
Browser	Internet Explorer 6.0SP1 or more *1
Java plugin	J2SE (Java2 Platform Standard Edition) V1.42 *2

*1: If IE6.0SP1 or later is not installed, obtain it from the Microsoft website. It is downloadable for free. Other browsers, such as Netscape, may not work correctly. Be sure to use IE6.0SP1 or later.

*2: Be sure to use J2SE (Java2 Platform Standard Edition) V 1.4.2_04. Other versions are not qualified. Download it from the SUN website (for free) or contact the dealer from which you purchased this product.

3. ABOUT WEB INTERFACE

3-1 Web Interface of the intelligent Touch Controller

• Permissions: Privileges Given to Each Login Name

There are two categories of login users: General User who can perform basic operations via the web interface and Administrator who can setup the system and change system settings.



See page [5]

• Two Display Modes

You can select the display mode from two modes during login process: the Basic mode which provides a simple and easy-to-use interface and the Advanced mode which allows you to use advanced setting options.



Basic Mode
See page [7]
Advanced Mode
See page [22]

• Start/Stop Operation

You can start or stop all the devices in a group, a zone, or multiple zones at a time.



Basic Mode
See page [17]
Advanced Mode
See page [23]

• Advanced Settings for Air Conditioners

You can set temperature, operation modes, direction of air flow, air volume, and remote controller mode of all devices in a group, a zone, or multiple zones.



Basic Mode
See page [18]
Advanced Mode
See page [24]

• Various Operation Modes

You can operate devices from a web interface, the intelligent Touch Controller console, or a local remote controller. Also the Administrator can permit or prohibit remote controller operations of devices in a specified group or zone using the web interface.



Advanced Mode
See page [28]

• User Administration

The Administrator can register or delete General Users, who can operate air conditioners via the web interface, and set/change his/her own password and General Users' password.



See page [37]

• Scheduling Function

The Administrator can precisely schedule operations for a specific group or zone of devices. Weekly schedule and 10 extra schedules can be created.




See page [40]

4. OVERVIEW

4-1 Web System of the intelligent Touch Controller

The Administrator can assign (restrict) one or more air conditioners to each General User. In the following Figure 1, User 01, User 02, and User 03 can operate and monitor only their local air conditioners. However User 64 can operate/monitor air conditioners that other General Users can also operate/monitor.

Figure 1: Example of user setting

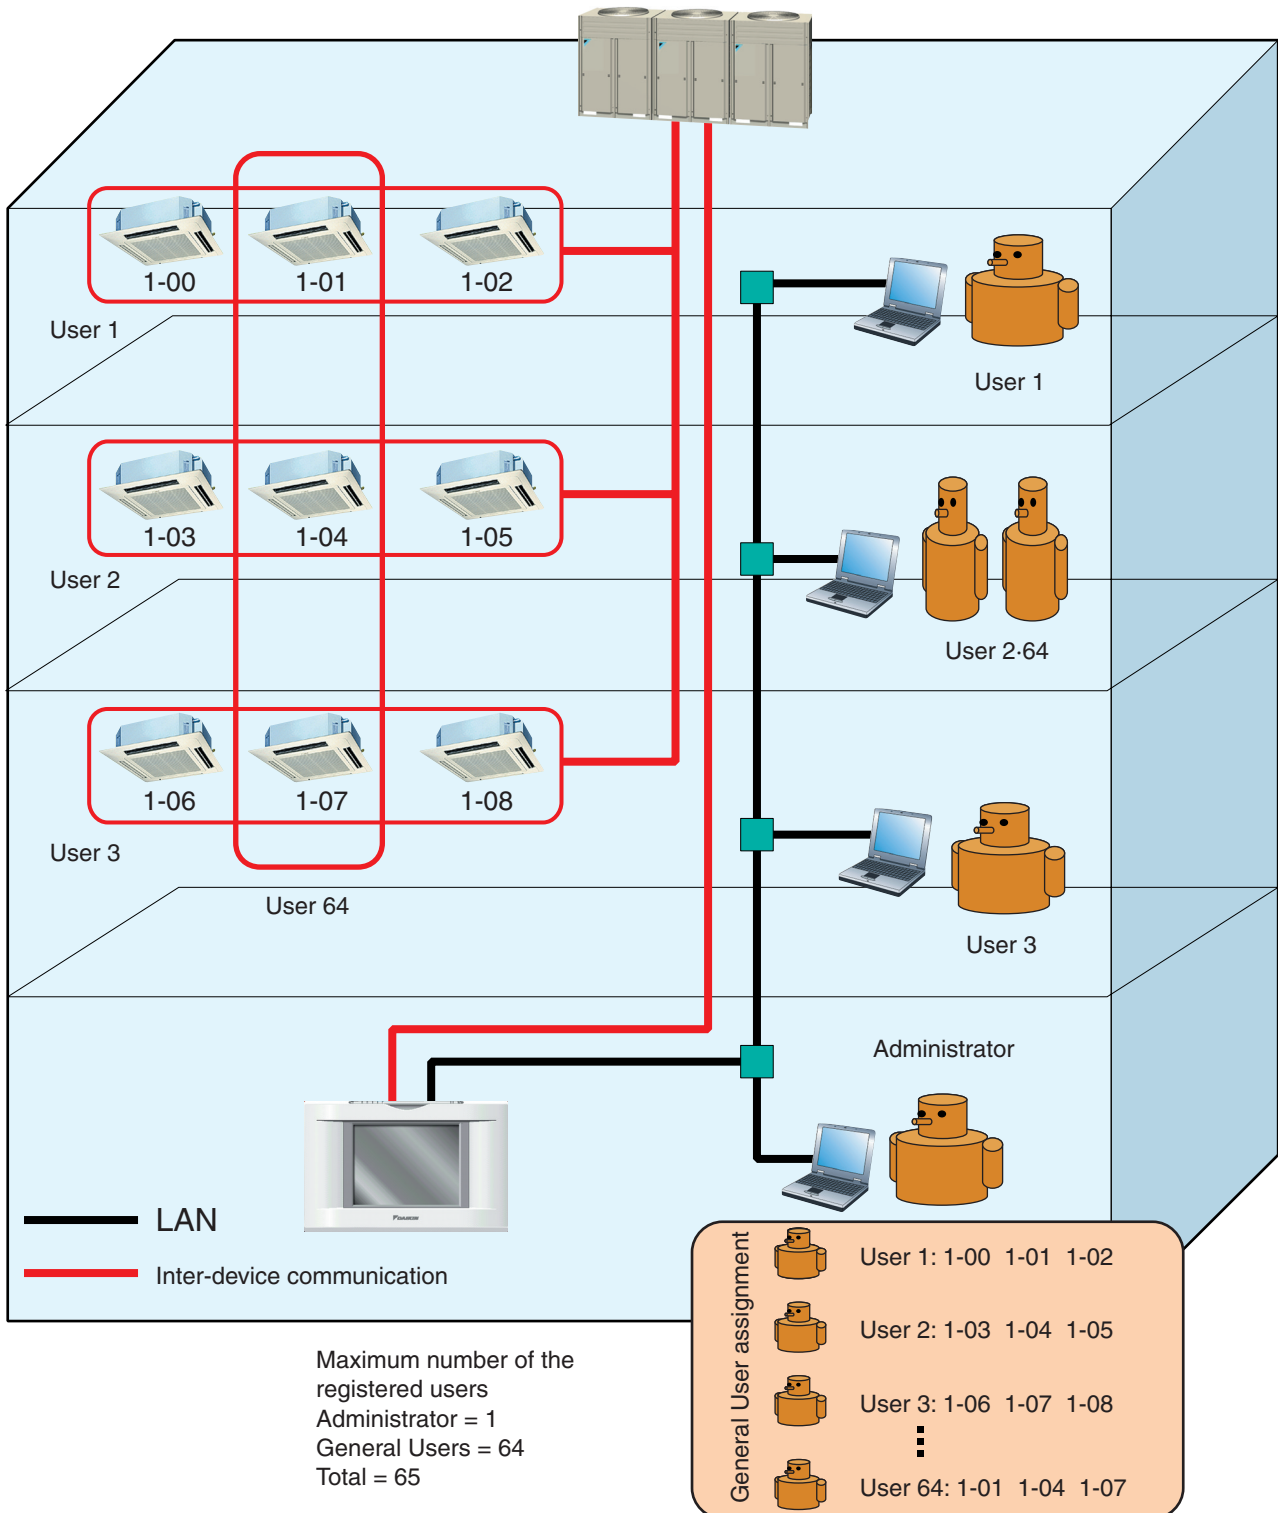

4-2 Restricted Function for each login name

There are two categories of login users: **General User** who can perform basic operations via the web interface and **Administrator** who can setup the system and change system settings. The following list shows web operations given to each category.

■ Administrator is able to:

- Operate air conditioners.
- Monitor air conditioners.
- Create schedules.
- Set his/her own password.
- Set or change General User's passwords.
- Register or delete General Users (Up to 64 users).
- Assign devices to each General User.

■ A General User is able to:

- Operate air conditioners.
- Monitor air conditioners.
- Change his/her own password.

■ Privileges exclusive for the Administrator

- The Administrator can assign zones to each General User.
- Each General User can operate or monitor only devices specified by the Administrator.

4-3 Two Display Modes of the Web Interface

In the login process of the intelligent Touch Controller web interface, users can select either of the following two modes.

- Basic Mode
- Advanced Mode

This section provides the description of the difference between these two modes.

■ Basic Mode:

[General Users are able to:]

- Monitor air conditioners.
- Operate air conditioners.

[The Administrator is able to:]

- Operate air conditioners.
- Monitor air conditioners.

■ Advanced Mode:

[General Users are able to:]

- Monitor air conditioners.
- Operate air conditioners.
- Permit and/or prohibit local remote controller operations.
- Change his/her own password.

[The Administrator is able to:]

- Operate air conditioners.
- Monitor air conditioners.
- Permit and/or prohibit local remote controller operations.
- Create schedules.
- Set his/her own password (Administrator password).
- Set or change General User's passwords.
- Register or delete General Users (Up to 64 users).
- Assign one or more zones to each General User.


■ Privileges exclusive for the Administrator

4-4 Logging into the Web Interface

1. Launch Internet Explorer and enter the IP address of the intelligent Touch Controller into the address field.

http: // address of the intelligent Touch Controller

In the figure below, the IP address is 150.35.20.63.

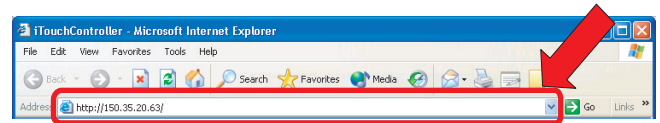


2. The screen in the figure below appears.

User name: Enter your user name assigned by the Administrator.

Password: Enter the password associated with the user name.

GUI Mode: Select either of the radio buttons: Basic or Advanced.
Basic Mode (See page 7)
Advanced Mode (See page 22)


Language: Click this button to display the Display language setting dialog box. (See page 6)

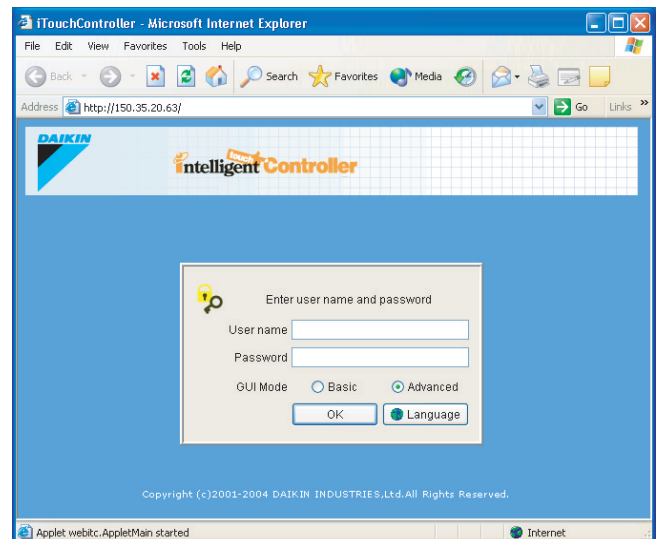

Upon completion, click the OK button and log into the program.

If you are not authenticated, the error message ((1) in the figure) appears. Check your user name and password.

figure (1)

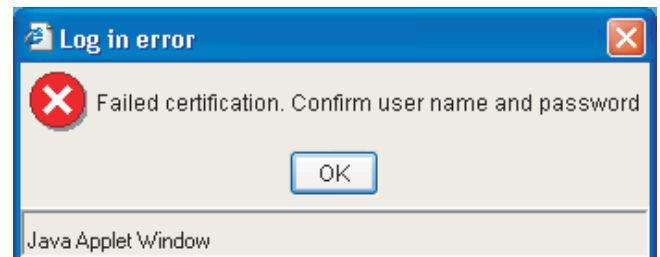

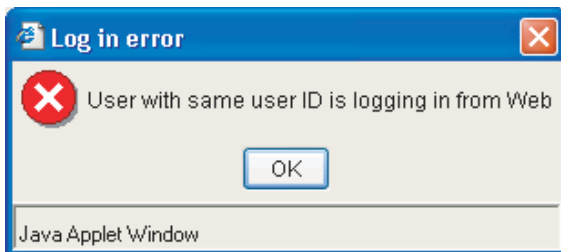
If the Administrator attempts to log into the web interface without closing the system menu on the intelligent Touch Controller console, the error message ((2) in the figure) appears. In this case close the system menu, and log into it again.

figure (2)




 


 
If the Administrator, who is logging into the web interface, attempts to log into the web interface via another PC, the error message ((3) in the figure) appears. The Administrator cannot log into the web interface via multiple PC at a time.

figure (3)




4-5 Selecting Display Language

To select a display language to be used for the web interface:

1. Click the “  Language ” button (1) to display the Display language setting screen (Screen 2).
 2. Click the “  << ” or “  >> ” button to select a language to be used in this screen.
 3. Select a language to be used in the web interface by clicking a radio button (2).
 4. To reflect your selection, click the “  OK ”.
- To cancel your selection, click the “  Cancel ”.

Screen 1: Authentication screen

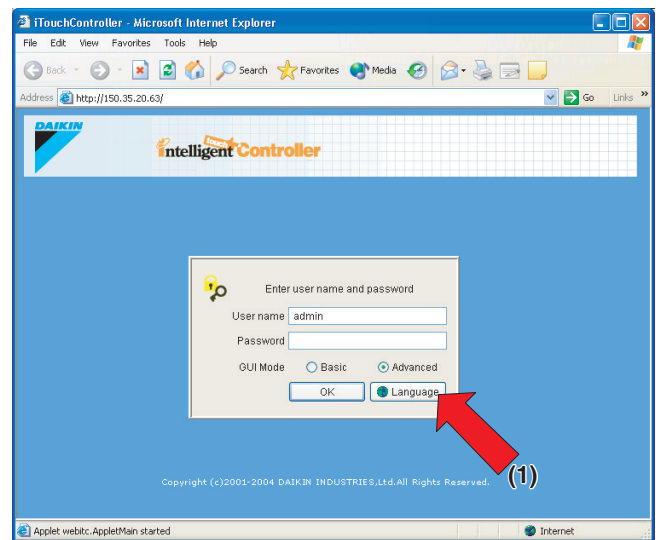


Screen 2: Display language setting screen




5. BASIC MODE

5-1 Main Screen

You will see the following screen when logging into the web interface in the Basic mode. This section describes the Main screen shown in the figure. See the next page for more information on each item on this screen.

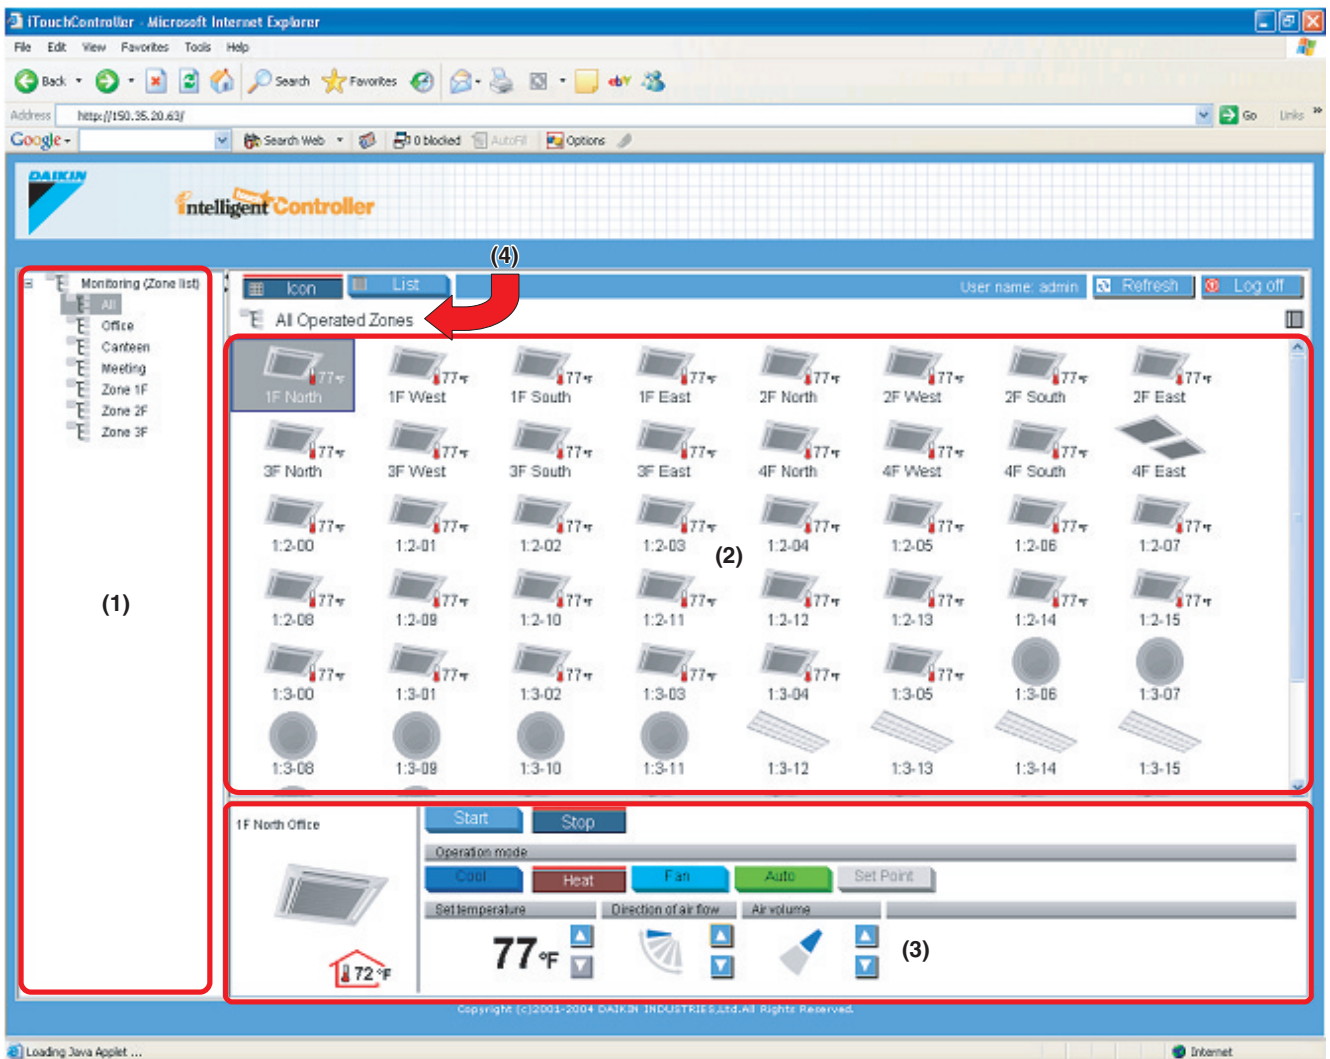

The above figure shows the Main screen displayed in the Icon display mode.

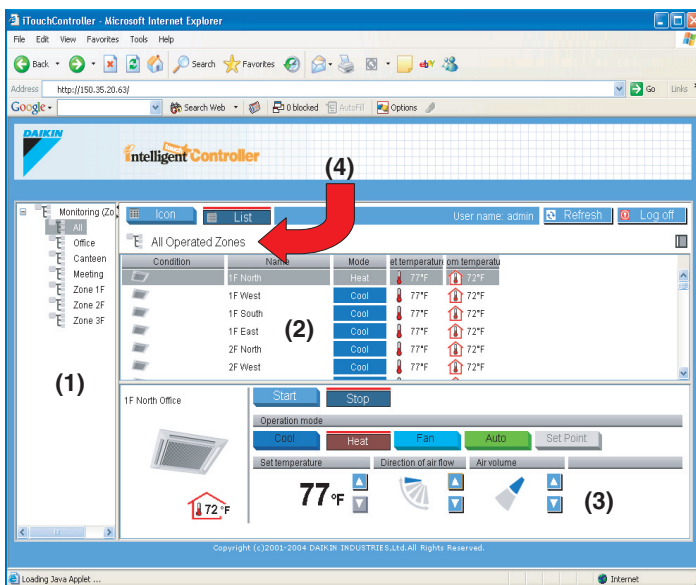






← The figure to the left shows the Main screen displayed in the List display mode.

■ Display Areas on the Main Screen



- (1) <Zone tree area>
When you select a zone in this area, devices included in the zone appear in the main display area (2).
- (2) <Main display area>
Displays the devices in the zone selected in the zone tree area (1).
- (3) <Setting area>
This area provides status information for each device. You can also change the settings. The contents of this area vary depending on the type of the devices selected in the main display area.
 - Group setting area (Air conditioner) (See page 12)
 - Group setting area (HRV) (See page 13)
 - Group setting area (Lighting device) (See page 14)
 - Group setting area (Universal device) (See page 15)
 - Zone setting area (See page 16)

For more information, see the appropriate page.
- (4) <Zone name bar>
Displays the name of the zone selected in the zone tree area (1). Otherwise displays the status report, "Monitoring (Zone List)".

■ Buttons and Other Information Boxes

- | | |
|---|--|
|  | <Login name display>
Displays the login name of the user currently logging into the web interface. |
|  | Changes the main display area to the Icon display mode. |
|  | Changes the main display area to the List display mode. |
|  | Updates zone or group status information in the main display area with the most recent data of the intelligent Touch Controller. |
|  | Allows a user to log off the interface and return to the authentication screen. |

<Increase/reduce button>
Increases or reduces the status display area.
Increase: → Displays the status display area.
Reduce: → Hides the status display area.


- | | |
|---|-------------------|
|  | <Increase button> |
|  | <Reduce button> |

5-2 Icons on the Screen

Each icon represents one of the categories shown in the figures to the right. Devices are grouped into these categories in advance using the intelligent Touch Controller console. Icon assigned to each device cannot be changed via the web interface. This section explains features of each icon.


[Indoor Units]

A device registered as an "indoor unit" appears as an indoor unit icon (see Figure 1).
*In the Icon display mode, a temperature value next to each icon in the main display area represents the set temperature of the device.

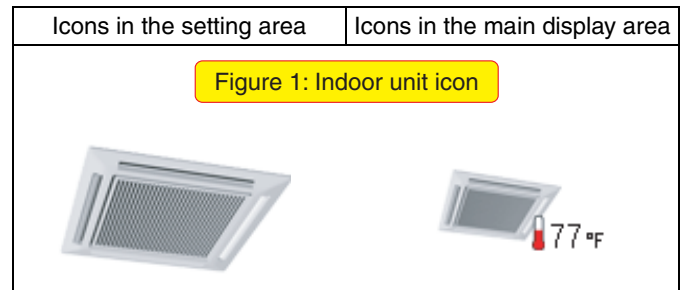

[HRV Devices]


A device registered as an "HRV device" appears as an HRV device icon (Figure 2).

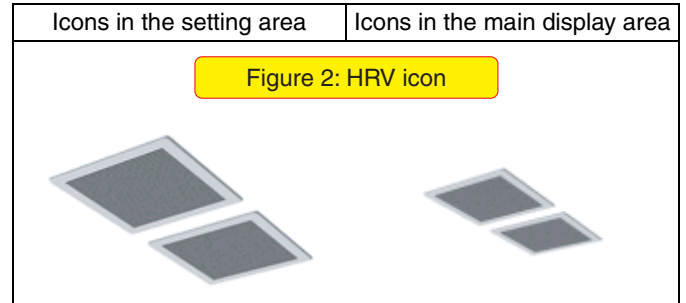

[Di or Dio Units]

When a device is registered as a Di or Dio unit and a lighting device icon is assigned to it using the group setting function of the intelligent Touch Controller console, it appears as a lighting device icon (Figure 3).

When a device is registered as a Di or Dio unit and an icon other than the lighting device icon is assigned to it using the group setting function of the intelligent Touch Controller console, it appears as a universal device icon (Figure 4).

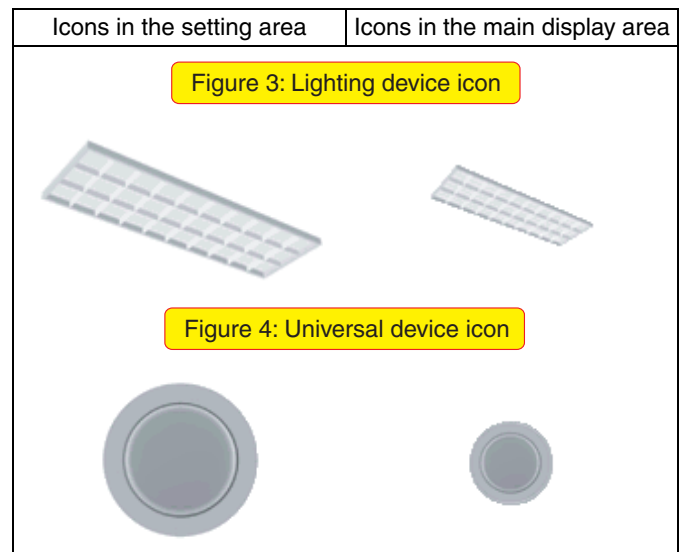


[Zone]

Each zone appears as a zone icon (Figure 5).


*In the Icon display mode, a temperature value next to each icon in the main display area represents the set temperature of the representative unit.

Refer to page 21 for more information on the representative unit.

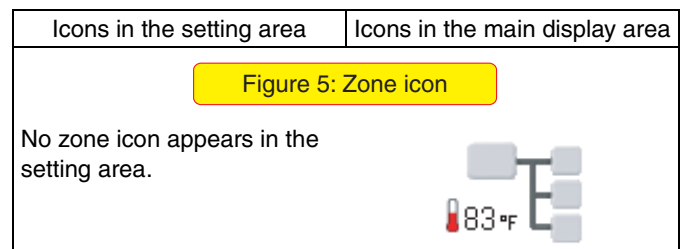


5-3 Information Provided by Indoor Unit Icons


[OPERATION MODE]

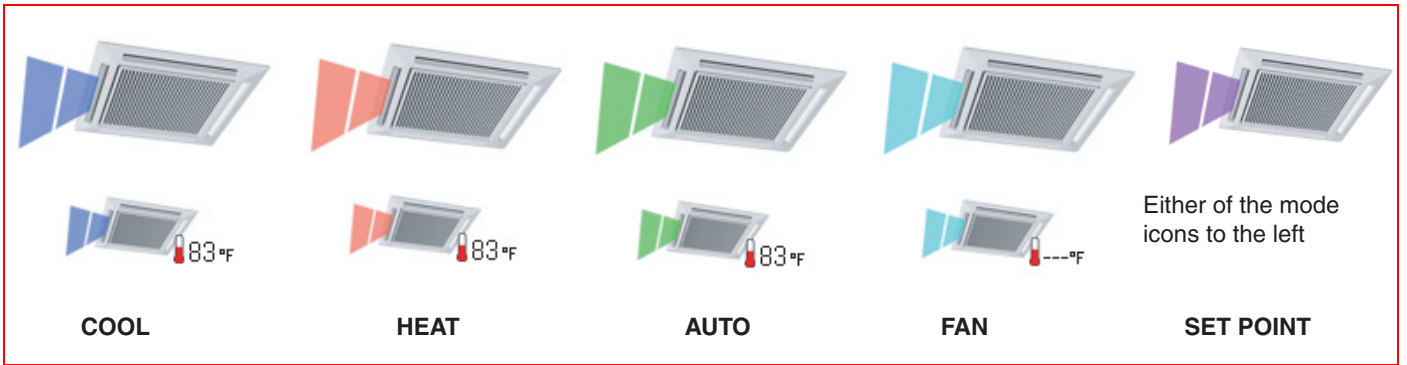


[Start/Stop state]

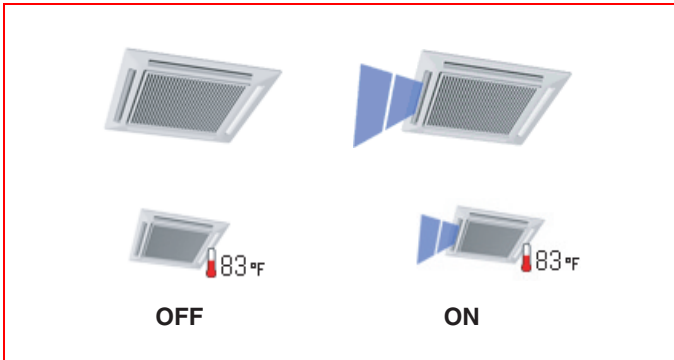


[Error]

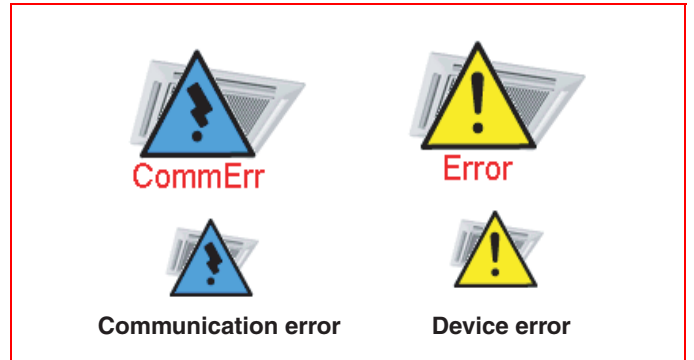

[Direction of air flow]

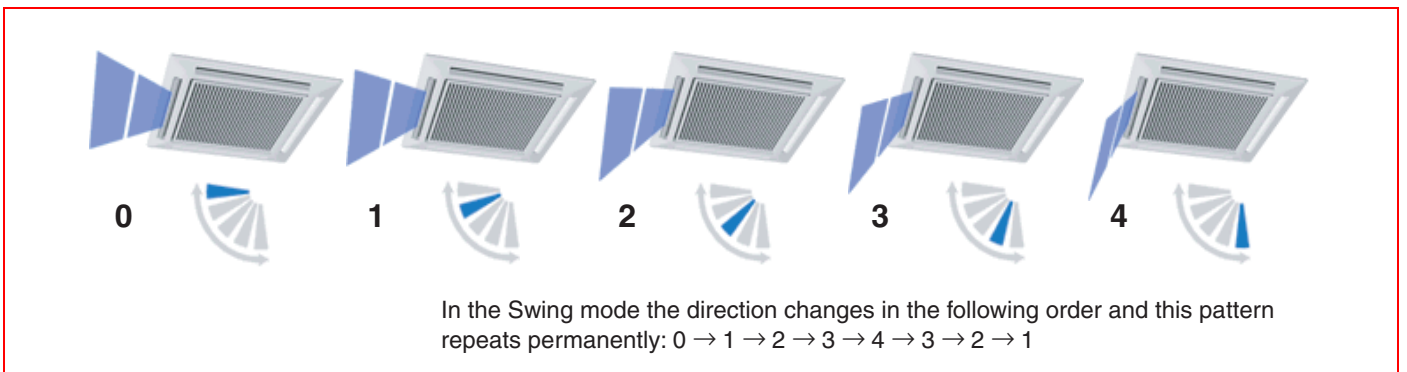


[Air volume]

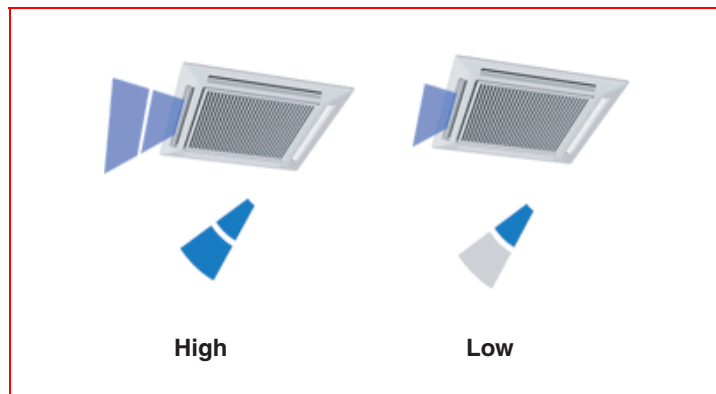


5-4 Information Provided by HRV Icons


[Ventilation mode]

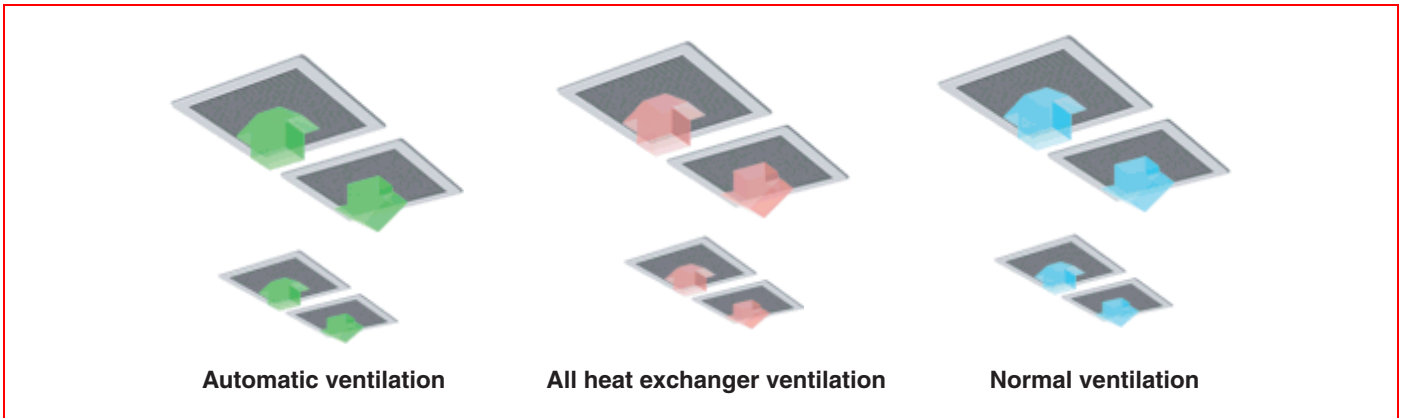


[Ventilation Amount]

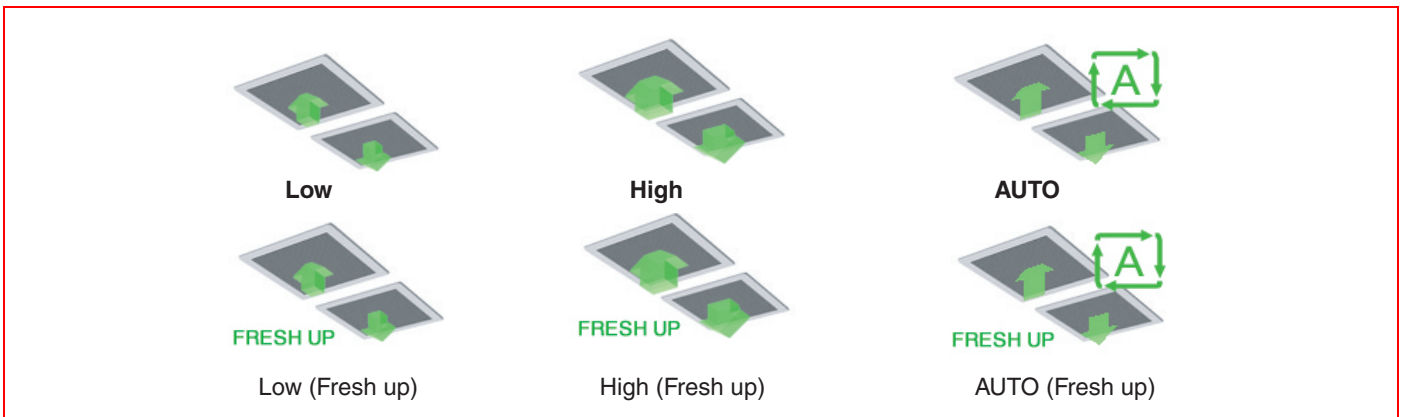

[Start/Stop state]

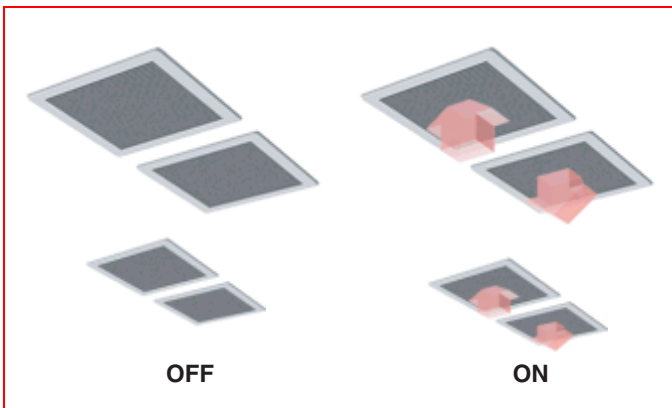


[Error]

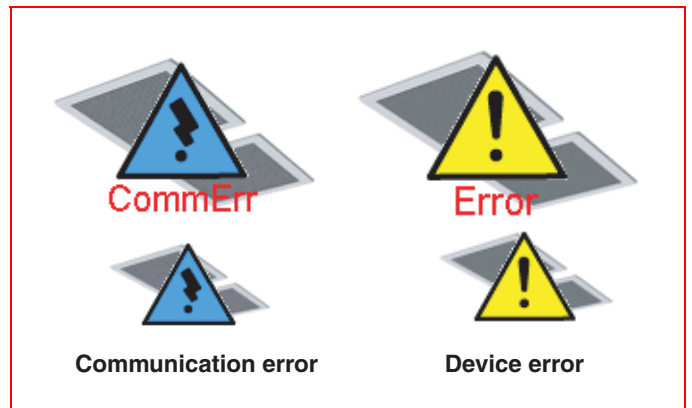


5-5 Information Provided by Lighting Device, Universal Device, and Zone Icons


[Universal device: Start/Stop state]

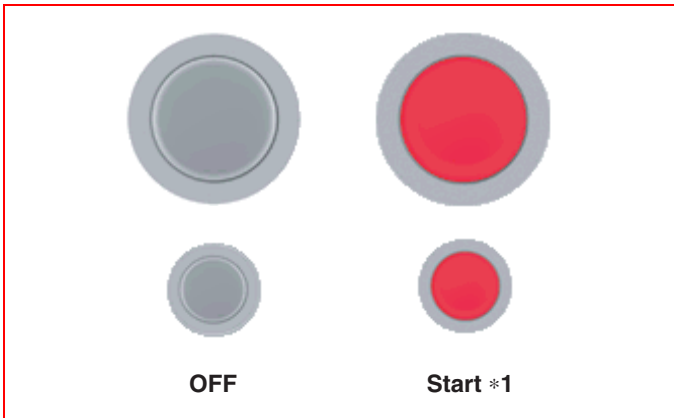


[Universal device: Error]

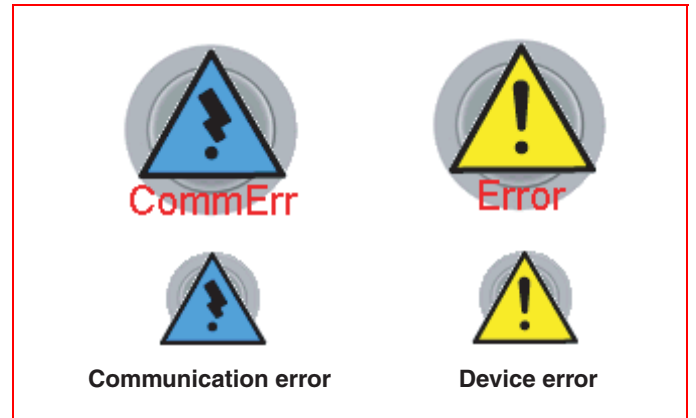


[Lighting device: Start/Stop state]

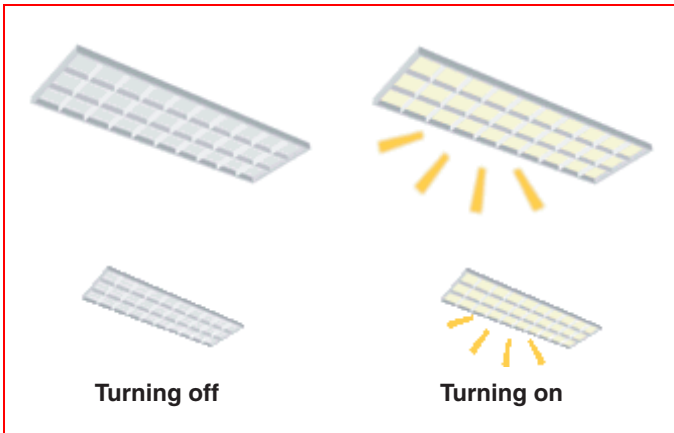


[Lighting device: Error]

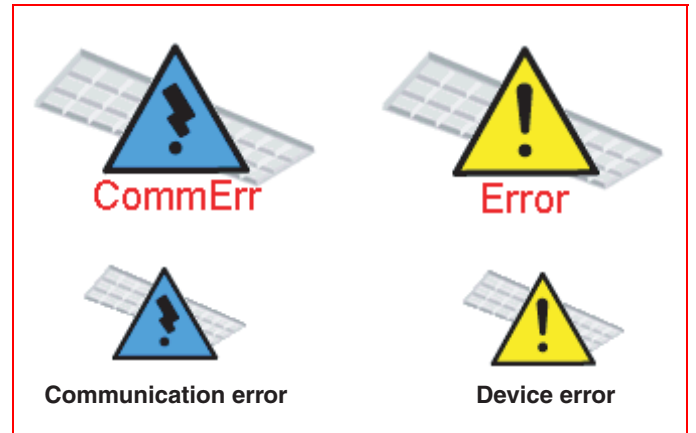

[Zone: Start/Stop state]

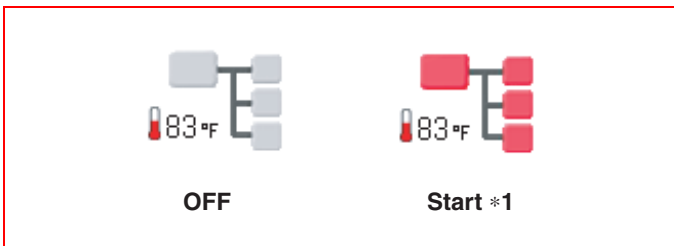


[Zone: Error]

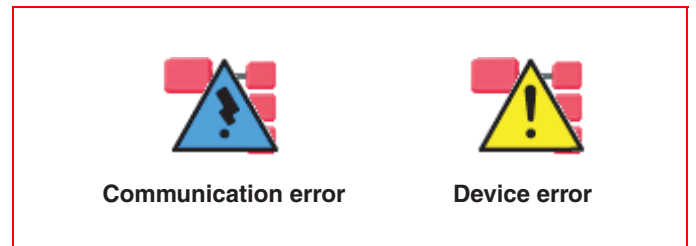

*1 The icon color of an operational device depends on the setting on the intelligent Touch Controller console.

5-6 Information Provided by the Setting Areas

■ Air Conditioner Group:

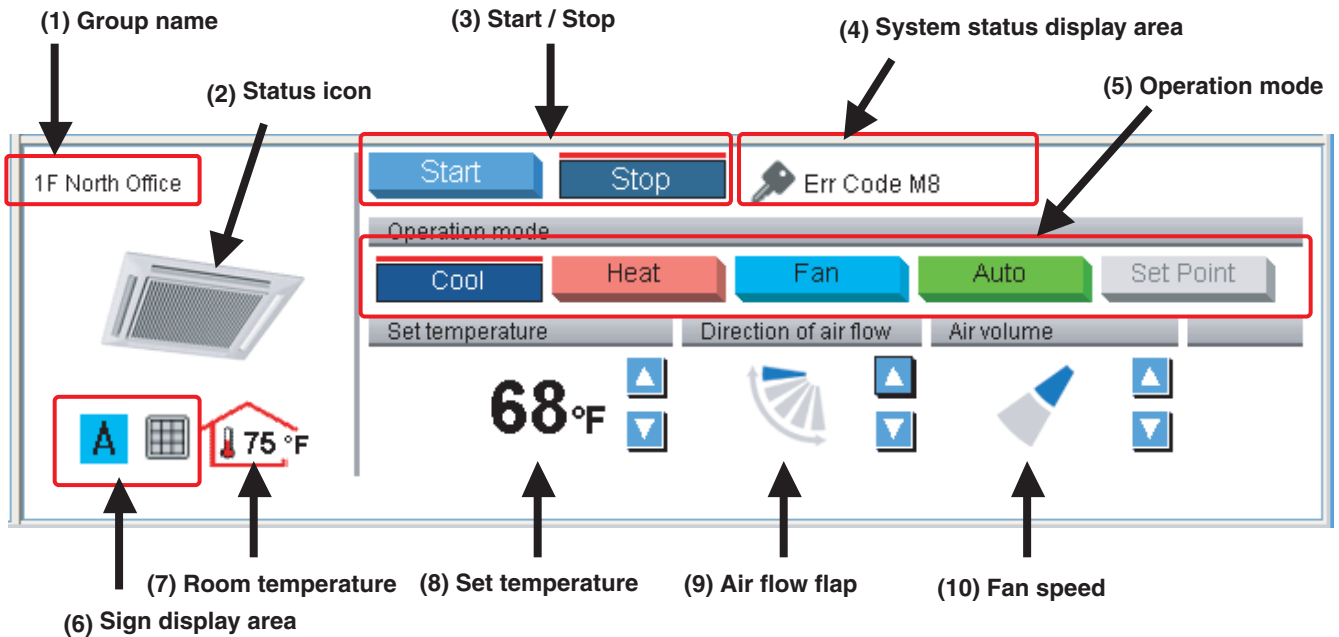

(1) Group name

Displays the exact name of the selected group.

(2) Status icon


Displays the current status. (See page 9)

(3) Start / Stop

Displays the Start/Stop state of the air conditioners. You can start or stop the air conditioners, if required. (See page 17)

(4) System status display area

Displays the system status. One of the following five icons may appear.

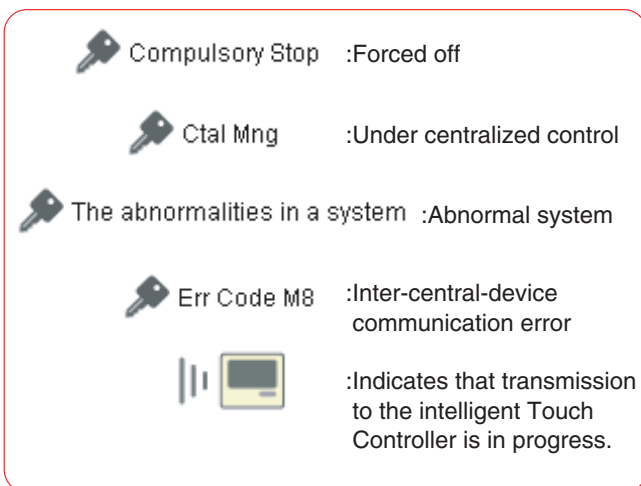


(5) Operation mode

Displays the operation mode of the air conditioners. You can select a desired mode, if required. (See page 18)

(6) Sign display area

Provides information on schedule programs and filter signs.

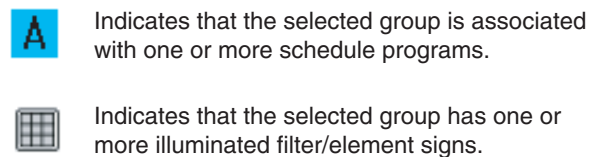

(7) Room temperature

Displays the current room temperature. Since the suction temperature of air conditioners is used, this may not correspond to the actual room temperature.

(8) Set temperature

Displays the temperature setting of air conditioners. You can change this value, if required. (See page 19)


(9) Air flow flap

Displays the direction of air flow of air conditioners. You can change this setting, if required. (See page 19)

(10) Fan speed

Displays the air volume of air conditioners. You can change this setting, if required. (See page 19)

■ HRV Group:

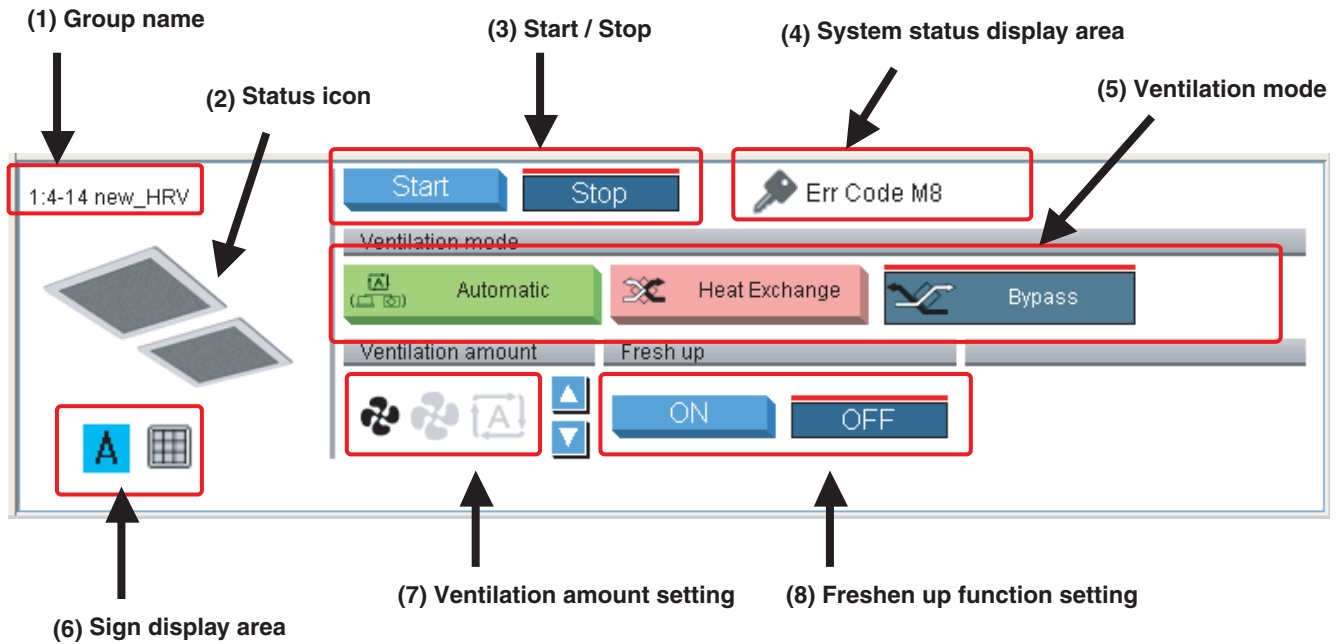

- (1) **Group name**
Displays the exact name of the selected group.
- (2) **Status icon**
Displays the current status. (See page 10)
- (3) **Start / Stop**
Displays the Start/Stop state of the HRVs. You can start or stop the HRVs, if required. (See page 17)
- (4) **System status display area**
Displays the system status. One of the following five icons may appear.


	Compulsory Stop	:Forced off
	Ctal Mng	:Under centralized control
	The abnormalities in a system	:Abnormal system
	Err Code M8	:Inter-central-device communication error
		:Indicates that transmission to the intelligent Touch Controller is in progress.

- (5) **Ventilation mode**
Displays the ventilation mode of HRVs. You can select a desired mode, if required. (See page 18)
 - (6) **Sign display area**
Provides information on schedule programs and filter signs.
- Indicates that the selected group is associated with one or more schedule programs.
 - Indicates that the selected group has one or more illuminated filter/element signs.
- (7) **Ventilation amount setting**
Displays the Ventilation amount setting. You can change the setting, if required. (See page 20)
 - (8) **Freshen up function setting**
Displays Start/Stop state of the Freshen up function. You can turn the function on or off, if required. (See page 20)

CAUTION

- For some HRV models, (5), (7), and/or (8) may not be configured. In this case, unavailable buttons are grayed out.

■ Lighting Device Group:

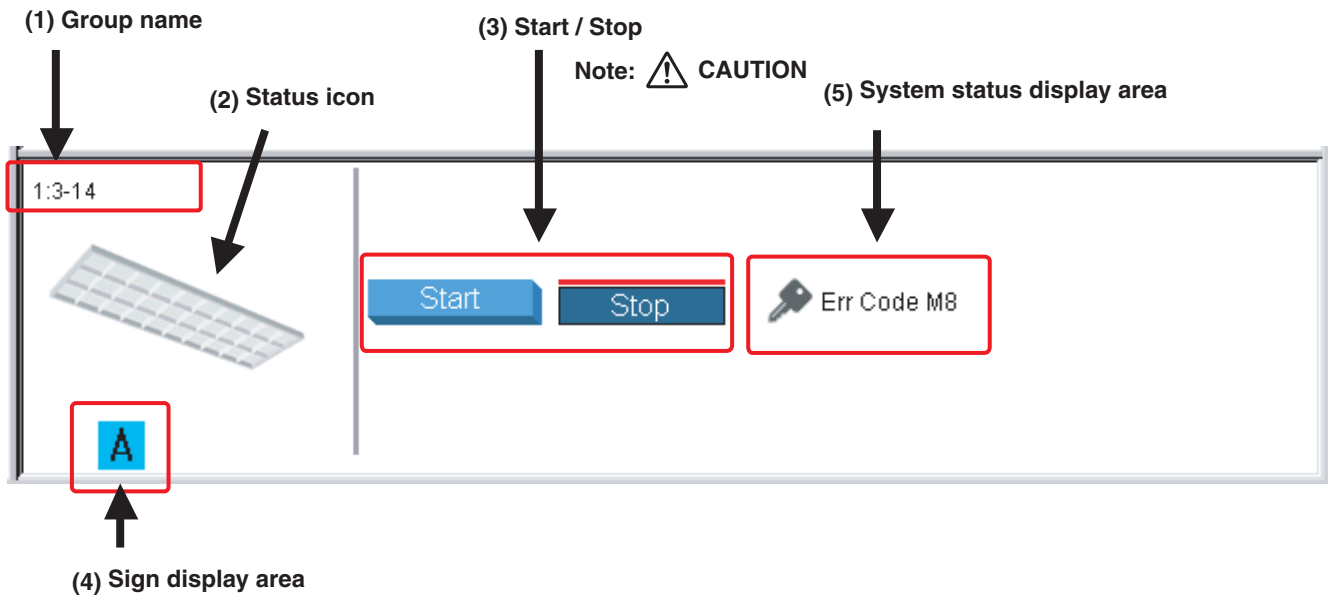

(1) Group name

Displays the exact name of the selected group.

(2) Status icon

Displays the current status. (See page 11)

(3) Start / Stop

Displays the Start/Stop state of devices. You can start or stop devices, if required. (See page 17)

(4) Sign display area

Provides information on schedule programs.



Indicates that the selected group is associated with one or more schedule programs.

(5) System status display area

Displays the system status. One of the following five icons may appear.



Compulsory Stop :Forced off



Ctal Mng :Under centralized control



The abnormalities in a system :Abnormal system



Err Code M8 :Inter-central-device communication error




:Indicates that transmission to the intelligent Touch Controller is in progress.

⚠ CAUTION

- When lighting devices are connected via Dio units:
The Start/Stop buttons (3) can be used.
- When lighting devices are connected via Di units:
The Start/Stop buttons (3) are not displayed.


■ Universal Device Group:

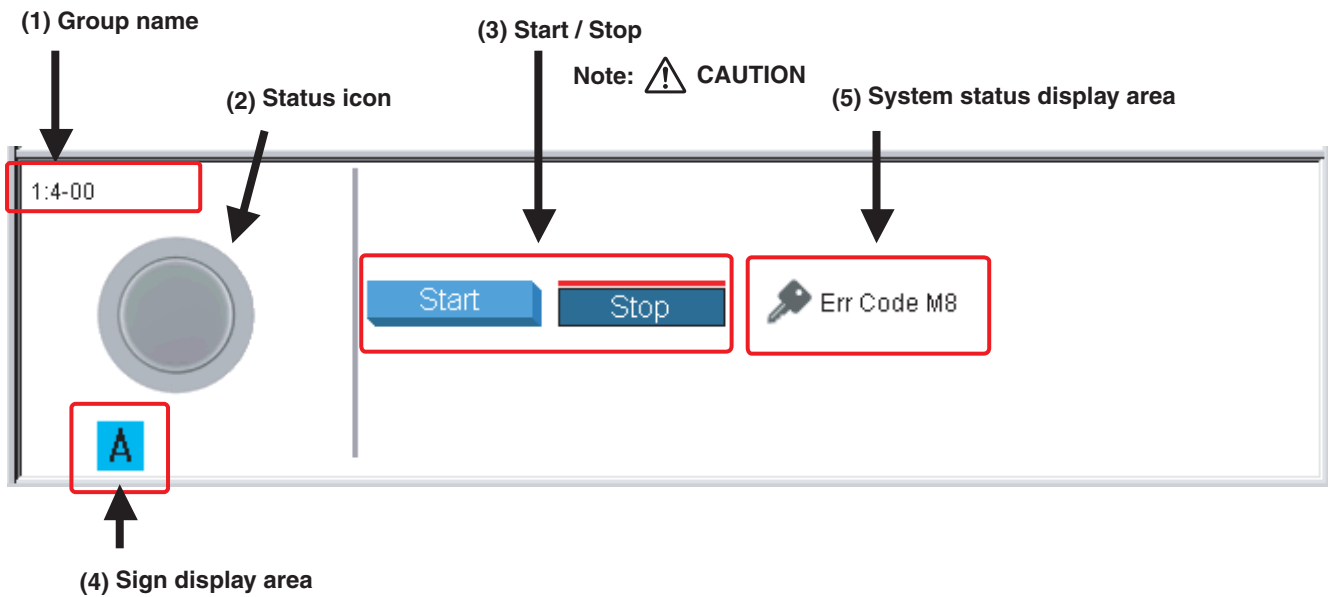

- (1) **Group name**
Displays the exact name of the selected group.
- (2) **Status icon**
Displays the current status. (See page 11)
- (3) **Start / Stop**
Displays the Start/Stop state of devices. You can start or stop devices, if required. (See page 17)
- (4) **Sign display area**
Provides information on schedule programs.

Indicates that the selected group is associated with one or more schedule programs.


- (5) **System status display area**
Displays the system status. One of the following five icons may appear.

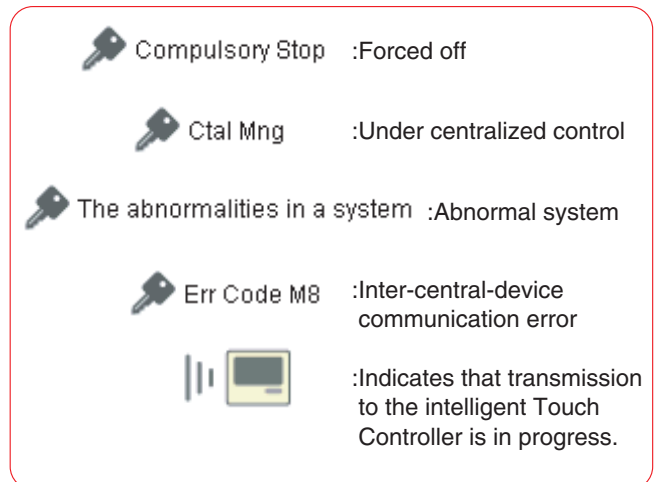


- CAUTION**
- When lighting devices are connected via Dio units:
The Start/Stop buttons (3) can be used.
 - When lighting devices are connected via Di units:
The Start/Stop buttons (3) are not displayed.

■ Zone:

Air conditioner zone:

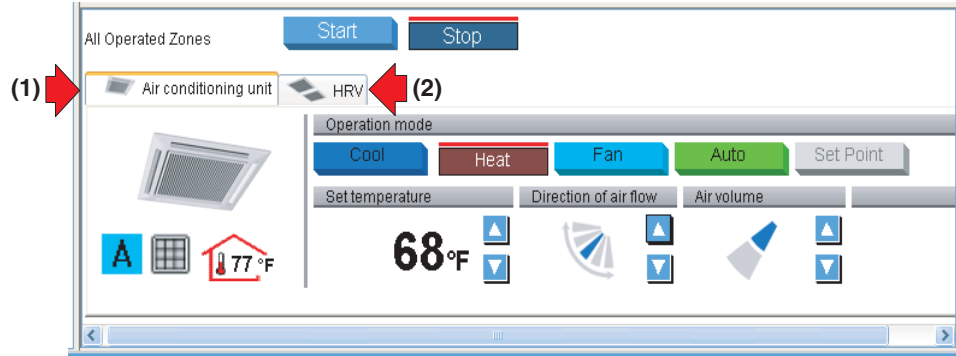

HRV zone:

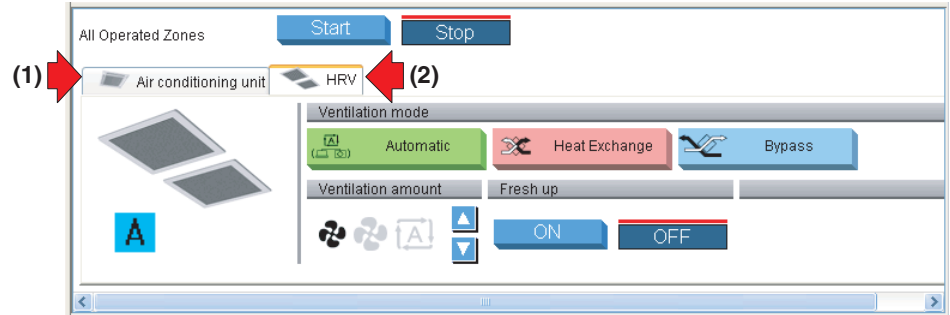


(1) Clicking this tab provides air conditioner zone information.

(2) Clicking this tab provides HRV zone information.



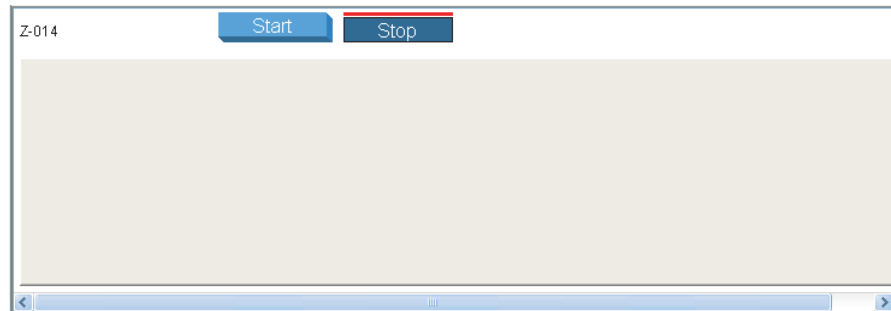

Di/Dio zone:
(see Note)



Note: When connecting via Di units, the “ Start ” and “ Stop ” buttons are grayed out.

Notes on Zone Display:

- If one or more groups in the selected zone are operational, the Start/Stop state for the zone is “On.” If one or more groups in the selected zone are in an error state, the operation state for the zone is “Error.”
- If one or more groups in the selected zone have an illuminated filter/element sign “  ”, the filter/element sign for the zone also illuminates.
- An illuminated Auto Control sign “  ” informs that the selected zone is associated with one or more schedule programs.
- In the air conditioner zone area, information on the room temperature, set temperature, operation mode, air volume, and direction of air flow is provided. In the HRV zone area, information on the Ventilation mode, Ventilation amount, and Freshen up setting is provided. Data of the representative unit is displayed, rather than that of the entire zone.

Representative Unit:

In a zone monitoring process, the following group is selected as the representative unit.

- In the Icon display mode: the group displayed at the upper left corner
- In the List display mode: the top group in the list.

5-7 Starting/Stopping All the Devices in a Specific Group


■ Procedure for starting/stopping all the devices in a specific group

Start or stop all the air conditioners included in a specific group.

This procedure can be used when devices in the selected group are registered as “indoor unit,” “HRV,” or “Dio unit.”

This procedure supports both the Icon display and List display modes. In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

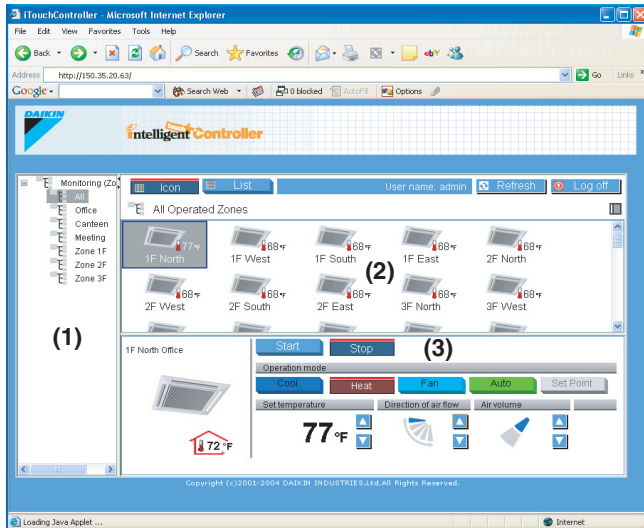


[Procedure]

1. On the Main screen (Screen 1) select the zone which includes a desired group from the zone tree area (1).
2. In the main display area (2) the groups belonging to that zone appear. Select the group in this area.
3. The settings of the selected group appear in the setting area (3). Displayed items vary depending on the category of the group. For more information, see pages 12 to 15.

In the figure (Screen 2), an air conditioner group is selected.

Click the “Start” or “Stop” button.

Screen 2: Group setting area (air conditioners)

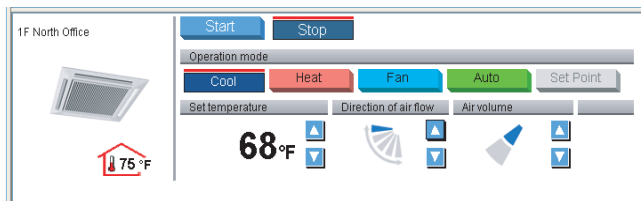

⚠ CAUTION

- In the Basic mode, clicking a button, such as the “Start” and “Cool”, immediately sends your request to air conditioners and you cannot undo your operation. Therefore be sure to click only an appropriate button, especially when your operation target is a zone.


5-8 Starting/Stopping All the Devices in a Specific Zone

■ Procedure for starting/stopping all the devices in a specific zone

Start or stop all the devices included in a specific zone.

This procedure supports both the Icon display and List display modes. In the figure (Screen 1) the devices are displayed in the Icon display mode.


Screen 1: Main screen

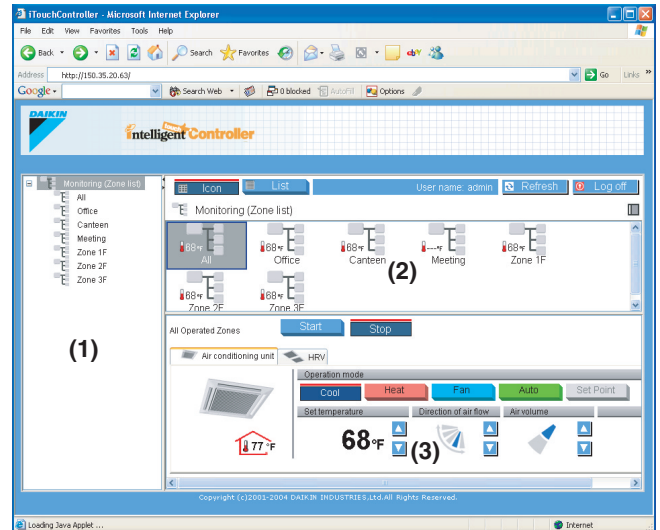

[Procedure]

1. On the Main screen (Screen 1), select the “Monitoring (Zone list)” item from the zone tree area (1).
2. The zone list appears in the main display area (2). Select a desired zone in this area.
3. The setting area (3) changes to the zone setting area (Screen 2).

Screen 2: Zone setting area

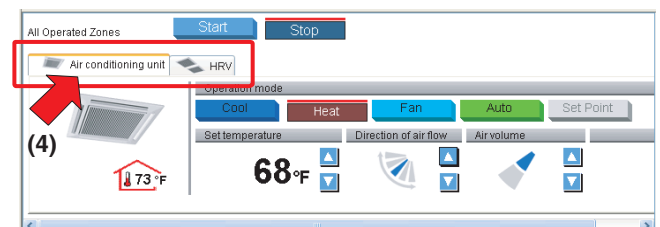

- At this time, the “Air conditioning unit” tab is selected if the selected zone includes air conditioners.
- The “HRV” tab is selected if the selected zone includes HRVs, (When both types of devices are not included, no tab is displayed.)

4. Click the “Start” or “Stop” button.

⚠ CAUTION



- Clicking the selected button does not send your request. If you want to send the Start request, click Stop and then Start.


5-9 Switching the Operation Mode

■ Procedure for switching the operation mode

Switch the operation mode of the air conditioner.

On the Monitoring screen, operation is allowed with either Icon or List as the display type. In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

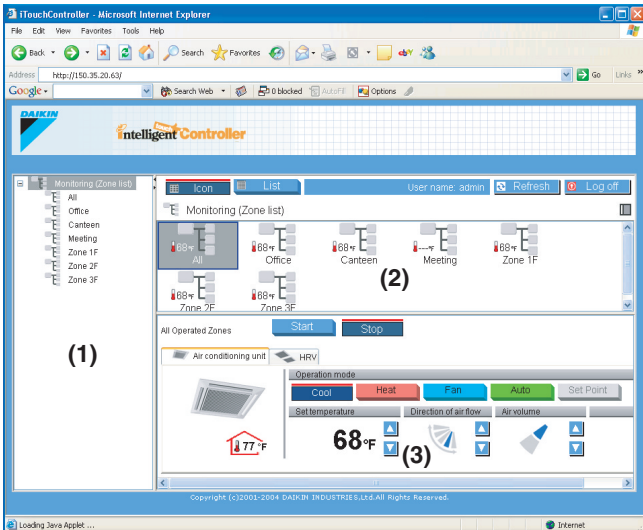

The operation mode can be switched by zone or by group.


[Procedure]

1. To change the setting for all the devices in a zone, select the “Monitoring (Zone list)” item from the zone tree area (1), and select the zone from the main display area (2). To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).
2. Change the operation mode in the setting area (3). The steps required for indoor units are different from ones for HRVs. See the appropriate section.

[Indoor Units]


Click the “Air conditioning unit” tab in the zone setting area (Screen 2) to change the setting of all the devices in a zone.

Screen 2: Zone setting

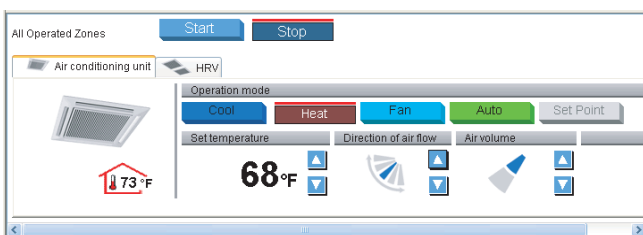



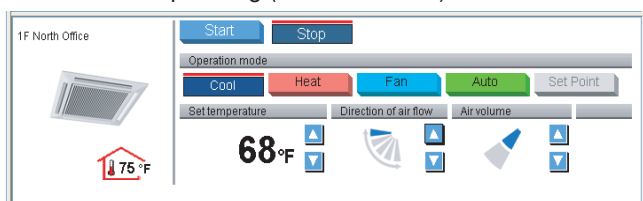


Use the group setting area (Screen 3) to change the setting of all the devices in a group.

Screen 3: Group setting (air conditioners)




Click one of the following buttons according to your requirement.

-  Changes the operation mode to Cool.
-  Changes the operation mode to Heat.
-  Changes the operation mode to Fan.
-  Changes the operation mode to Set Point.
-  Changes the operation mode to Auto.

[HRV Devices]


Click the “HRV” tab in the zone setting area (Screen 4) to change the setting of all the devices in a zone.

Screen 4: Zone setting

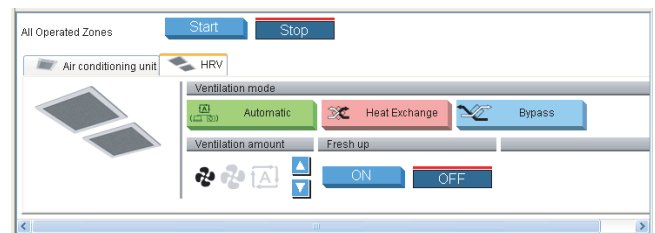




Use the group setting area (Screen 5) to change the setting of all the devices in a group.

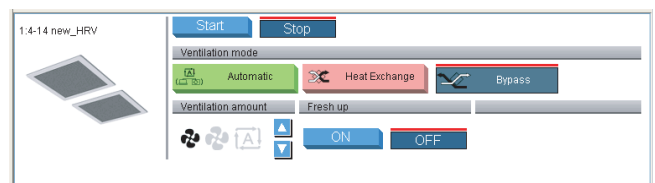Screen 5: Group setting (HRV)



Click one of the following buttons according to your requirement.

-  Changes the operation mode to Automatic ventilation.
-  Changes the operation mode to All heat exchanger ventilation.
-  Changes the operation mode to Normal ventilation.

⚠ CAUTION 1

- Some of the above setting options may not be used depending on the model of the HRVs. In this case, unavailable buttons are grayed out.

⚠ CAUTION 2

- Mode setting buttons that cannot be used for the selected zone or group are grayed out.

Ex.:  


5-10 Changing the Temperature Setting

■ Procedure for changing the temperature setting

Change the temperature setting of air conditioners.

On the Monitoring screen, operation is allowed with either Icon or List as the display type. In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

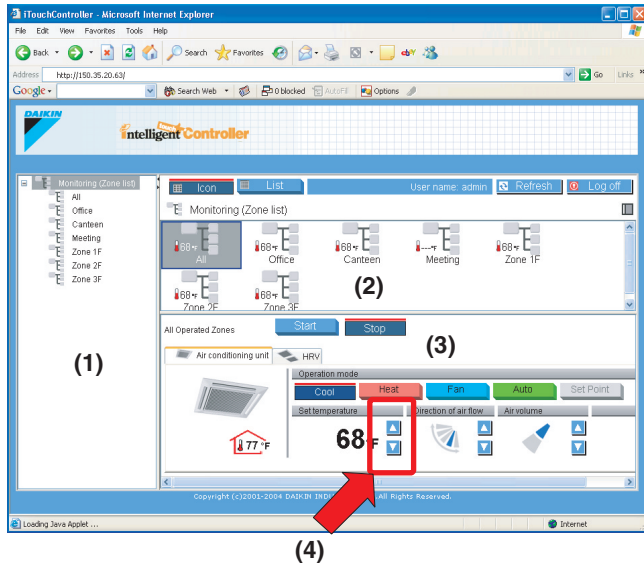

The temperature setting can be switched by zone or by group.

If all of the air conditioners in the group selected are in Fan operation, temperature setting cannot be changed.

[Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).
Select a zone or a group of which the temperature setting is to be changed (2).
To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).
2. Click the “▲” or “▼” button (4) to change the temperature setting.

Ex.: For the Figure 1 zone setting, the temperature settings available are between 68 °F and 86 °F inclusive.

Figure 1:

Zone name	Group name	Range of temperature settings available (see NOTE)
Canteen	1 F North	77°F-86°F
	1 F West	68°F-77°F

When the temperature setting is 86 °F, the actual temperature settings for air conditioners are as shown Figure 2:

Figure 2:

Zone name	Group name	Temperature setting
Canteen	1 F North	86°F
	1 F West	77°F

NOTE

Range of temperature settings available is the range specified in accordance with the following.

- Range of temperature settings inherent to the air conditioner main unit.
- Range of temperature as a result of the restriction by temperature setting limit set on the intelligent Touch Controller console.

For more information, refer to the intelligent Touch Controller Software manual.

5-11 Changing the Direction of Air Flow and Air Volume


■ Procedure for changing the direction of air flow/air volume

Change the fan direction or volume of air conditioners.

On the Monitoring screen, operation is allowed with either Icon or List as the display type. In the figure (Screen 1) the devices are displayed in the Icon display mode.

The fan direction or volume can be changed by zone or by group.

Screen 1: Main screen

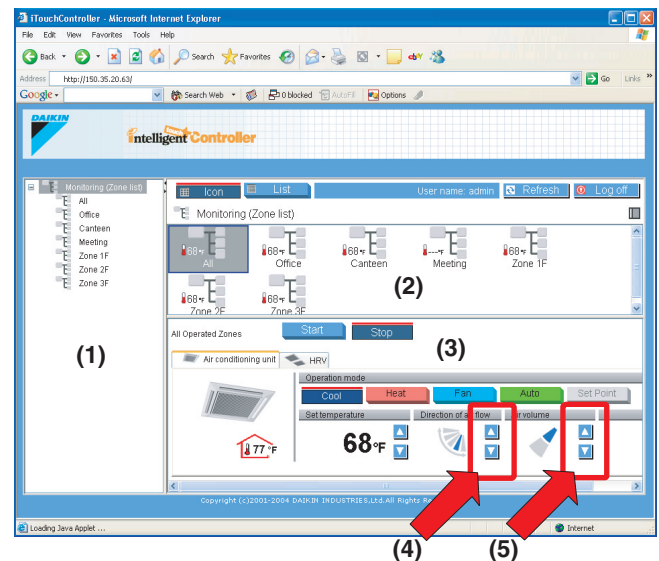

[Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).
Select a zone or a group of which the fan direction or volume is to be reset (2).
To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).
2. Click the “▲” or “▼” button (4) to change the direction of air flow.
Click the “▲” or “▼” button (5) to change the air volume.

CAUTION

- For some air conditioner models, the direction of air flow and/or air volume cannot be changed. In this case these buttons ((4) and (5)) are grayed out.


5-12 Changing the Ventilation Amount and the Freshen Up Function

Procedure for changing the HRV settings

Change the Ventilation amount and the Freshen up settings for HRVs.

On the Monitoring screen, operation is allowed with either Icon or List as the display type. In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

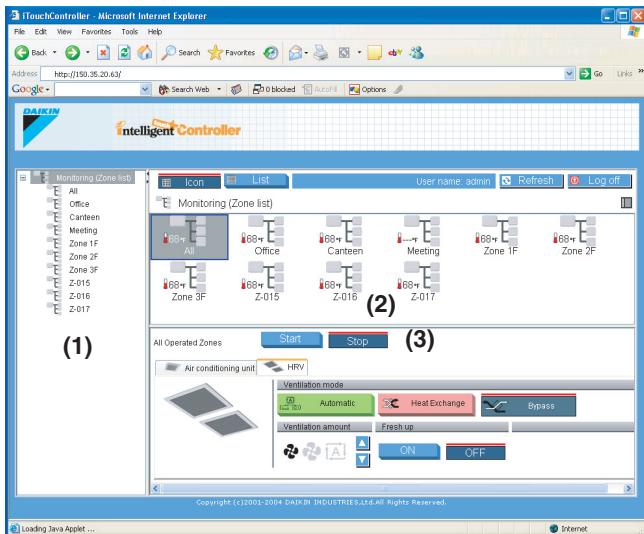


The Ventilation amount and Freshen up settings for all the HRVs in a specific zone or group can be changed all together.

[Procedure]


- On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).
Select a zone or a group of which the fan direction or volume is to be reset (2).
To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).
- Click the “ HRV” tab in the zone setting area (Screen 2) to change the settings for HRVs in a zone.

Screen 2: Zone setting area

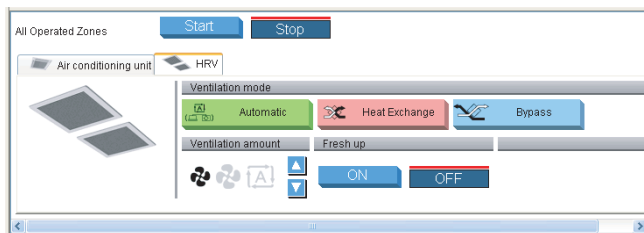

Use the group setting area (Screen 3) to change the settings for HRVs in a group. Use the following buttons on each screen.

Screen 3: Group setting area (HRV)

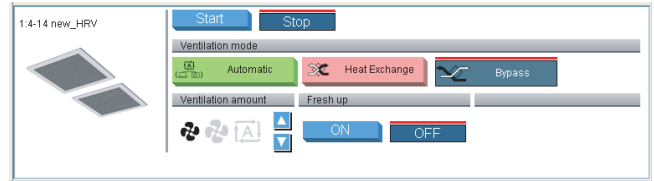

- Turns the Freshen up function On.
- Turns the Freshen up function Off.
- Adjusts the Ventilation amount.
- Indicates the Automatic ventilation amount setting.
- Indicates the Strong ventilation amount setting.
- Indicates the Weak ventilation amount setting.

CAUTION

- For some HRV models, the Freshen up and/or Ventilation amount settings cannot be changed. In this case unavailable buttons are grayed out.

5-13 Notes on the Basic Mode

CAUTION

- In the Basic mode, buttons for bulk operation, such as the “ Start All” and “ Stop All” for the Advanced mode, are not provided. Therefore a General User, who does not have a privilege to operate “All” zones, cannot perform bulk start/stop operations. If a General User want to start or stop all the air conditioners, he or she should click the “ Start” or “ Stop” button manually, for all the zones that he or she has a privilege to operate.

CAUTION

- In the Basic mode, clicking a button, such as “ Start”, “ ↑”, or “ Auto”, immediately sends your request to air conditioners and you cannot undo your operation. Therefore be sure to click only an appropriate button, especially when your target is a zone.

CAUTION

- Clicking the selected button (see the above figure) does not send your request. If you want to send the Start request, click Stop and then Start.


5-14 Monitoring Operations of All the Devices in a Specific Zone or Group

■ Procedures for monitoring zone or group operations

Monitor operations in both the Icon and List display modes.

Click the “ Icon” or “ List” button to switch the display mode.

Screen 1: Main screen (Icon display mode)

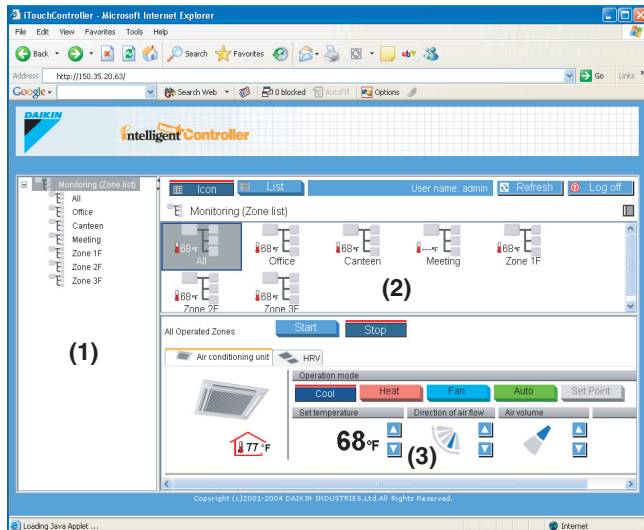

Operations can be monitored by zone or by group. To monitor operations of devices in a zone, select the “Monitoring (Zone list)” item from the zone tree area (1). The operation status appears in the main display area (2).

To monitor operations of devices in a group, select the zone including the group from the zone tree area (1). The operation statuses for all the groups included in the selected zone appear.

[In the Icon Display Mode]

In the main display area (2), information on the Start/Stop state, temperature setting, and error status for the selected zone or group is provided.

*About Zone:

- If one or more groups in the selected zone are operational, the Start/Stop state for the zone is “On.” If one or more groups in the selected zone are in an error state, the operation state for the zone is “Error.”
If one or more groups in the selected zone have an illuminated filter/element sign, the filter/element sign for the zone also illuminates.
- An illuminated Auto Control sign informs that the selected zone is associated with one or more schedule programs.
- In the air conditioner zone area, information on the room temperature, set temperature, operation mode, air volume, and direction of air flow is provided. In the HRV zone area, information on the Ventilation mode, Ventilation amount, and Freshen up function is provided.
Data of the representative unit is displayed, rather than that of the entire zone.


*For more information on the zone representative unit is follow on.

[In the List Display Mode]

In the main display area (2), information on the Start/Stop state, presence/absence of malfunction, Auto Control setting, and filter/element sign, temperature setting, operation mode, and room temperature for that zone or group is provided.

When a zone is selected, the setting area (3) (Screen 1) displays the settings of the representative unit.

Screen 2: Main screen (List display mode)

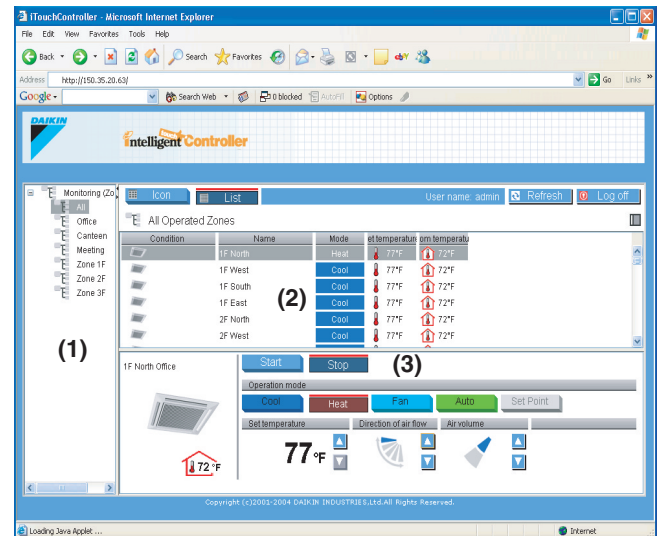

⚠ CAUTION


(Zone representative unit)

In a zone monitoring process, the following group is selected as the representative unit.

- In the Icon display mode: the group displayed at the upper left corner
- In the List display mode: the top group in the list.

(For zones including HRVs)

For zones including both air conditioner and HRV groups:


Clicking the “ HRV” tab displays status data of HRVs.

For the purpose of status indication in the zone setting area, data of the representative unit is displayed, rather than that of the entire zone. The HRV group displayed at a higher position than any other HRV groups is selected as the representative unit.


6. ADVANCED MODE

6-1 Main Screen

This section provides the description of the Main screen for the Advanced mode. When logging into the application in the Advanced mode, you will see the following screen.

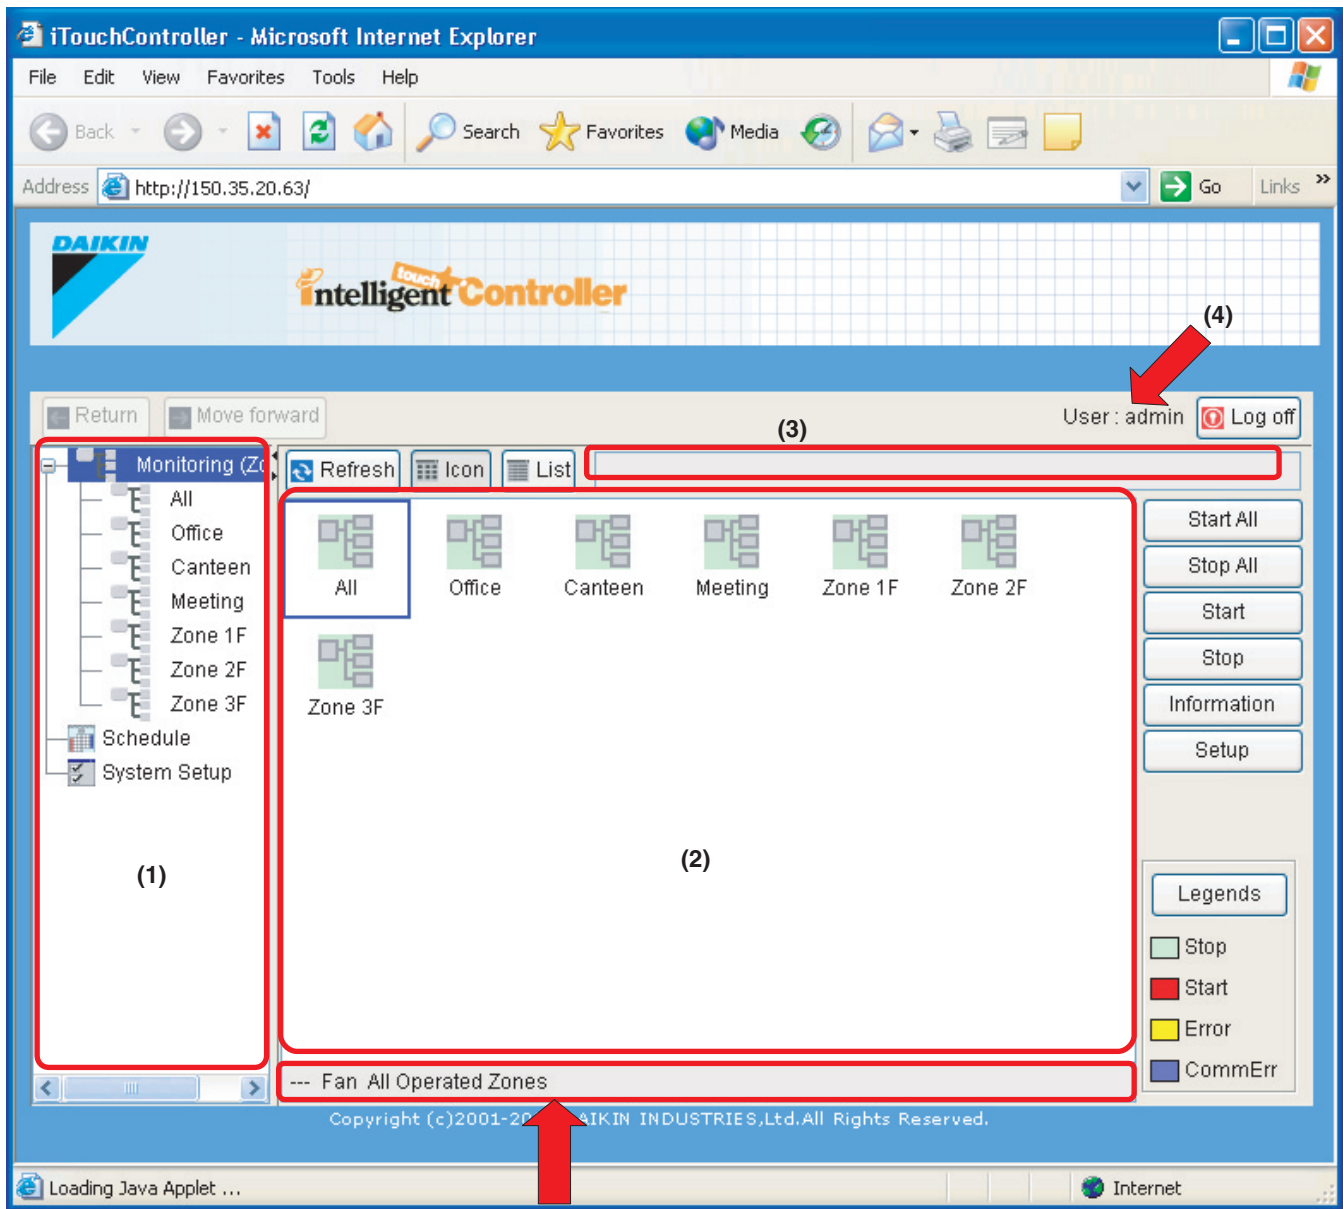

(5)
The above figure shows the Main screen displayed in the Icon display mode.

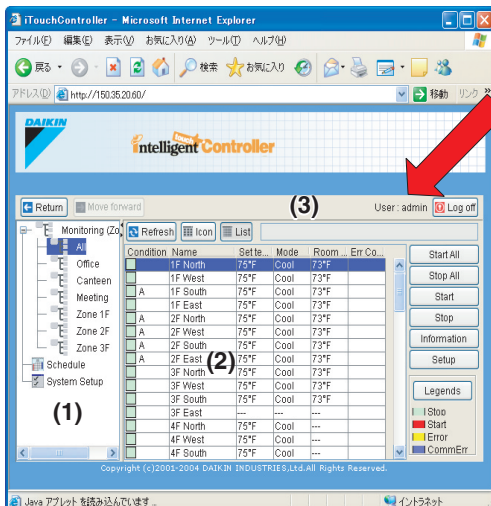
 













(4)
← The figure to the left shows the Main screen displayed in the List display mode. In the List display mode the area (5) is not provided.

■ Display Areas on the Main Screen

- (1) <Zone tree area>
When you select a zone in this area, devices included in the zone appear in the main display area (2).
* **When logging into the web interface as a General User, the “Schedule” item does not appear.**
- (2) <Main display area>
Displays devices in the zone selected in the zone tree area (1). Also setting functions related to the zone is provided. In the Icon display mode, the icons set in the intelligent Touch Controller console are used.
- (3) <System status display area>
Displays the system status such as “in Compulsory Stop mode.”
- (4) <Login name display>
Displays the login name of the user currently logging into the web interface.
- (5) <Status display area in the Icon display mode>
Provides device status information. This bar is displayed only in the Icon display mode.

 ■ Action Buttons

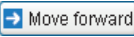- | | |
|---|--|
|  | Changes the main display area to the Icon display mode. |
|  | Changes the main display area to the List display mode. |
|  | Starts all the air conditioners for which the login user has an operation privilege. (See page 24) |
|  | Stops all the air conditioners for which the login user has an operation privilege. (See page 24) |
|  | Starts all the devices included in the selected zone or group. (See page 23 to 24) |
|  | Stops all the devices included in the selected zone or group. (See page 23 to 24) |
|  | Launches a dialog box displaying detailed information on the selected zone or group. (See page 31) |
|  | Launches a dialog box where you can set up the selected zone or group. (See page 24) |
|  | Launches a dialog box describing detailed information on items displayed in the Icon/List display modes. (See page 30) |
|  | Returns to the screen specified by the previous zone tree setting. You can return to the screen up to 20 generations (maximum). |
|  | Undoes your return operation. |
|  | Updates zone or group status information in the main display area with the most recent data of the intelligent Touch Controller. |
|  | Allows users to log off and returns to the login authentication screen. |

6-2 Starting/Stopping All the Devices in a Specific Group


■ Procedure for starting/stopping all the devices in a specific group

Start or stop all the air conditioners included in a specific group.

[Procedure]

1. On the Main screen (Screen 1) select the zone which includes a desired group from the zone tree area (1).

Screen 1: Main screen

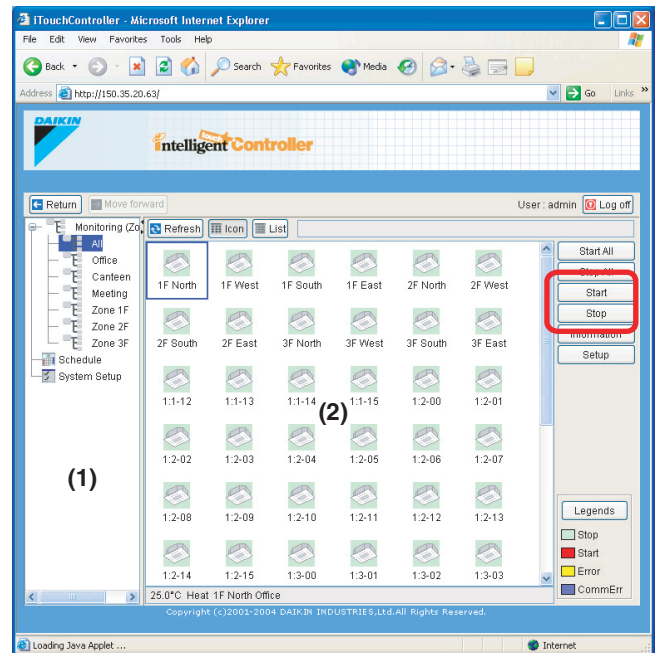

2. Groups assigned to the selected zone appear in the main display area (2). Select the group in this area.

3. Click the “ Start ” or “ Stop ” button.

6-3 Starting/Stopping All the Devices in a Specific Zone


■ Procedure for starting/stopping all the devices in a specific zone

Start or stop all the devices in air conditioner groups assigned to a zone all together.

[Procedure]

1. Select the “Monitoring (Zone list)” item from the zone tree area (1) in the Main screen (Screen 1).

Screen 1: Main screen

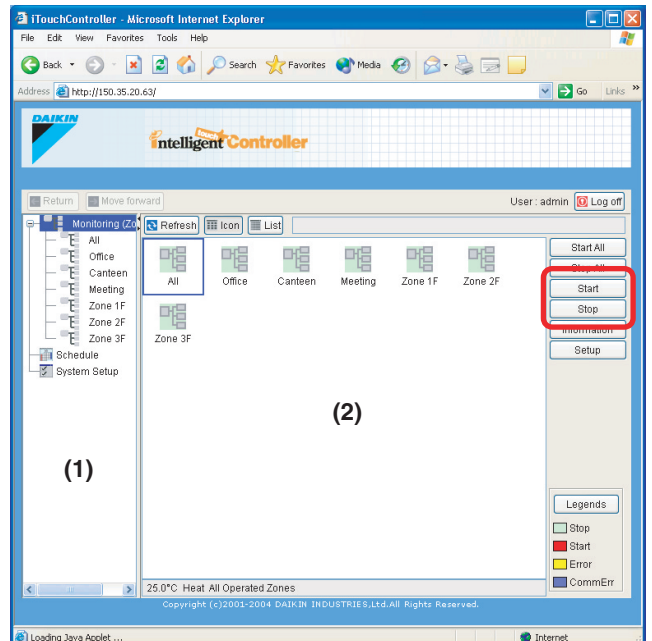

2. A zone list appears in the main display area (2). Select a desired zone in this area.


3. Click the “ ” or “ ” button.

6-4 Starting/Stopping Air Conditioners All Together

■ Procedure for starting/stopping air conditioners all together

Start or stop all of the registered air conditioners all together. This procedure supports both the Icon and List display modes. In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

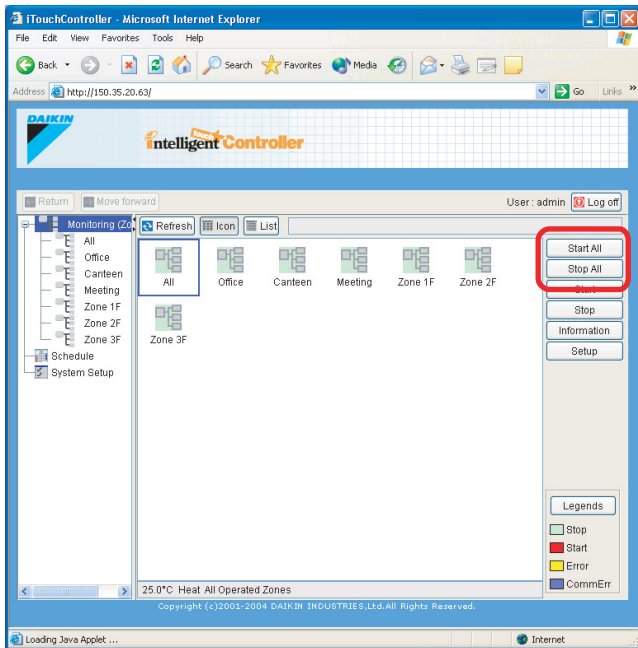

[Procedure]

1. Click the “ ” or “ ” button.

⚠ CAUTION

- In the bulk start/stop operation, only the devices for which the login user has an operation privilege are started or stopped. However if the login user is the Administrator, all the devices are started or stopped. See page 5 for more information on permissions of the web interface.

6-5 Switching the Operation Mode


■ Procedure for switching the operation mode

Switch the operation mode of the air conditioner.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.

In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

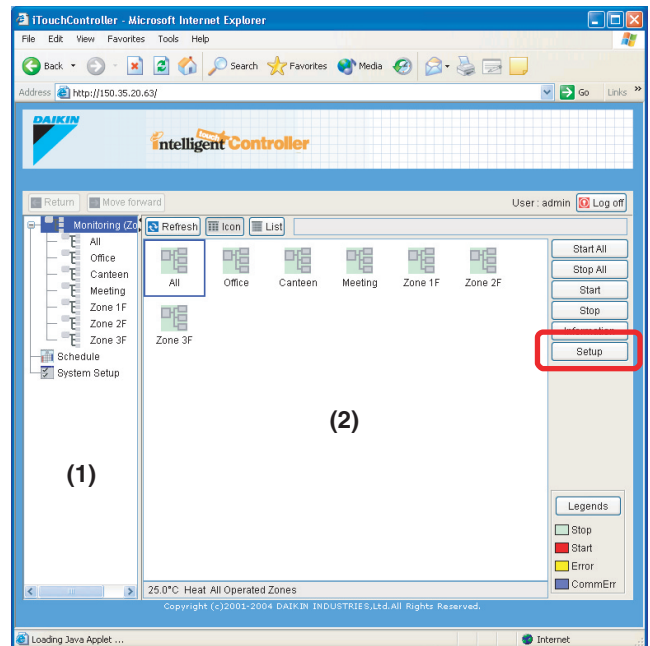


The operation mode can be switched by zone or by group.

[Procedure]

- To change the setting for all the devices in a zone, select the “Monitoring (Zone list)” item from the zone tree area (1), and select the zone from the main display area (2). To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).

2. Press the . Screen 2 Operation appears.

Screen 2: Setup screen

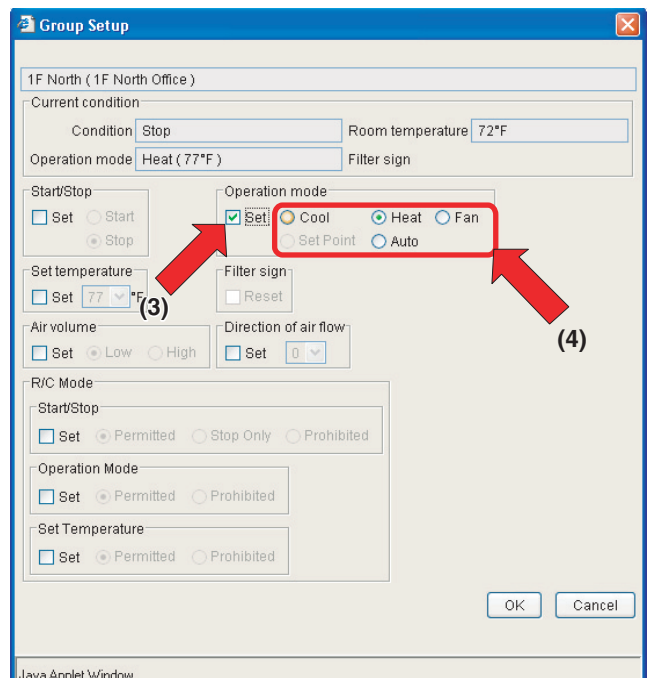

- Select the Set checkbox in the Operation mode frame (3). Check one of the radio buttons (4) to select a desired operation mode.

On the menu, operation modes available for air conditioners in the zone are displayed if the switching is to be made by zone. See the example on the next page.

4. Press the .

To cancel the setting, press the "".

Ex.: For the zone of the figure 1 you can set the operation mode to "Fan", "Cool", "Heat", "Set Point", or "Auto". When one or more air conditioners in the zone do not have Cool/Heat option, you can select only Fan or "Set Point" mode.

Figure 1



6-6 Changing the Temperature Setting


■ Procedure for changing the temperature setting

Change the temperature setting of air conditioners.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.

In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

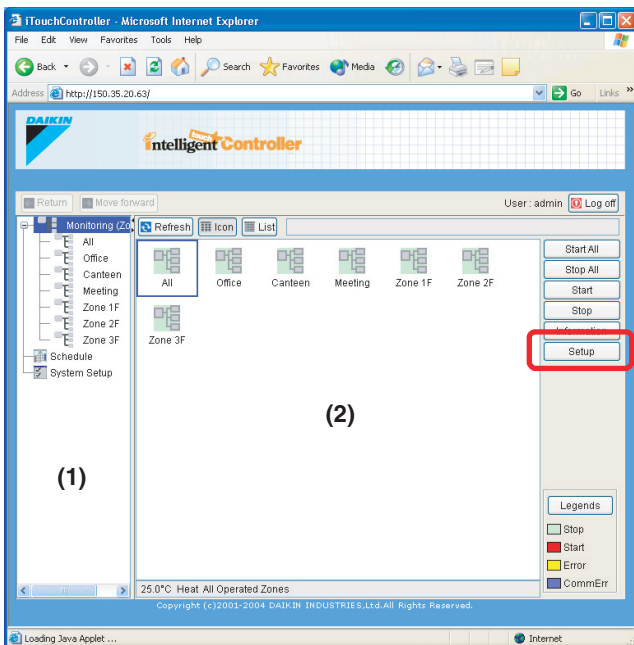

The temperature setting can be switched by zone or by group.


When all the air conditioners in the selected group or zone are in the Fan mode, the temperature setting cannot be changed.

[Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).
Select a zone or a group of which the temperature setting is to be changed (2).
To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).

2. Press the . Screen 2 Operation appears.

Screen 2: Setup screen

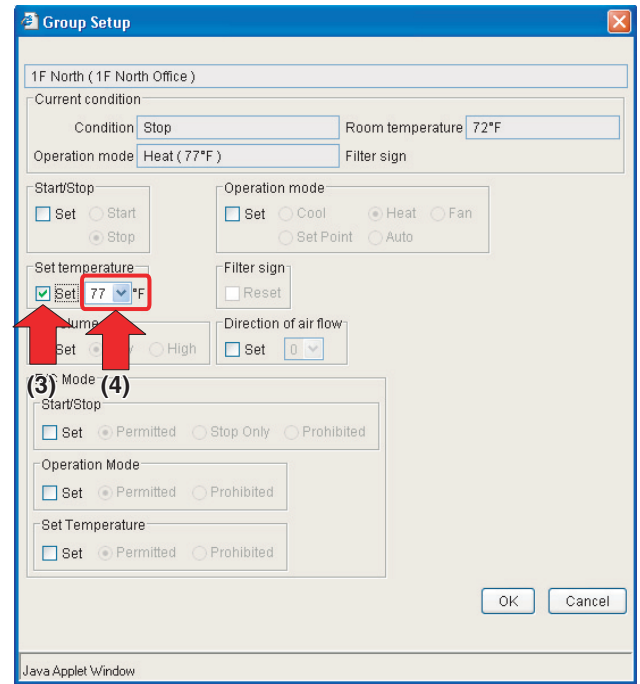

3. Select the Set checkbox (3) in the Set temperature frame, and set the integral and decimal parts using the pull-down menus (4).

In a zone setting, the pull-down menus are pre-populated with allowable temperature values for the air conditioners in the zone. See the following example.

4. Press the .

To cancel the setting, press the "".

Ex.: For the zone setting in the figure 1, the temperature settings available are between 68°F and 86°F inclusive.

Figure 1

Zone name	Group name	Range of temperature settings available (see NOTE)
Canteen	1F North	77°F - 86°F
	1F West	68°F - 77°F

When the temperature setting is 86°F, the actual temperature settings for air conditioners are as shown in the figure 2.

Figure 2

Zone name	Group name	Range of temperature settings available (see NOTE)
Canteen	1F North	86°F
	1F West	77°F

NOTE

Range of temperature settings available is the range specified in accordance with the following.

- Range of temperature settings inherent to the air conditioner main unit.
- Range of temperature as a result of the restriction by temperature setting limit set on the intelligent Touch Controller console.

For more information refer to the intelligent Touch Controller manual.


6-7 Resetting Filter/Element Signs

■ Procedures for resetting filter signs

When one or more air conditioner provide filter/element signs, clean the specified filters or elements, and then reset the filter/element sign.

This procedure supports both the Icon and List display modes. In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

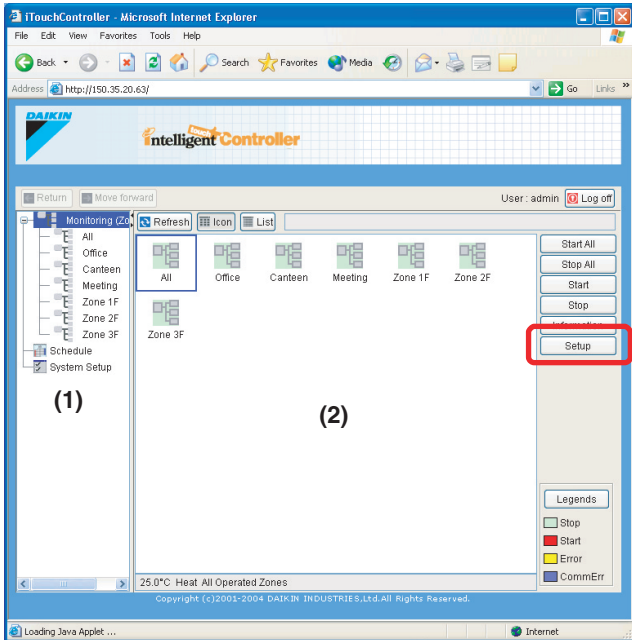


You can reset all the signs displayed on air conditioners in a group or zone all together.

[Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).
Select a zone or a group of which the temperature setting is to be changed (2).
To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).

2. Press the . Screen 2 Operation appears.

Screen 2: Setup screen

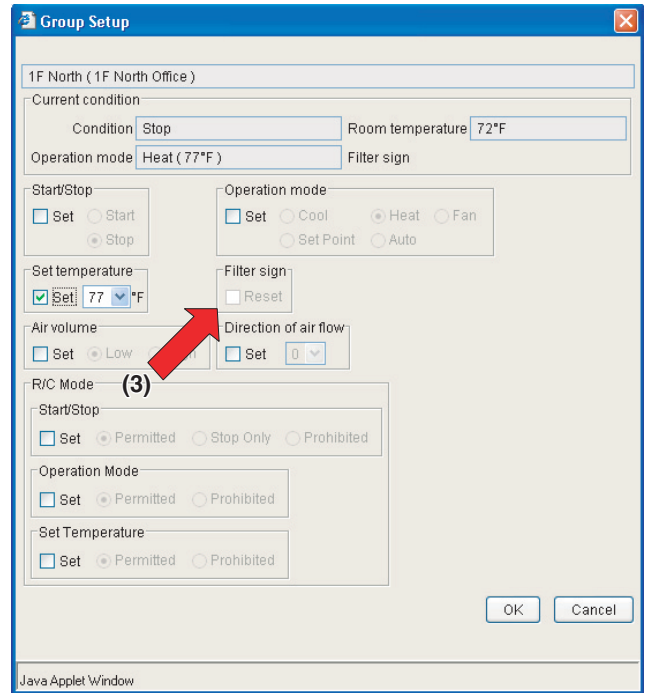

3. Select the Reset checkbox in the Filter sign frame.

4. Press the .

To cancel the setting, press the “ ”.

⚠ CAUTION

- In a zone setting, if one or more devices in the zone do not provide the filter/element sign, the Reset checkbox is grayed out.

6-8 Changing the Direction of Air Flow and Air Volume


■ Procedure for changing the direction of air flow/air volume

Change the fan direction or volume of air conditioners.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.

In the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

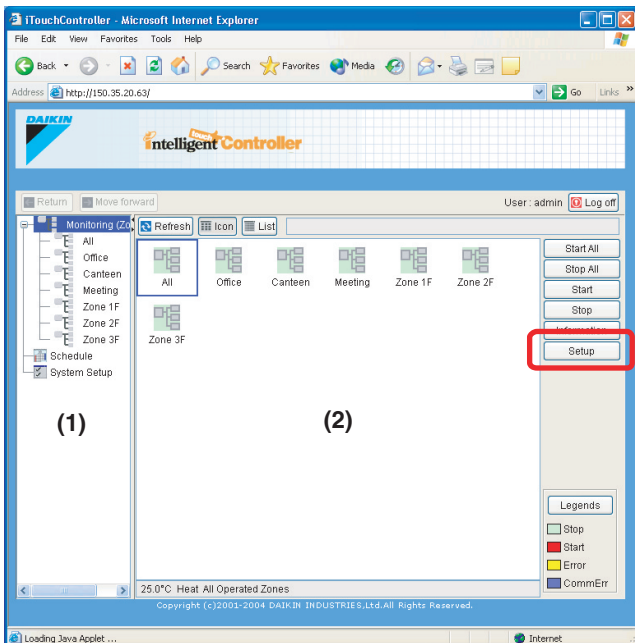

The fan direction or volume can be changed by zone or by group.

[Procedure]


1. On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).

Select a zone or a group of which the fan direction or volume is to be reset (2).

To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).

2. Press the . Screen 2 Operation appears.

Screen 2: Setup screen

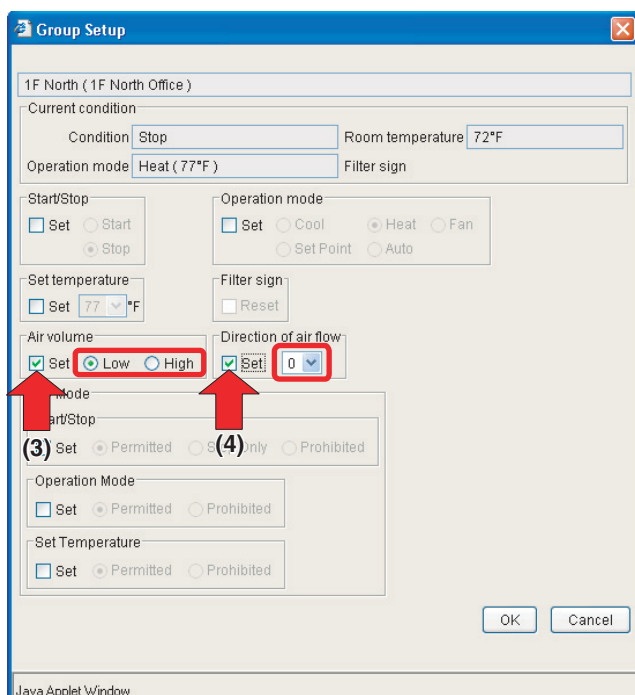


3. When setting the air volume, select the Set checkbox in the Air volume frame (3), and check one of the radio buttons, Low or High, to select desired air volume.

When setting the direction of air flow, select the Set checkbox in the Direction of air flow frame (4) and select your desired value using the pull-down menu. Any integer value from 0 to 7 can be selected.

4. Press the .

To cancel the setting, press the .

*Guideline for determining the direction of air flow and air volume

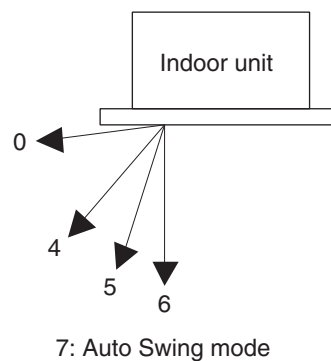

Selecting a higher number results in a more vertical direction. The value "7" indicates the Auto Swing mode. However some models may not support this setting. Check the direction of air flow displayed on the local remote controller screen after setting.

6-9 Changing the HRV settings


■ Procedure for changing the HRV settings

Change HRV settings.

On the Monitoring screen, operation is allowed with either Icon or List as the display type.

In the figure (Screen 1) the devices are displayed in the Icon display mode.


Screen 1: Main screen

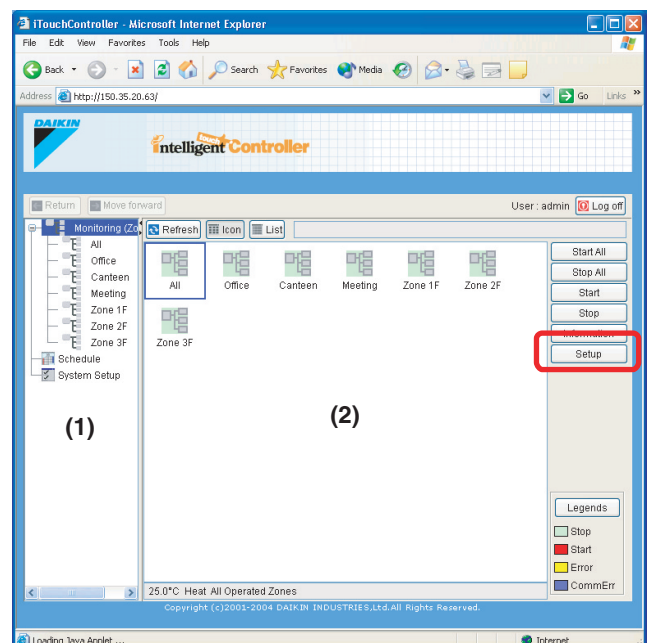


You can change settings of all the HRVs included in a zone or group all together.

[Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).
Select a zone or a group of which the fan direction or volume is to be reset (2).
To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).

2. Press the . Screen 2 Operation appears.


Screen 2: Zone Setup screen

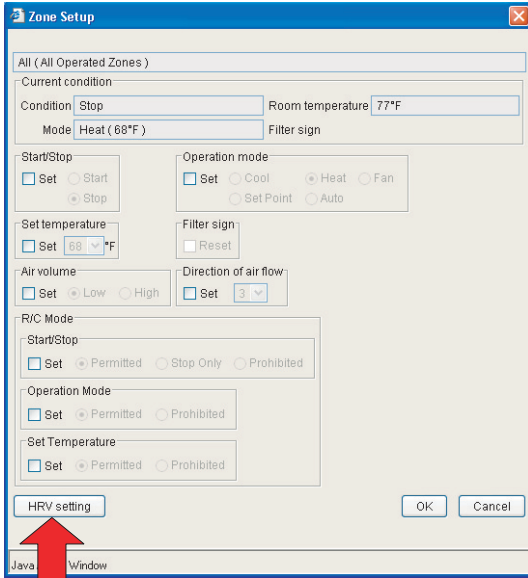


(3)

[When Selecting a Zone Including HRVs]

When selecting a zone including HRVs, the Zone Setup screen (Screen 2) appears.

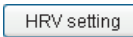
- (3) Click the  button to display the HRV setting screen (Screen 3). You can set up the following two items.

Screen 3: HRV setting screen

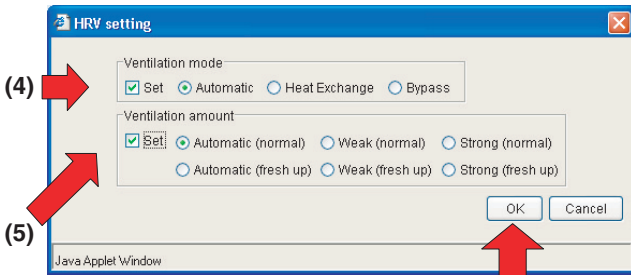

(6)

 
- (4) **Ventilation mode**
In this frame the Ventilation mode can be changed. Select the Set checkbox, and check a desired radio button.
- (5) **Ventilation amount**
In this frame the Ventilation amount setting can be changed. Select the Set checkbox, and check a desired radio button.

Upon completion, click the  button (6) and return to the Main screen.


[When Selecting an HRV Group]

When selecting an HRV group, the Group setup screen (Screen 4) appears. This dialog box offers the following items.

Screen 4: Group setup screen

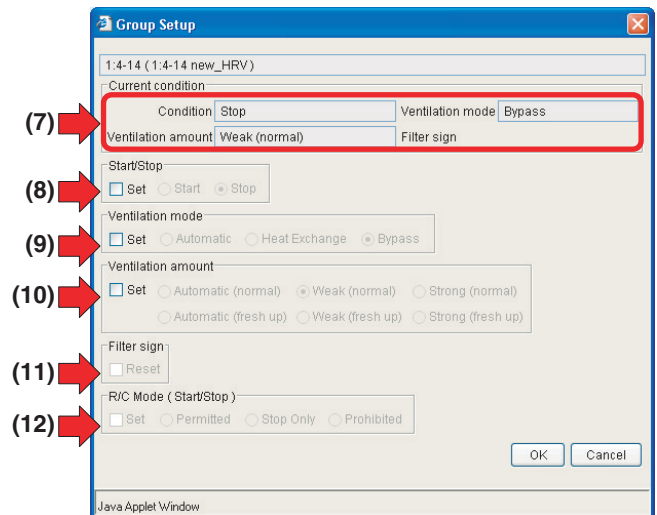

- (7) **Current Condition**
Displays the current HRV status. The following four data items are provided.
 - Start/Stop state
 - Ventilation mode
 - Ventilation amount
 - Filter sign
- (8) **Start/Stop**
In this frame you can start or stop the devices. Select the Set checkbox and check a desired radio button.
- (9) **Ventilation mode**
In this frame you can select a Ventilation mode. Select the Set checkbox and check a desired radio button.
- (10) **Ventilation amount**
In this frame you can select a Ventilation amount setting. Select the Set checkbox and check a desired radio button.
- (11) **Filter sign**
When the Reset indicator is not grayed out, one or more filter signs illuminate. In the Screen 2 the indicator tells that no sign illuminates.
To reset the filter signs, select the Reset checkbox.
- (12) **R/C Mode (Start/Stop)**
In this frame you can permit or prohibit the start/stop operation through remote controllers. Select the Set checkbox and check a desired radio button.

 Upon completion, click the  button on each screen and return to the Main screen.

CAUTION


- Some HRV models may not support the Freshen up and/or Ventilation amount setting options. In this case unavailable buttons are grayed out.

6-10 Permitting/Prohibiting Remote Controller Operations

■ Procedure for permitting/prohibiting remote controller operations

Permit or prohibit operations through remote controllers.
On the Monitoring screen, operation is allowed with either Icon or List as the display type.
See next page in the figure (Screen 1) the devices are displayed in the Icon display mode.

Screen 1: Main screen

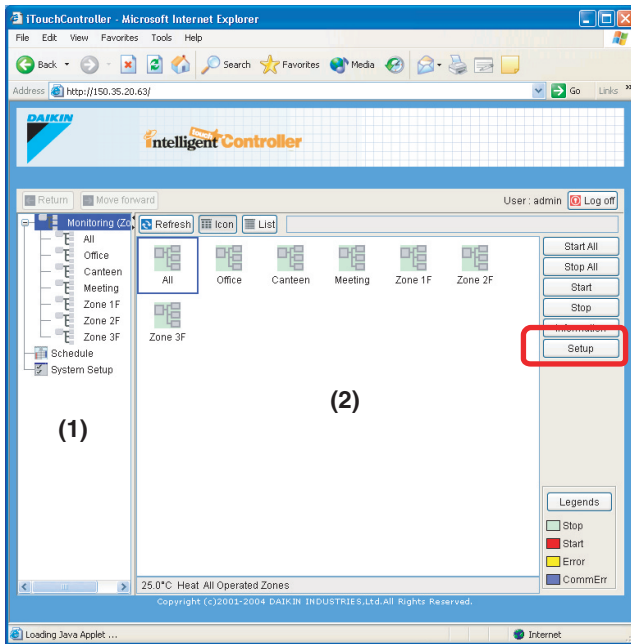


You can change the settings of all the devices included in a group or zone.

[Procedure]

1. On Screen 1 Monitoring, select a zone or a group from the pull-down menu (1).
Select a zone from a main display area to be changed.
To change the setting for all the devices in a group, select the zone including the group from the zone tree area (1), and select the group from the main display area (2).

2. Press the . Screen 2 Operation appears.

Screen 2: Setup screen

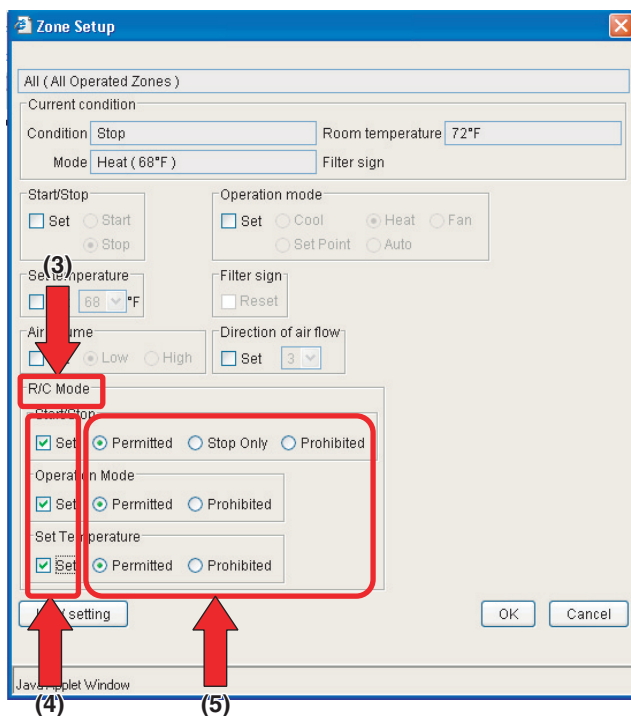

For an HRV group setting, see the previous page.

3. The area under the R/C Mode heading (3) includes three frames to permit/prohibit operations through remote controllers. Select the Set checkbox in each frame to set.
 - Start/Stop
"Permitted"
"Stop Only"
"Prohibited"
 - Operation Mode
"Permitted" or "Prohibited"
 - Set Temperature
"Permitted" or "Prohibited"

4. Upon completion, click the button.

To cancel your settings, click the button.

6-11 Monitoring Operations of All the Devices in a Specific Zone or Group


■ Procedures for monitoring zone or group operations

Monitor operations in both the Icon and List display modes.

Select a display mode using the or button.

Operations can be monitored by zone or by group.

Screen 1: Main screen (Icon display mode)

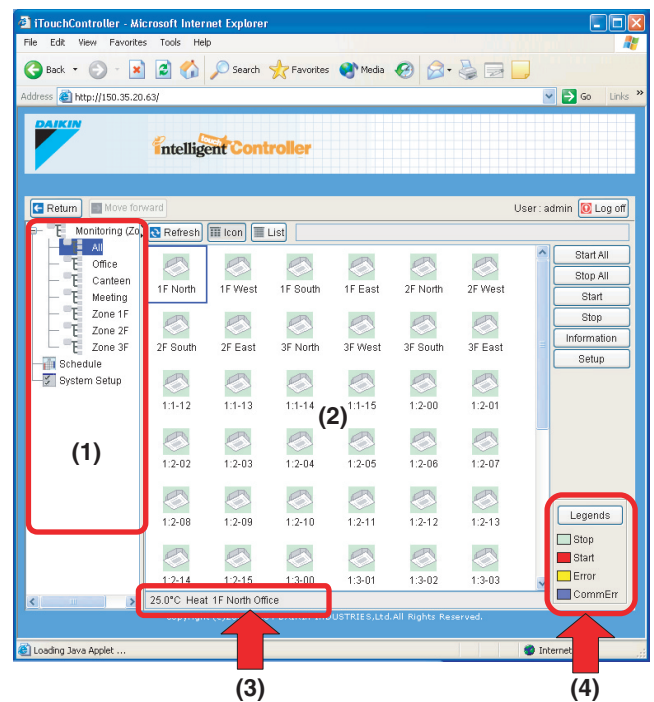

To monitor operations of devices in a zone, select the "Monitoring (Zone list)" item from the zone tree area (1). The operation status appears in the main display area (2).

To monitor operations of devices in a group, select the zone including the group from the zone tree area (1). The operation statuses for all the groups included in the selected zone appear.

[Displayed Items in the Icon Display Mode]

You can monitor the Start/Stop state and presence or absence of error, Auto Control setting, and filter/element sign for each group or zone in the main display area (2).

In the Icon display mode, the bottom bar ((3) in the Screen 1) displays information on the selected zone or group. The following information is offered.

(When all the devices operate normally)

- Temperature setting
For a zone, the operation mode of the representative unit is shown.
- Operation mode
For a zone, the temperature setting of the representative unit is shown.
- Group name
For a zone, the zone name is shown.

(When any of the devices failed)

- Error code
For a zone, the error code that explains the status of the failed device is shown.
- Group name
For a zone, the zone name is shown.

*For more information on the representative unit, see the figure to the right.


[Displayed Items in the List Display Mode]


In the main display area (2) the following zone or group information is displayed.

- Start/Stop state
For a zone, see the following section.
- Presence/absence of error
For a zone, see the following section.
- Presence/absence of Auto Control setting
For a zone, see the following section.
- Presence/absence of filter/element signs
For a zone, see the following section.
- Temperature setting
For a zone, the temperature setting of the representative unit is shown.
- Operation mode
For a zone, the operation mode of the representative unit is shown.
- Room temperature
For a zone, the room temperature of the representative unit is shown.
- Error code
For a zone, the error code that explains the status of the failed device is shown.


The frames ((4) in the Screen 1 and 2) at the lower right corner show legends.


Screen 2: Main screen (Icon display mode)

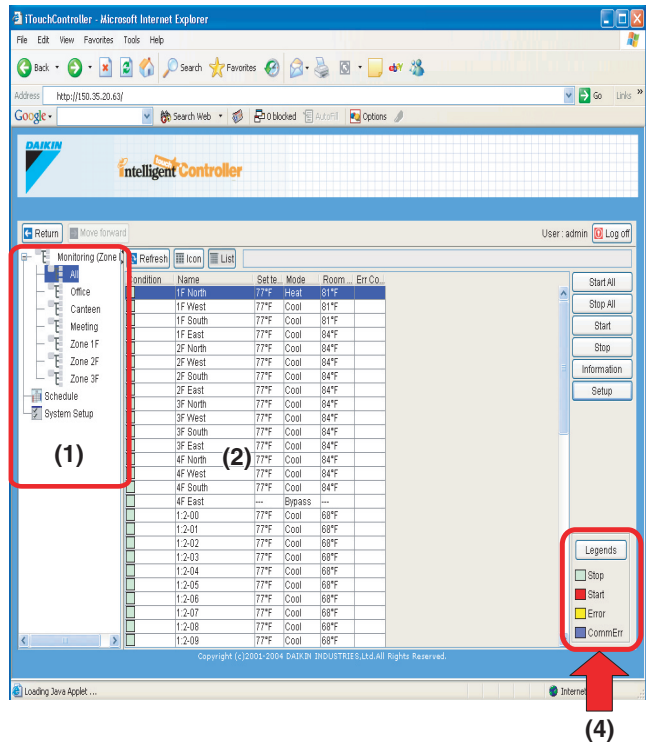

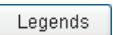To see the detailed legend information shown in the Screen 3, click the “  ” button.

 Screen 3: Legends screen

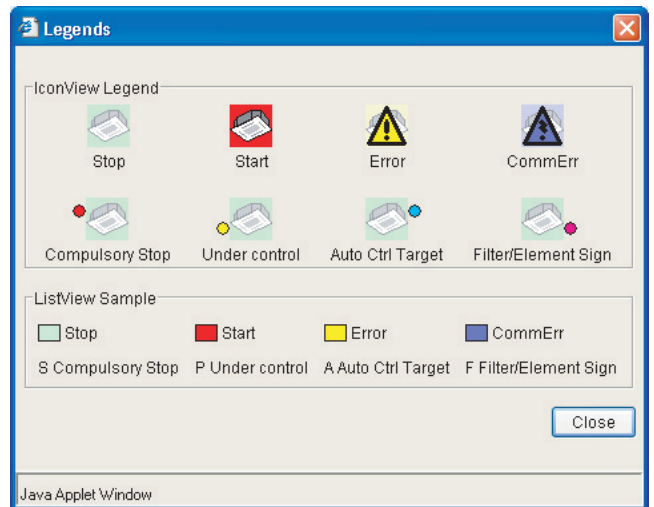


To return to the Main screen, click the “  ” button.


CAUTION 1


- Representative unit:
- In a zone monitoring process, the following group is selected as the representative unit.
- In the Icon display mode: the group displayed at the upper left corner
 - In the List display mode: the top group in the list.

[Notes on Zone Display]

- If one or more groups in the selected zone are operational, the Start/Stop state for the zone is “On.” If one or more groups in the selected zone are in an error state, the operation state for the zone is “Error.”

If one or more groups in the selected zone have an illuminated filter/element sign, the filter/element sign “” for the zone also illuminates.

- An illuminated Auto Control sign “” informs that the selected zone is associated with one or more schedule programs.
- In the air conditioner zone area, information on the room temperature, set temperature, operation mode, air volume, and direction of air flow is provided. In the HRV zone area, information on the Ventilation mode, Ventilation amount, and Freshen up setting is provided.


Data of the representative unit ( CAUTION 1) is displayed, rather than that of the entire zone.

6-12 Monitoring Detailed Information

■ Procedures for monitoring detailed information

Detailed operation status can be monitored by zone or by group.

Screen 1: Main screen

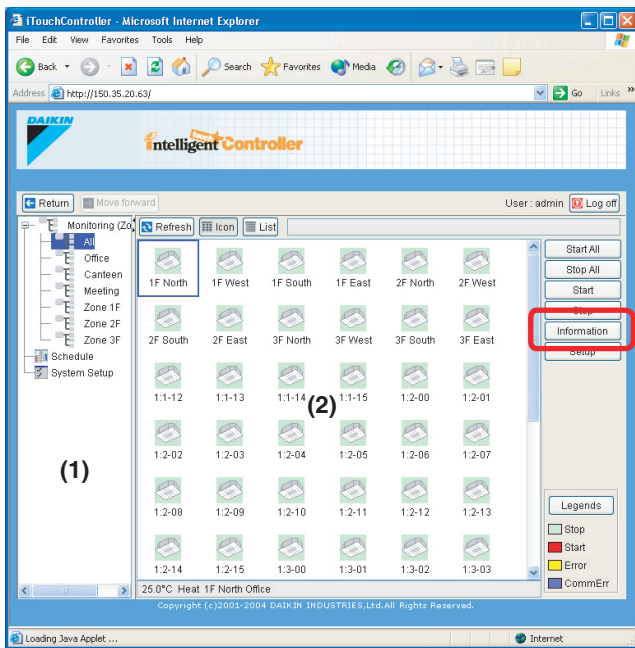


[Procedure]

1. To view information on a zone, select the “Monitoring (Zone list)” item from the zone tree area (1). To view information on a group, select the zone including the group from the zone tree area. Then select the target zone or group in the main display area (2).

2. Click the “ ” button. The Information screen (Screen 2) appears and provides the following data items.

Screen 2: Information screen

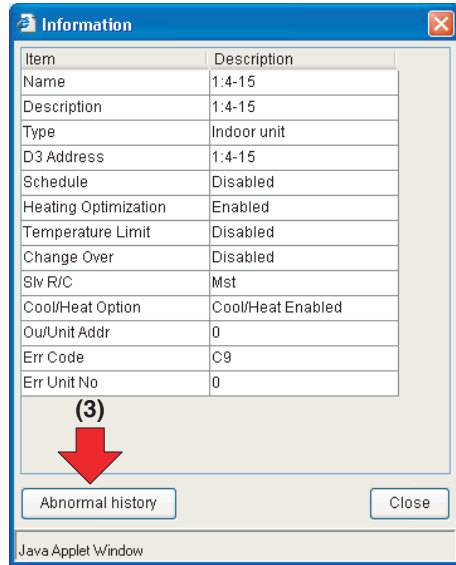

[For an air conditioner group]

- 1) Name : Group name
- 2) Description : Group description
- 3) Type : Air conditioner or device
- 4) D3 Address : Address between 1-00 and 4-15
- 5) Schedule : Enable/Disabled
- 6) Heating Optimization : Enabled/Disabled
- 7) Temperature Limit : Enable/Disable
- 8) Change Over : Enable/Disable
- 9) Slv R/C : Mst/Slv
- 10) Cool/Heat Option : With/Without
- 11) Ou/Unit Addr : Address of outdoor unit
- 12) Err Code : Error code
- 13) Err Unit No : Error unit number

NOTE

Neither Err Code nor Err Unit No are displayed under a normal operation.

[For a zone]


- 14) Name : Zone name
- 15) Description : Zone description
- 16) Start1by1 : Enabled/Disabled
- 17) Interval : Interval when Enabled is set for the above
- 18) Nb of Regist Grp : Numbers of registered groups
- 19) Schedule : Enabled/Disabled

Click the “ ” button to return to the Main screen.


On the Information screen for HRV groups, items 1), 2), 3), 4), 5), and 9) (plus 12) and 13) in an error state) are displayed. For Dio groups, items 1), 2), 3), 4), and 9) (plus 12) and 13) in an error state) are displayed. For Di groups, items 1), 2), 3), and 4) (plus 12) and 13) in an error state) are displayed.

3. Click the “ **Abnormal history** ” ((3) on the previous page) button to display the Abnormal history screen (Screen 3). In this screen you can check errors that the selected devices have encountered. If no error has occurred, the Screen 4 appears.

Screen 3:
Abnormal history screen

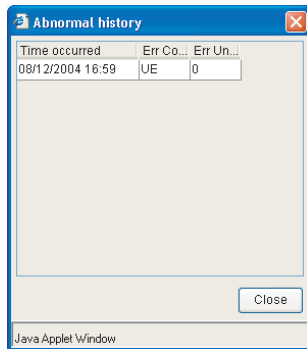

Screen 4:
Abnormal history screen

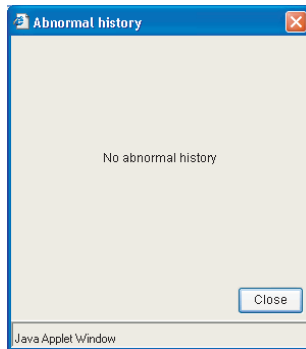

Click the “ **Close** ” button to return to the Information screen.

Error event information including the time occurred, error code, and error unit number are recorded and sorted by time occurred. Up to 10 historical error events can be recorded.


When an error event with the same error code as one for the already registered event occurs in a specific group, only the time is updated. For a specific group two or more error events with the same error code are not registered.

6-13 Monitoring Detailed Operation Status

■ Procedure for monitoring detailed operation status

Detailed operation status can be monitored by zone or by group.

Screen 1: Main screen

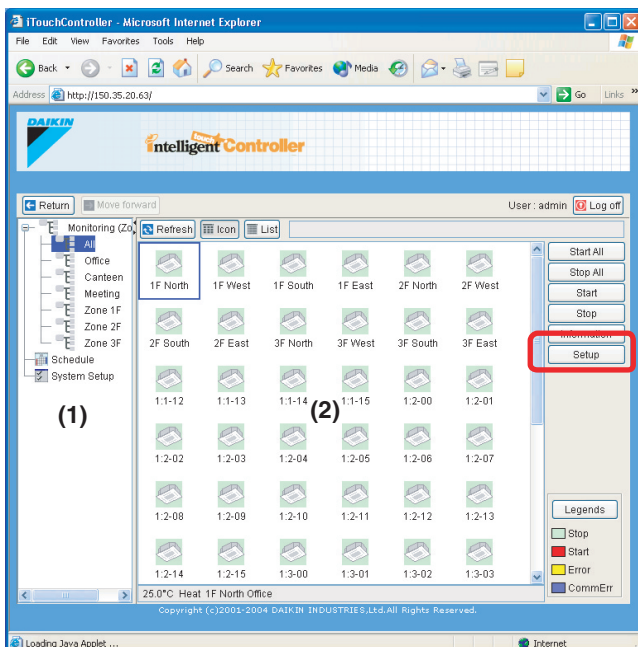


[Procedure]

1. To view information on a zone, select the “Monitoring (Zone list)” item from the zone tree area (1). To view information on a group, select the zone including the group from the zone tree area. Then select the target zone or group in the main display area (2).

2. Click the “ **Setup** ” button to display the Setup screen (Screen 2).

This screen provides the following information.

Screen 2: Setup screen

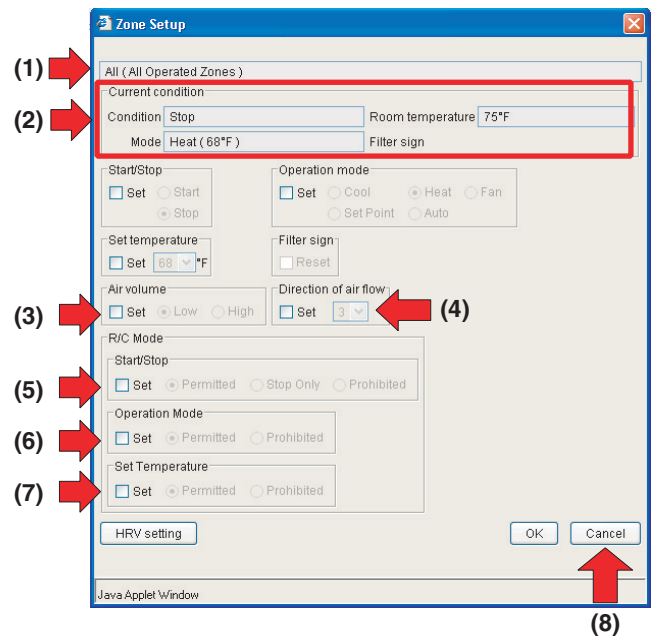

- (1) Name (Description)
Displays the name and description of a zone or group.
- (2) Current Condition
 - Start/Stop state
 - Room temperature
 - Operation Mode
 - Presence or absence of filter signs
- (3) Air volume
Displays current air volume.
- (4) Direction of air flow
Displays current direction of air flow.

The area under the R/C Mode heading includes three frames to display the setting for permission/prohibition of operation through remote controller. In each frame one of the following options are highlighted.

- (5) Start/Stop
“Permitted”
“Stop Only”
“Prohibited”
- (6) Operation Mode
“Permitted” or “Prohibited”
- (7) Set Temperature
“Permitted” or “Prohibited”

3. Upon completion, click the “ **Cancel** ” (8) button to return to the Main screen.

⚠ CAUTION


- This screen can be used for both setting and monitoring. When using it only for monitoring, be sure to click the “ **Cancel** ” button, rather than the “ **OK** ” to close it. This prevents you from inadvertently changing existing settings.

6-14 Monitoring Operation Status of HRVs

■ Procedure for monitoring HRV operation

The operation of all the HRVs can be monitored by zone or by group.

Screen 1: Main screen

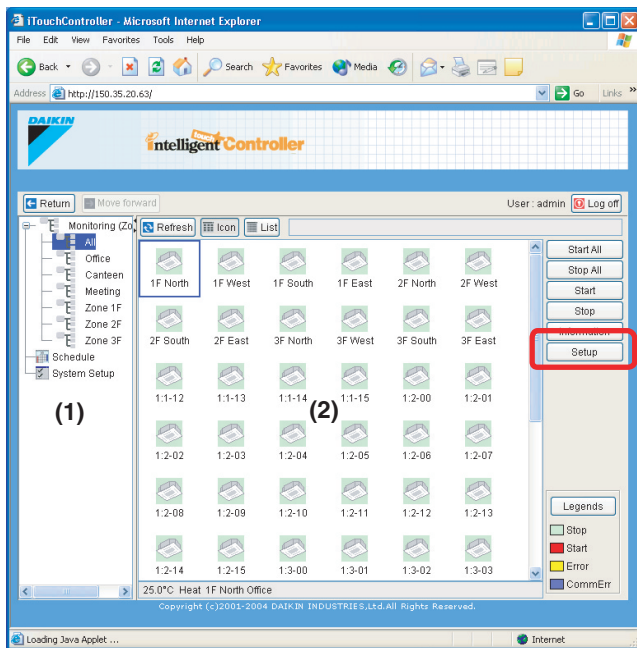


[Procedure]

1. To view information on a zone, select the “Monitoring (Zone list)” item from the zone tree area (1). To view information on a group, select the zone including the group from the zone tree area. Then select the target zone or group in the main display area (2).

2. Press the “ Setup ” button. Screen 2 Operation appears.

Screen 2: Zone setup screen

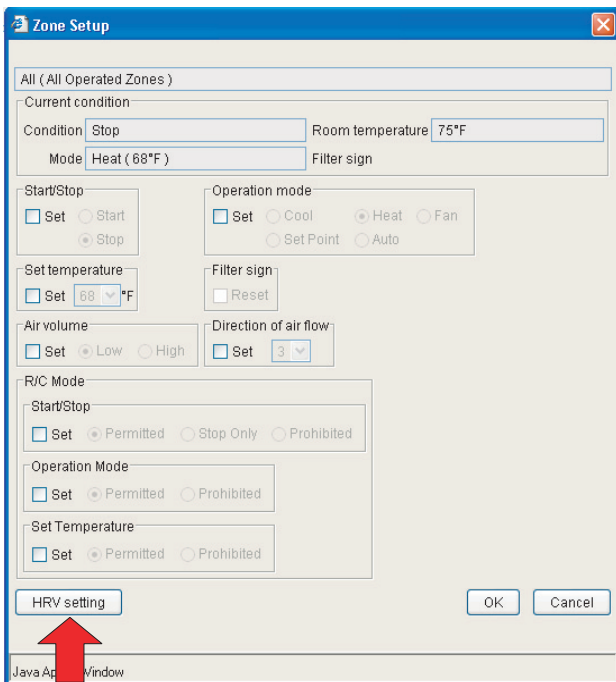


(3)

[When Monitoring a Zone of HRVs]

When selecting a zone including HRVs, the Zone setup screen (Screen 2) appears.

(3) Click the “ HRV setting ” button to display the HRV setting screen (Screen 3).

Screen 3: HRV setting screen

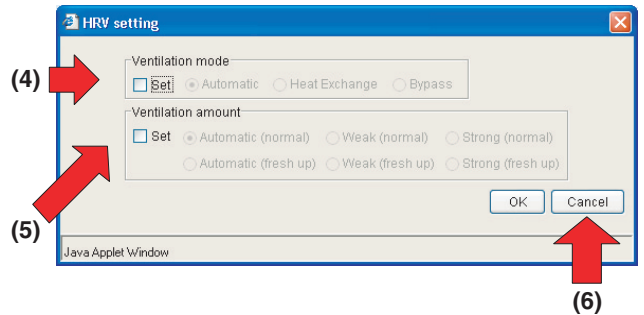

You can view the following two items.


- (4) Ventilation mode
Displays the current Ventilation mode.
- (5) Ventilation amount
Displays the current Ventilation amount.

Upon completion, click the “ Cancel ” (6) button to return to the Main screen.

[When Monitoring a Group of HRVs]

When selecting an HRV group, the Group setup screen (Screen 4) appears. You can view the following items in this screen.

Screen 4: Group setup screen

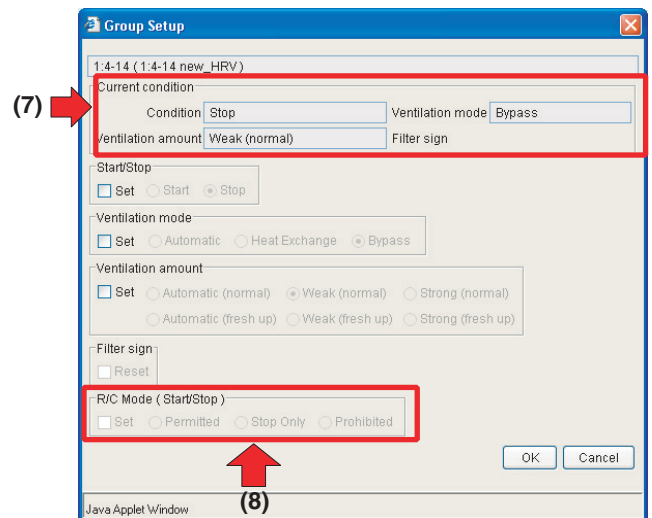

- (7) Current Condition
 - Start/Stop state
 - Ventilation mode
 - Ventilation amount
 - Filter sign

- (8) R/C Mode (Start/Stop)
Displays the setting for permitting/prohibiting start/stop operations through remote controllers.

Upon completion, click the “ Cancel ” button on each screens to return to the Main screen.

⚠ CAUTION

- This screen can be used for both setting and monitoring. When using it only for monitoring, be sure to click the “ Cancel ” button, rather than the “ OK ” to close it. This prevents you from inadvertently changing existing settings.

7. ABOUT SYSTEM SETUP MENU

7-1 Overview

The System Setup menu is provided in the zone tree area displayed in the Advanced mode. This menu provides the following menu items.

System Setup Privileges (Menu Item)		Permissions	
		Administrator	General User
System Setup	Password Setting	○	○
	Registration of General Users	○	×
	Deletion of General Users	○	×
	Assigning Zones to General Users	○	×
Creating Schedules		○	×

○ : Granted × : Denied

The following table explains these privileges (system setup menu items).

System setting Menu Name	Description	Reference
Password Setting	Each General User can change his/her own login password. The Administrator can change not only his/her own login password but also registered General Users' login passwords.	See page [37]
Registration of General Users	The Administrator can register General Users using this menu item. Registered General Users can operate air conditioners and other devices through the web interface. Up to 64 General Users can be registered.	See page [38]
Deletion of General Users	The Administrator can delete any of the registered General Users.	See page [39]
Assigning Zones to General Users	The Administrator can assign one or more zones to each General User. The General User can operate devices included in these zones. Zones are created in advance using the intelligent Touch Controller console. It is impossible to create a zone via the web interface.	See page [39]
Overview: Schedule Creation Procedure	<p>The Schedule menu item allows you to create operation schedules and link it to one or more zones or groups.</p> <p>You can automatically start/stop air conditioners at a point in time. The time value (Year, Month, Day, Day of week, Hour, Minute) is set in advance on the intelligent Touch Controller according to the usage of the air conditioners.</p> <p>The options provided for creating schedule events are:</p> <ul style="list-style-type: none"> • Start/Stop • Permitting/prohibiting local remote controller operations • Operation mode • Setting temperature • Ventilation mode (*) • Ventilation amount (*) <p>(*) Only for HRVs</p> <p>The following describes the steps required to make a plan to create scheduling patterns.</p> <ul style="list-style-type: none"> • There are two types of schedule patterns: 7 regular schedule patterns (applied to Sun to Sat) and 10 extra schedule patterns (Ex1 to Ex10). To get things started, make a plan for creating these 17 schedule patterns on the "calendar setting table." Write down your plan in the "calendar setting table." • Do the setting of "calendar setting" : "weekly setting", "extra schedule patterns". Ex.: Regular schedule patterns are for normal business days and extra schedule patterns are for a special period such as summer holidays. You can create schedule programs for the next 13 months. • Finally assign events to the above 17 schedule patterns (regular schedule patterns: Sun to Sat; extra schedule patterns: Ex1 to Ex10). Ex.: Starts devices in zone 1 at 9:00 and stops at 17:00 Up to 16 operations can be set for each day. Up to 8 schedule programs can be set, by concerning the schedules above as one. 	See page [40]

The following section provides a setting example.

Zone Setting	1. [Floor usage] 1F: Reception counter Names this zone "1F" 2F: Office Names this zone "2F" 3F: Canteen Names this zone "3F"				-			
Schedule Calendar Setting	2. [Information required to create the schedule for each zone is recorded on the "calendar setting table." Each column corresponds to a zone and each row corresponds to a schedule pattern (for each day of the week and extra schedule days).]				-			
<table border="1"> <tr> <td style="text-align: center;">Zone name Day of week</td> <td style="text-align: center;">Zone 1F</td> <td style="text-align: center;">Zone 2F</td> <td style="text-align: center;">Zone 3F</td> </tr> </table>		Zone name Day of week	Zone 1F	Zone 2F	Zone 3F			
Zone name Day of week	Zone 1F	Zone 2F	Zone 3F					
SUN		Holiday	Holiday	Holiday				
MON		9:30-18:00 Duty hours	8:30-17:00 Duty hours 12:00-13:00 Lunch break 17:00-22:00 Overtime hours 22:00 Closing office	9:00-14:30 Duty hours				
TUE		ditto	ditto	ditto				
WED		9:30-17:00 Duty hours	ditto	ditto				
THU		same as Mon	ditto	ditto				
FRI		same as Mon	ditto	ditto				
SAT		Holiday	Holiday	Holiday				
Ex1	third Sat of every month	Concerned as a working day	Concerned as a working day	Concerned as a working day				
Ex2	1st Aug to 20th Aug 29th Dec to 4th Jan	Holiday	Holiday	Holiday				
Ex3	28th Dec	9:00-12:00 Service hours	9:00-12:00 Service hours	Holiday				
Ex4	5th Jan	10:00-15:00 Service hours	9:00-12:00 Service hours 12:00-13:00 Lunch break	9:00-14:30 Duty hours				

System setting Menu Name	Example: Scheduling	Reference																																																																																																																																																												
Determining Schedule Events	<p>3. [In this step you will determine schedule events for the zone “2F.”] Note: These events are provided only for reference. Create customized schedules based on your actual requirements. Example: event settings for Mon to Fri</p> <table border="1" data-bbox="360 282 1209 533"> <thead> <tr> <th>Time</th> <th>Target Zone</th> <th>Start/Stop</th> <th>Operation mode</th> <th>Set temperature</th> <th>Remote Controller Code</th> </tr> </thead> <tbody> <tr> <td>8:30</td> <td>Zone 2F</td> <td>ON</td> <td>Null</td> <td>Null</td> <td>Override</td> </tr> <tr> <td>12:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Null</td> </tr> <tr> <td>13:00</td> <td>Zone 2F</td> <td>ON</td> <td>Null</td> <td>Null</td> <td>Override</td> </tr> <tr> <td>17:00</td> <td>Zone 2F</td> <td>Null</td> <td>Null</td> <td>Null</td> <td>Permits only stopping</td> </tr> <tr> <td>22:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Prohibits remote controller operations</td> </tr> </tbody> </table> <p>Example: event settings for Sat and Sun</p> <table border="1" data-bbox="360 582 1209 721"> <thead> <tr> <th>Time</th> <th>Target Zone</th> <th>Start/Stop</th> <th>Operation mode</th> <th>Set temperature</th> <th>Remote Controller Code</th> </tr> </thead> <tbody> <tr> <td>9:00</td> <td>Zone 2F</td> <td>Null</td> <td>Null</td> <td>Null</td> <td>Override</td> </tr> <tr> <td>17:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Prohibits remote controller operations</td> </tr> </tbody> </table> <p>Example: event settings for Ex1 (third Sat of each month)</p> <table border="1" data-bbox="360 770 1209 1021"> <thead> <tr> <th>Time</th> <th>Target Zone</th> <th>Start/Stop</th> <th>Operation mode</th> <th>Set temperature</th> <th>Remote Controller Code</th> </tr> </thead> <tbody> <tr> <td>8:30</td> <td>Zone 2F</td> <td>ON</td> <td>Null</td> <td>Null</td> <td>Override</td> </tr> <tr> <td>12:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Null</td> </tr> <tr> <td>13:00</td> <td>Zone 2F</td> <td>ON</td> <td>Null</td> <td>Null</td> <td>Override</td> </tr> <tr> <td>17:00</td> <td>Zone 2F</td> <td>Null</td> <td>Null</td> <td>Null</td> <td>Permits only stopping</td> </tr> <tr> <td>22:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Prohibits remote controller operations</td> </tr> </tbody> </table> <p>Example: event settings for Ex2 (for example, summer holidays)</p> <table border="1" data-bbox="360 1070 1209 1209"> <thead> <tr> <th>Time</th> <th>Target Zone</th> <th>Start/Stop</th> <th>Operation mode</th> <th>Set temperature</th> <th>Remote Controller Code</th> </tr> </thead> <tbody> <tr> <td>9:00</td> <td>Zone 2F</td> <td>Null</td> <td>Null</td> <td>Null</td> <td>Override</td> </tr> <tr> <td>17:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Prohibits remote controller operations</td> </tr> </tbody> </table> <p>Example: event settings for Ex3 (M. 12 D. 28)</p> <table border="1" data-bbox="360 1258 1209 1456"> <thead> <tr> <th>Time</th> <th>Target Zone</th> <th>Start/Stop</th> <th>Operation mode</th> <th>Set temperature</th> <th>Remote Controller Code</th> </tr> </thead> <tbody> <tr> <td>9:00</td> <td>Zone 2F</td> <td>ON</td> <td>HEAT</td> <td>77°F</td> <td>Override Prohibits temperature setting Prohibits operation mode setting</td> </tr> <tr> <td>12:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Prohibits remote controller operations</td> </tr> </tbody> </table> <p>Example: event settings for Ex4 (M. 1 D. 5)</p> <table border="1" data-bbox="360 1505 1209 1836"> <thead> <tr> <th>Time</th> <th>Target Zone</th> <th>Start/Stop</th> <th>Operation mode</th> <th>Set temperature</th> <th>Remote Controller Code</th> </tr> </thead> <tbody> <tr> <td>10:00</td> <td>Zone 2F</td> <td>ON</td> <td>HEAT</td> <td>77°F</td> <td>Override Prohibits temperature setting Prohibits operation mode setting</td> </tr> <tr> <td>12:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Null</td> </tr> <tr> <td>13:00</td> <td>Zone 2F</td> <td>ON</td> <td>Null</td> <td>77°F</td> <td>Override Prohibits temperature setting Prohibits operation mode setting</td> </tr> <tr> <td>15:00</td> <td>Zone 2F</td> <td>OFF</td> <td>Null</td> <td>Null</td> <td>Prohibits remote controller operations</td> </tr> </tbody> </table> <p>* “Null” indicates that the previous state is maintained in the time frame.</p>	Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code	8:30	Zone 2F	ON	Null	Null	Override	12:00	Zone 2F	OFF	Null	Null	Null	13:00	Zone 2F	ON	Null	Null	Override	17:00	Zone 2F	Null	Null	Null	Permits only stopping	22:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations	Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code	9:00	Zone 2F	Null	Null	Null	Override	17:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations	Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code	8:30	Zone 2F	ON	Null	Null	Override	12:00	Zone 2F	OFF	Null	Null	Null	13:00	Zone 2F	ON	Null	Null	Override	17:00	Zone 2F	Null	Null	Null	Permits only stopping	22:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations	Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code	9:00	Zone 2F	Null	Null	Null	Override	17:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations	Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code	9:00	Zone 2F	ON	HEAT	77°F	Override Prohibits temperature setting Prohibits operation mode setting	12:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations	Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code	10:00	Zone 2F	ON	HEAT	77°F	Override Prohibits temperature setting Prohibits operation mode setting	12:00	Zone 2F	OFF	Null	Null	Null	13:00	Zone 2F	ON	Null	77°F	Override Prohibits temperature setting Prohibits operation mode setting	15:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations	<p>See page [42]</p> <p>See page [44]</p>
Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code																																																																																																																																																									
8:30	Zone 2F	ON	Null	Null	Override																																																																																																																																																									
12:00	Zone 2F	OFF	Null	Null	Null																																																																																																																																																									
13:00	Zone 2F	ON	Null	Null	Override																																																																																																																																																									
17:00	Zone 2F	Null	Null	Null	Permits only stopping																																																																																																																																																									
22:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations																																																																																																																																																									
Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code																																																																																																																																																									
9:00	Zone 2F	Null	Null	Null	Override																																																																																																																																																									
17:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations																																																																																																																																																									
Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code																																																																																																																																																									
8:30	Zone 2F	ON	Null	Null	Override																																																																																																																																																									
12:00	Zone 2F	OFF	Null	Null	Null																																																																																																																																																									
13:00	Zone 2F	ON	Null	Null	Override																																																																																																																																																									
17:00	Zone 2F	Null	Null	Null	Permits only stopping																																																																																																																																																									
22:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations																																																																																																																																																									
Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code																																																																																																																																																									
9:00	Zone 2F	Null	Null	Null	Override																																																																																																																																																									
17:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations																																																																																																																																																									
Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code																																																																																																																																																									
9:00	Zone 2F	ON	HEAT	77°F	Override Prohibits temperature setting Prohibits operation mode setting																																																																																																																																																									
12:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations																																																																																																																																																									
Time	Target Zone	Start/Stop	Operation mode	Set temperature	Remote Controller Code																																																																																																																																																									
10:00	Zone 2F	ON	HEAT	77°F	Override Prohibits temperature setting Prohibits operation mode setting																																																																																																																																																									
12:00	Zone 2F	OFF	Null	Null	Null																																																																																																																																																									
13:00	Zone 2F	ON	Null	77°F	Override Prohibits temperature setting Prohibits operation mode setting																																																																																																																																																									
15:00	Zone 2F	OFF	Null	Null	Prohibits remote controller operations																																																																																																																																																									
Copying or Deleting Schedule Programs	You can copy or delete existing schedule programs.	See page [45]																																																																																																																																																												
Copying or Deleting Schedule Events	You can copy or delete existing schedule events.	See page [46]																																																																																																																																																												
Naming a Schedule	You can change a default schedule name to a descriptive one.	See page [47]																																																																																																																																																												

7-2 System Setup


This menu item provides the following functions:

- Changing passwords
(This page and next page)
- Registration/deletion of General Users
(See page 38 to 39)
- Assigning one or more Zones to each General User
(See page 39)

[To Change Your Own Password]

1. Log into the interface as the Administrator or a General User
2. Select the System Setup node from the zone tree area (1) to display the System setup main screen (Screen 1).


Screen 1: System setup main screen

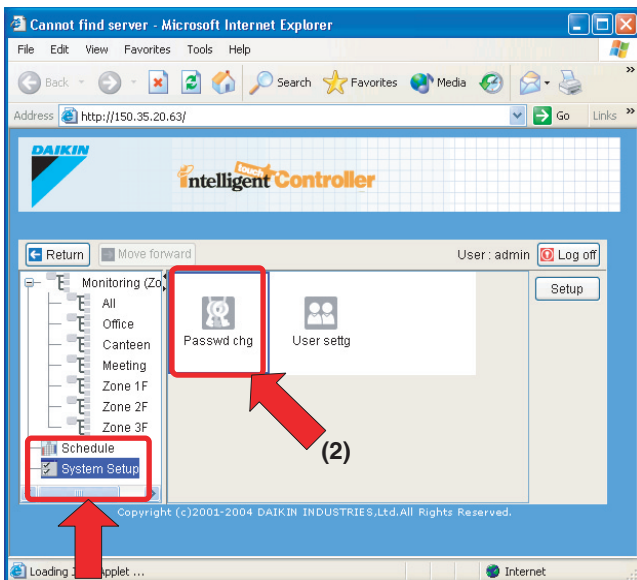

(1)

3. Double click the Password chg icon (2) to display the Modify Password screen.

Screen 2: Modify Password screen

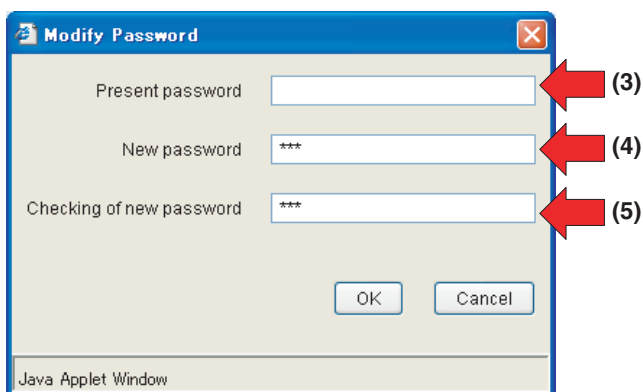

4. Enter the existing password into the Present password (3) field. If you have no password, skip this field.
5. Enter a new password into the New password field (4). Then enter the password again into the Checking of new password field (5) for confirmation. These two fields accept up to 15 characters.
6. Upon completion, click the “OK” button.

CAUTION


Administrator passwords for web interface and console

A new Administrator password set in this screen is also used for the system console menu and you will not be able to use the system console menu without entering the new password. On the other hand, setting an Administrator password on the system console not only makes the console unavailable without entering the password, but also replaces the existing Administrator password for the web interface with the password set on the console.

[To Change a General User Password (When You are the Administrator)]

1. Log into the interface as the Administrator, and select the System Setup node (1) from the zone tree area to display the System setup main screen (Screen 1).


Screen 1: System setup main screen

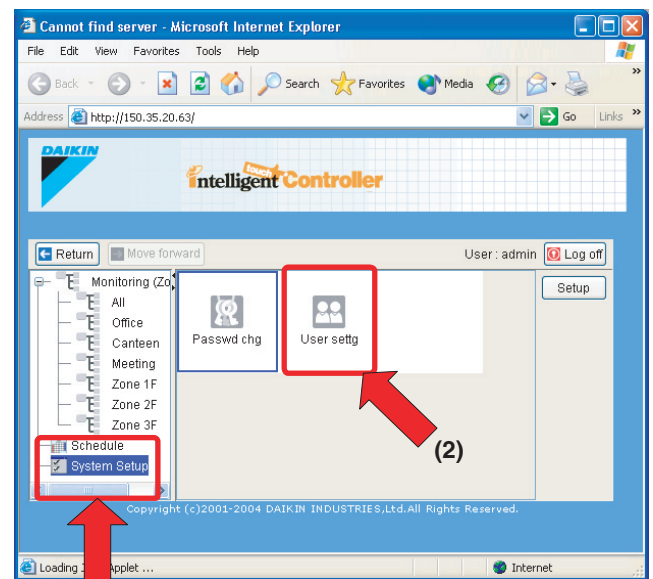

(1)

2. Double click the User settg icon (2) to display the User settg dialog box (Screen 2).

Screen 2: User settg dialog box

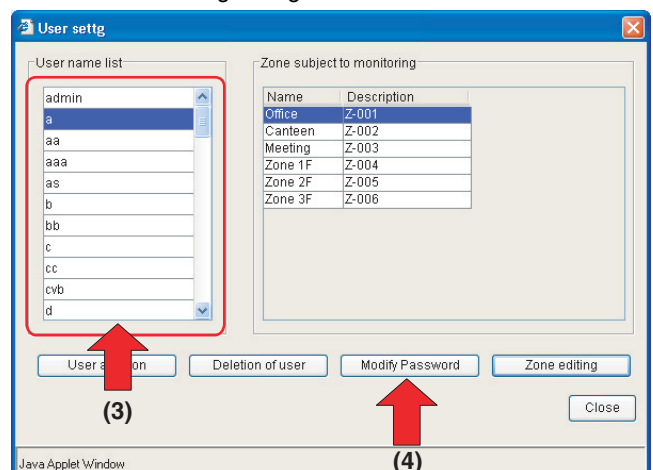


(3)

(4)

3. Select a user name from the User name list (3), and click “Modify Password” button (4). Note that the “admin” item in the list represents the Administrator.

The Modify Password dialog box (Screen 3) appears.

Screen 3: Modify Password screen

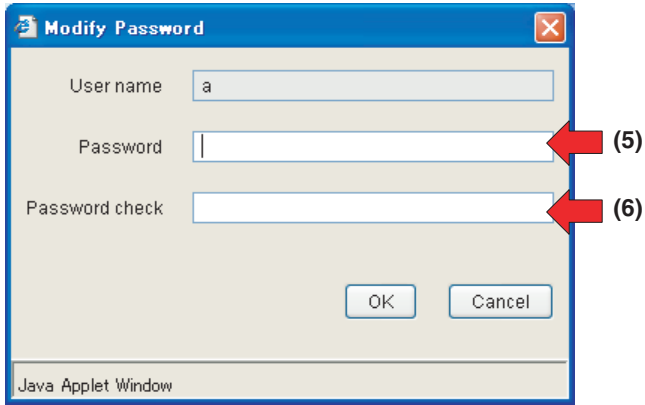

4. Enter a new password in the Password field (5) and re-enter the same password in the Password check field (6) for confirmation.

5. Upon completion, click the “OK” button.

To cancel your entry, click the “Cancel” button.

NOTE


- You also can change the Administrator password in the User settg dialog box (Screen 2). In this case, select the “admin” rather than a user name in the step 3.

Click the “Modify Password” button (4). Then repeat the steps 4 and 5.

[To Register a General User]


1. Log into the interface as the Administrator, and select the System Setup node (1) from the zone tree area to display the System setup main screen (Screen 1).

Screen 1: System setup main screen

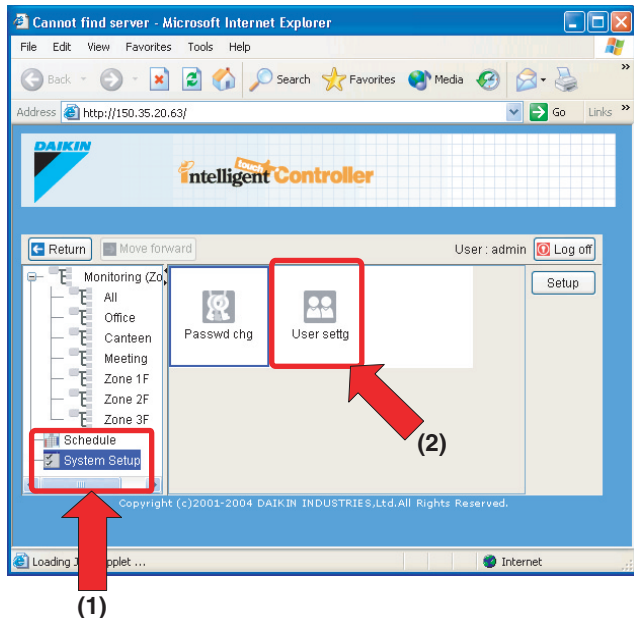


2. Double click the User settg icon (2) to display the User settg dialog box (Screen 2).

Screen 2: User settg dialog box

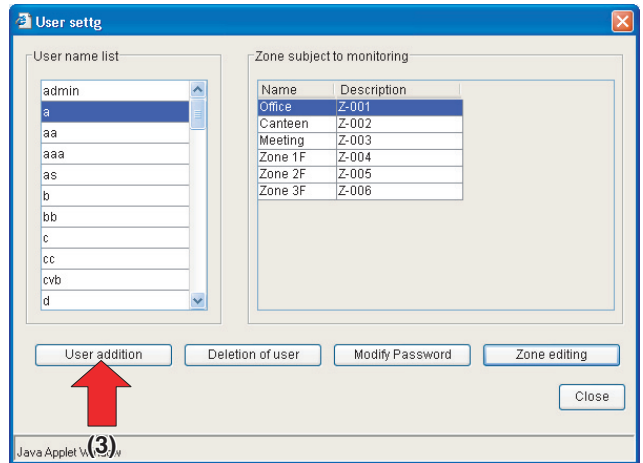

3. Click the “User addition” button (3) to display the Add user dialog box (Screen 3).

Screen 3: Add user dialog box

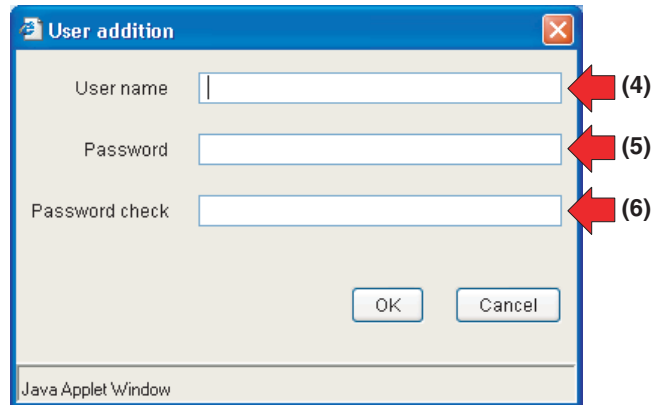

4. Enter the user name to be registered in the User name field (4).

5. Enter a new password of the User in the Password field (5) and re-enter the same password in the Password check field (6) for confirmation.


6. Upon completion, click the “OK” button.

To cancel your entry, click the “Cancel” button.

[To Delete a General User]

1. Log into the interface as the Administrator, and select the System Setup node (1) from the zone tree area to display the System setup main screen (Screen 1).


Screen 1: System setup main screen

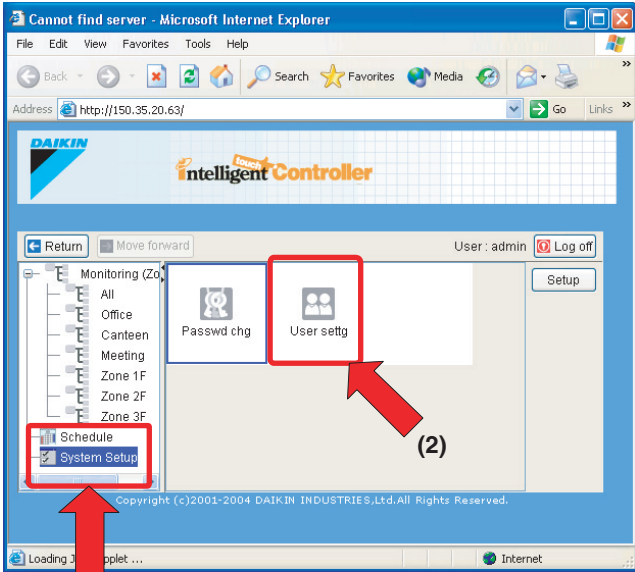

(1)

2. Double click the User settg icon (2) to display the User settg dialog box (Screen 2).

Screen 2: User settg dialog box

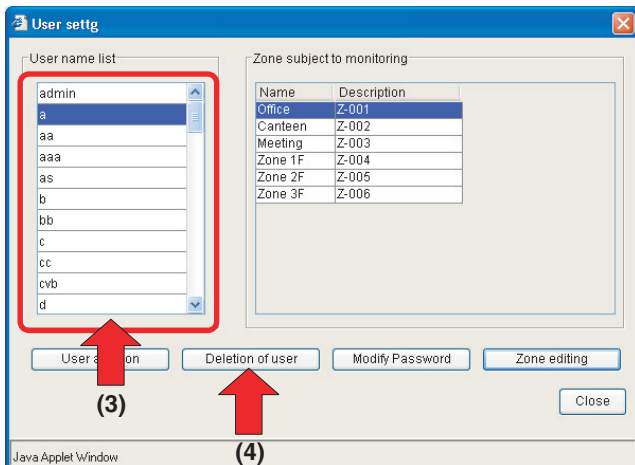


(3)

(4)

3. Select the name of the user to be deleted from the User name list (3), and click the “ Deletion of user ” button to display the Deletion of user confirmation dialog box (Screen 3). Click the Yes button to confirm your selection.


Screen 3: Deletion of user confirmation dialog box

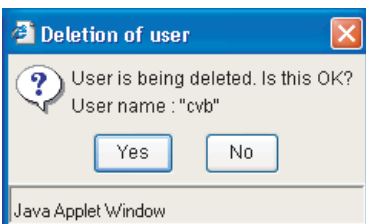

[Assigning Zones to General Users]

1. Log into the interface as the Administrator, and select the System Setup node (1) from the zone tree area to display the System setup main screen (Screen 1).


Screen 1: System setup main screen

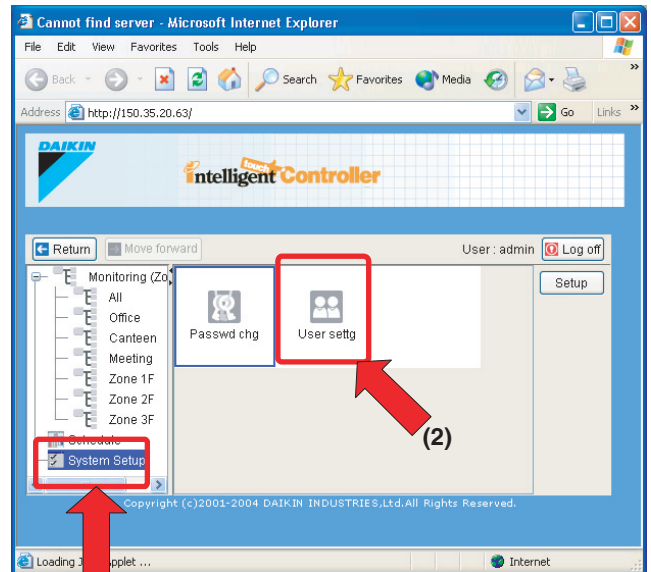

(1)

2. Double click the User settg icon (2) to display the User settg dialog box (Screen 2).


Screen 2: User settg dialog box

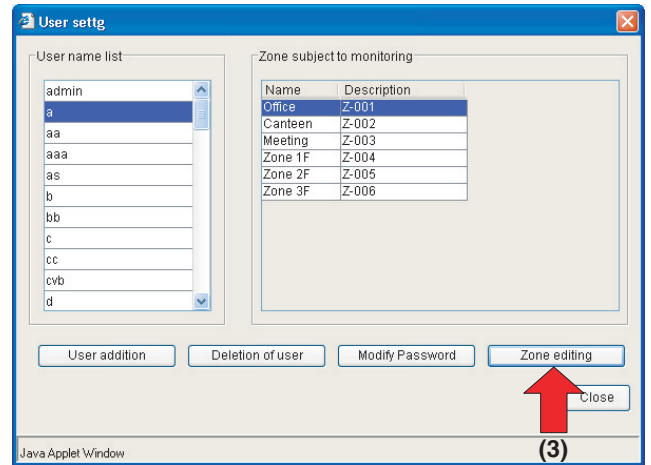

(3)

3. Select the zone you want to assign or remove and click the “ Zone editing ” button (3). The Zone editing dialog box (Screen 3) appears.

Screen 3: Zone editing dialog box

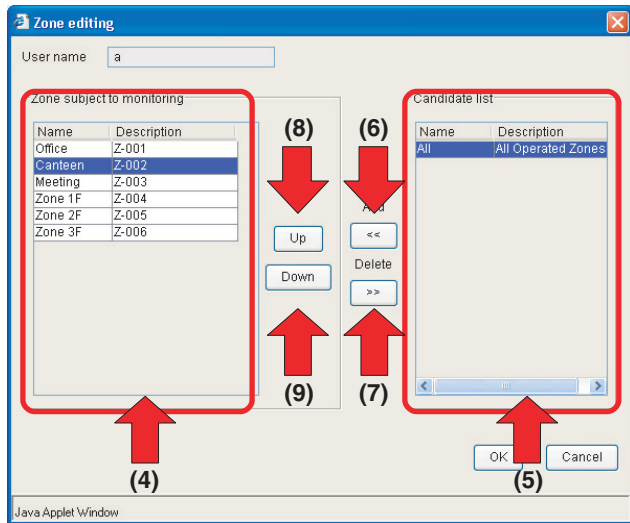


4. Select a zone to be assigned to the selected user from the right list (5) and click the “ << ” button (6). The zone is moved to the left list (4). To remove an assigned zone, select the zone from the left list (4) and click the “ >> ” button (7). The zone is removed from the list.
5. To change the order of items in the left list (4), use the “ Up ” (8) and “ Down ” (9) buttons.
6. Upon completion, click the “ OK ” button.
To cancel your entry, click the “ Cancel ” button.

8. CREATING SCHEDULES

8-1 Main Scheduling Screen

This section describes the components of the main scheduling screen.

When selecting the “Schedule” node (1) from the zone tree area, you will see the following screen (the “main scheduling screen”).

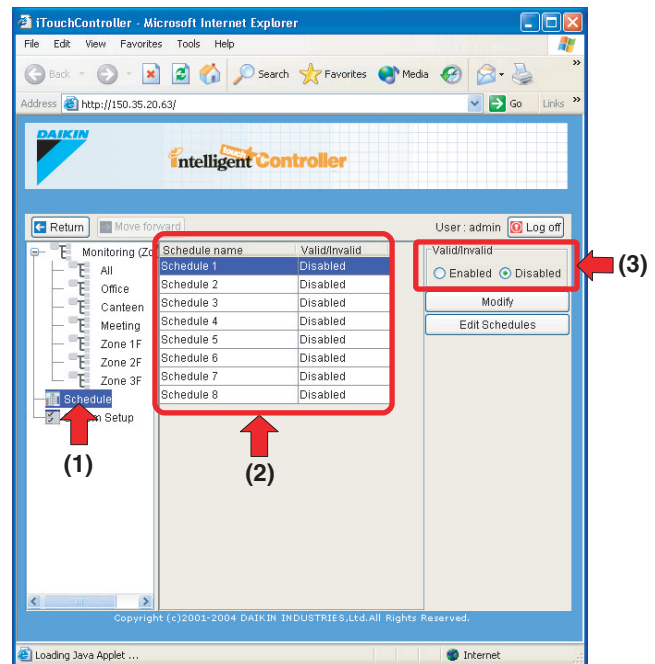


- (1) **Schedule node in the zone tree area**
Selecting this node displays the main scheduling screen.
- (2) **Schedule program list**
Lists the name and status (Enabled/disabled) for each schedule program.
- (3) **Enable/Disable radio buttons**
Displays the status of the program selected in the list. You can enable or disable it using these buttons.



Displays the Schedule Setup screen.

 
For more information on the Schedule Setup screen layout, see the next page.



Displays the Edit Schedule screen.

For the description of how to use this button, see the page 45.

8-2 Schedule Setup dialog box

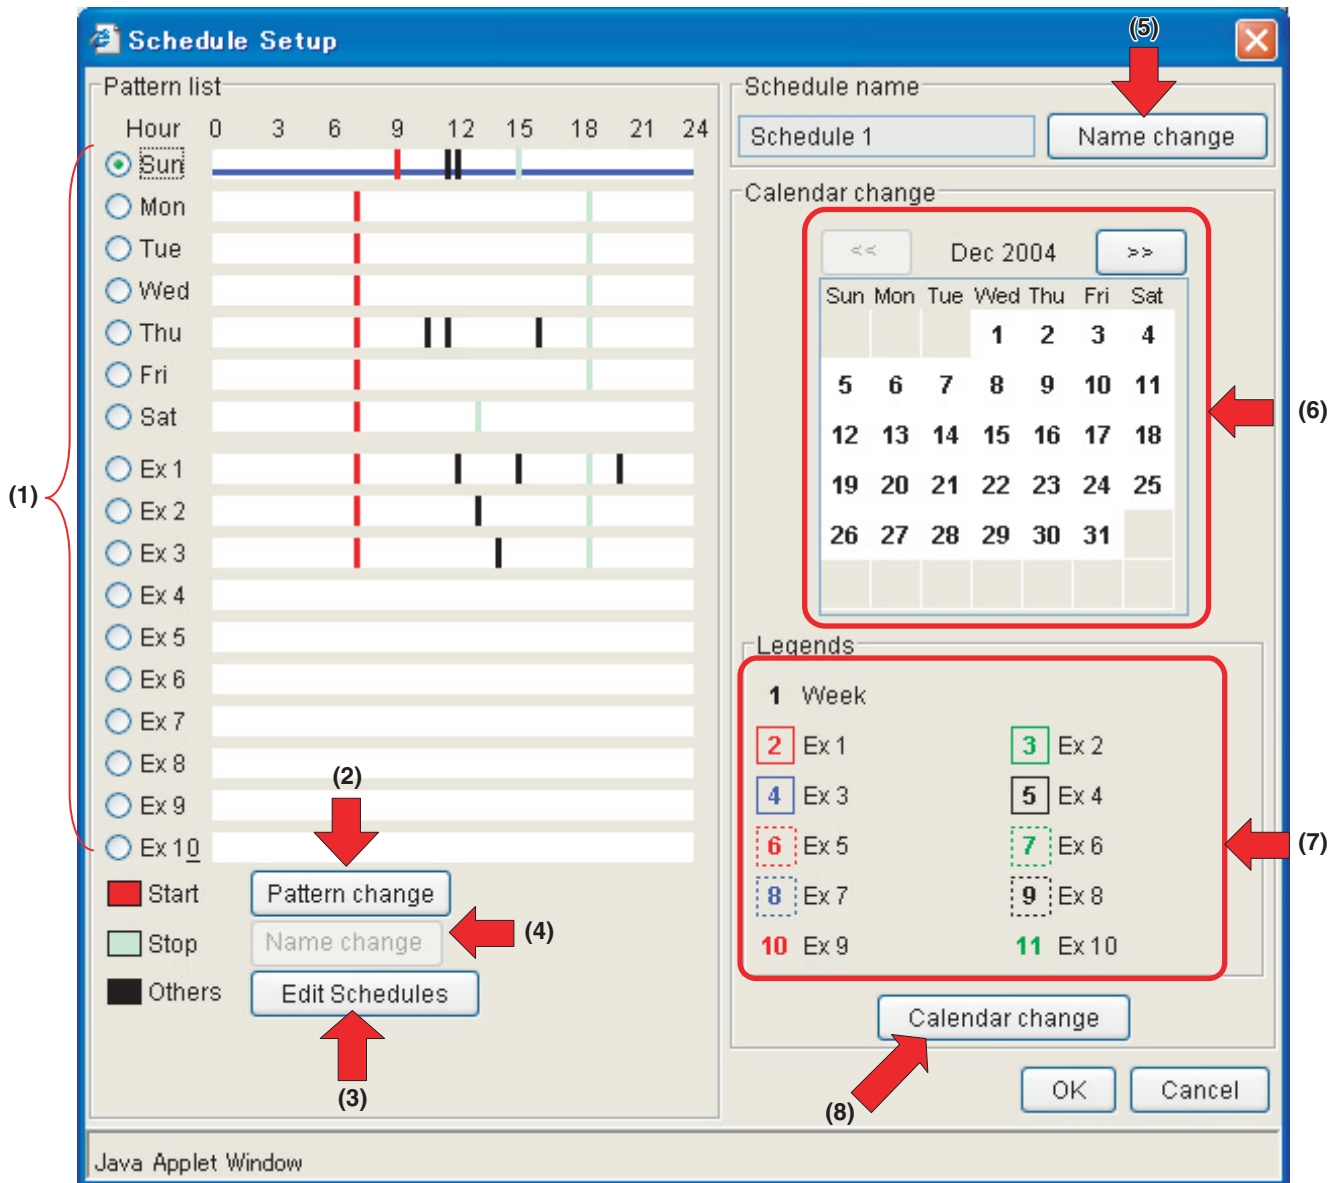

(1) Pattern radio buttons and Pattern bar

A Pattern bar displays various operations to be performed for each day. Pattern radio buttons are used to select the schedule pattern to be edited. (See page 43)

(2) Pattern change

Changes schedule patterns. (See page 42)

(3) Edit Schedules

Copies or deletes schedule patterns. (See page 46)

(4) Name change

Renames Ex schedule patterns. (See page 47)

(5) Name change

Renames schedule programs displayed on the main scheduling screen. (See page 47)

(6) Schedule Calendar area

Renames schedule programs displayed on the main scheduling screen. (See page 45)

(7) Legends area

Describes the symbols representing each schedule pattern.

(8) Calendar change

Used to assign one or more dates to an Ex schedule. (See page 45)


8-3 Using the Schedule Menu

To edit a schedule program

[Procedure]

1. Select the Schedule node (1) from the zone tree area.


Screen 1: Main scheduling screen

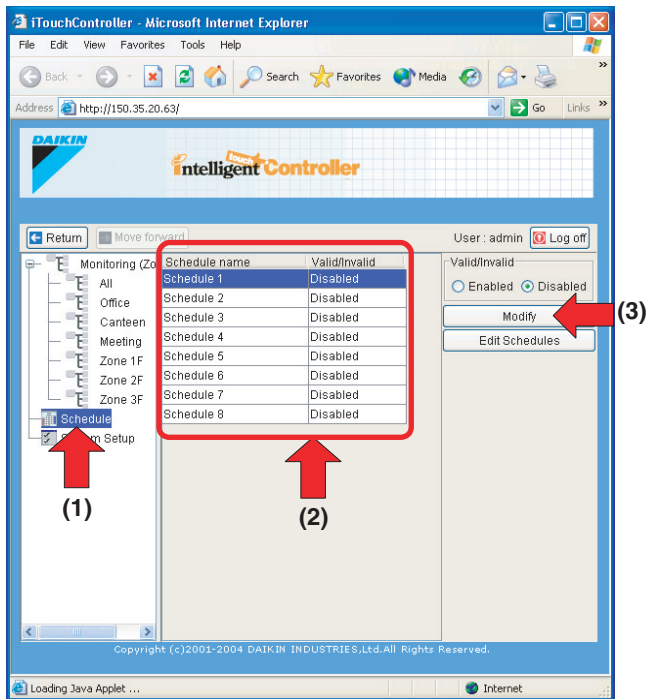

2. The schedule program list (2) appears. You can create up to 8 schedule programs. Select the schedule program you want to set up or change, and click the "Modify" (3) button.

3. The Schedule Setup dialog box (Screen 2) appears where you can set up or change the schedule program.

Screen 2: Schedule Setup dialog box

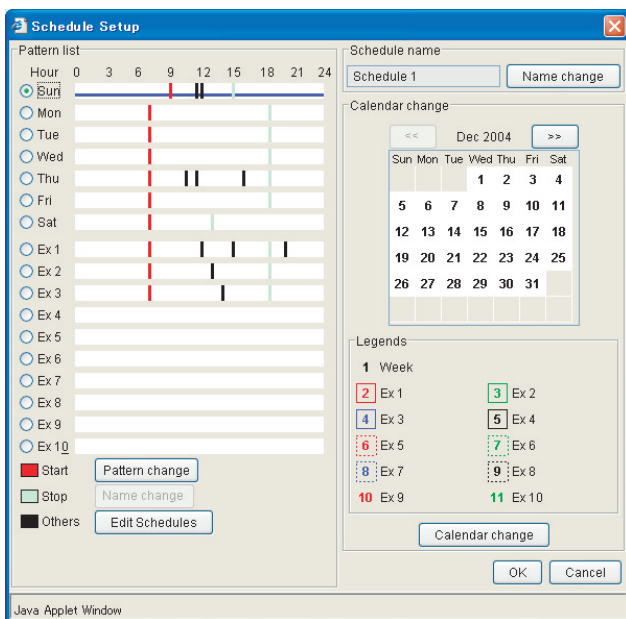

See the following pages for the instructions.


- Regular schedule pattern: (This page)
- Ex schedule pattern: (See page 44)

8-4 Creating Regular Schedule Patterns

To create regular schedule patterns


1. To create regular schedule patterns (Sun to Sat), select a target day of the week by clicking an appropriate pattern radio button (1).

(1) Screen 1: Schedule Setup screen

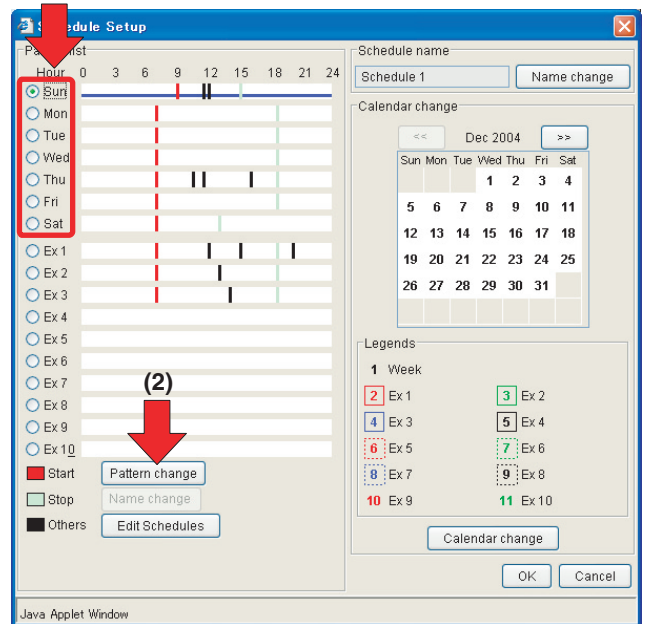


2. Click the "Pattern change" button (2) to display the Pattern change dialog box (Screen 2).

Screen 2: Pattern change dialog box

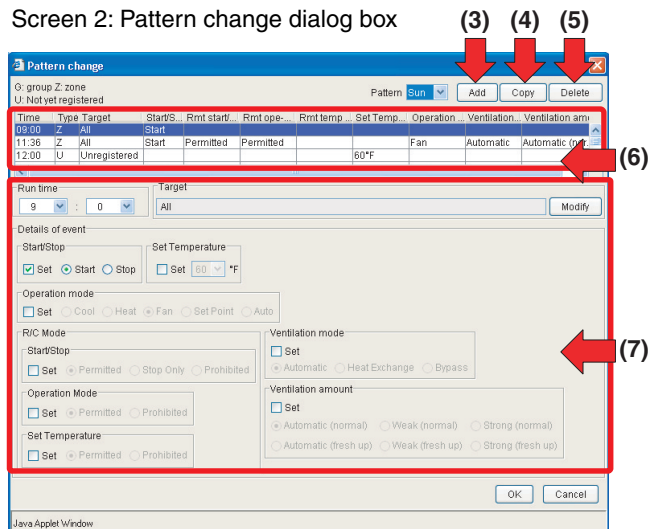

Screen 3: Target dialog box

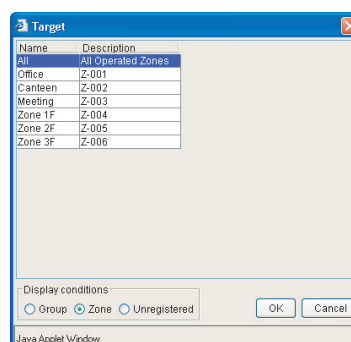

3. To add a new schedule event, click the “ **Add** ” button (3).

A new event item appears in the top row of the schedule event list (6). You can set up or change a new or existing event item in this list.

4. Select the new event added in the step 3 or an existing event, and set or change various variables of the event using options in the schedule event setup area (7).

To set or change these variables, select the Set checkbox in each frame and click a desired radio button. In each frame below you can:


- **Run time:**
Set a time value that indicates when the event should occur using the pull-down menus.
- **Target:**
Set/change a target zone or group.
Click the “ **Modify** ” button to display the Target dialog box (Screen 3), where you can select a target group or zone.
- **Start/Stop:**
Select an action (Start or Stop) that the event triggers using the radio buttons.
- **Set Temperature:**
Set the temperature setting value for the selected zone or group using the radio buttons.
- **Operation mode:**
Set the operation mode for the selected zone or group using the radio buttons.
- **R/C Mode:**
Permit or prohibit the remote controller operation using the radio buttons. In each of the following three frames, you can:
 - **Start/Stop:**
Permit or prohibit the start/stop operation through remote controllers.
 - **Operation Mode:**
Permit or prohibit the modification of the operation mode through remote controllers.
 - **Set Temperature:**
Permit or prohibit the modification of the temperature setting through remote controllers.
- **Ventilation mode:**
Set the HRV's ventilation mode using the radio buttons.
- **Ventilation amount:**
Set the HRV's ventilation amount.

CAUTION

- When the devices in the target group or zone are not HRVs or HRVs that do not support these settings, your selection will be ignored even if the Set checkbox is selected.

5. Upon completion, click the “ **OK** ” button on the Pattern change dialog box (Screen 2).

Screen 2: Pattern change dialog box

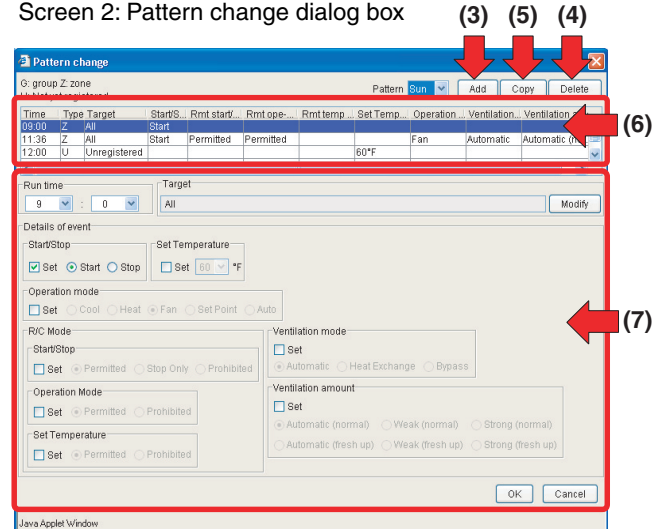

To cancel your selection, click the “ **Cancel** ” button.

Return to the Schedule Setup screen (Screen 1 of the previous page). You will confirm your settings on this screen.

[Other Buttons]



Deletes the event item selected in the schedule event list (6).



Duplicates a selected event item in the schedule event list (6).

6. In the Schedule Setup screen the schedule pattern bar in the figure (Screen 4) appears. Each mark represents:

Screen 4: Pattern bar




Screen 5: Example of pattern bars



- 9 : 00 ⇒ Starts
- 12 : 00 ⇒ Changes temperature setting
- 15 : 00 ⇒ Stops



 - 9 : 00 ⇒ Starts
- 9 : 15 ⇒ Changes temperature setting
- 12 : 00 ⇒ Changes temperature setting
- 15 : 00 ⇒ Stops



- 9 : 00 ⇒ Starts
- 9 : 30 ⇒ Changes operation mode
- 12 : 00 ⇒ Changes temperature setting
- 15 : 00 ⇒ Stops


- █ (Red): Start event
- █ (Green): Stop event
- █ (Black): Event other than start/stop events

The marks on the bar indicate the time frame (half-hour unit, for example: 0:00 to 0:29, 0:30 to 0:59) within which the event should occur. (See the examples in the Screen 5.)

If the setting is satisfactory, click the “OK” button.

Return to the main scheduling screen (Screen 6).

Screen 6: Main scheduling screen

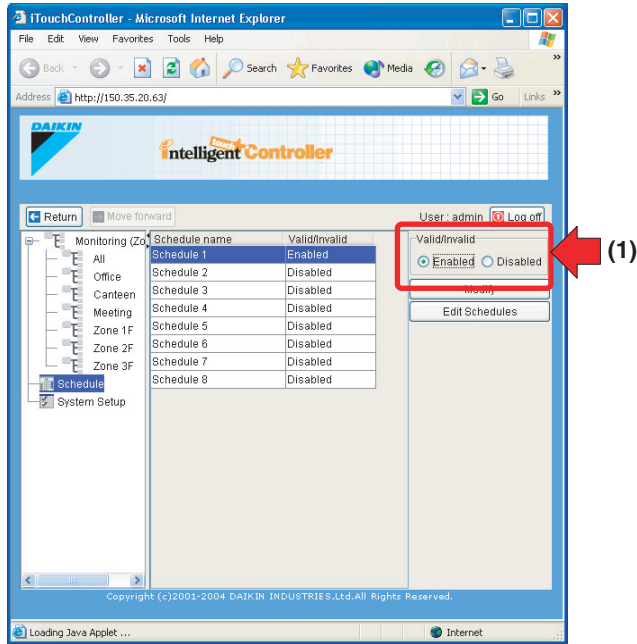

7. In this screen you can enable the schedule program just created. By default it is disabled. Click the Enable (1) radio button to enable it.

CAUTION

- Disabled schedule programs do not work.


The regular schedule patterns are now created.

8-5 Creating Ex Schedule Patterns

To create Ex schedule patterns


1. You can also create 10 extra schedule patterns (Ex1 to Ex10) in the Schedule Setup screen (Screen 1). Click an appropriate radio button (1) to select the Ex schedule pattern to be set up or changed.

Screen 1: Schedule Setup screen

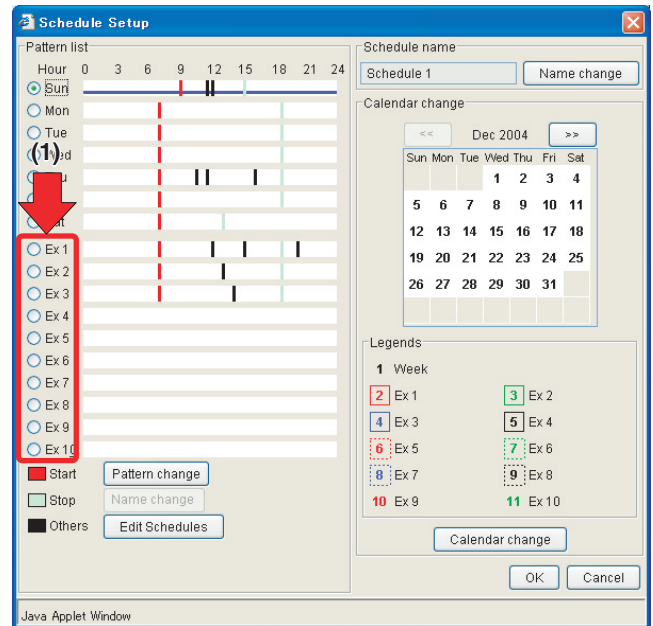

2. Click the “Pattern change” button to display the Pattern change dialog box (Screen 2).

Screen 2: Pattern change dialog box

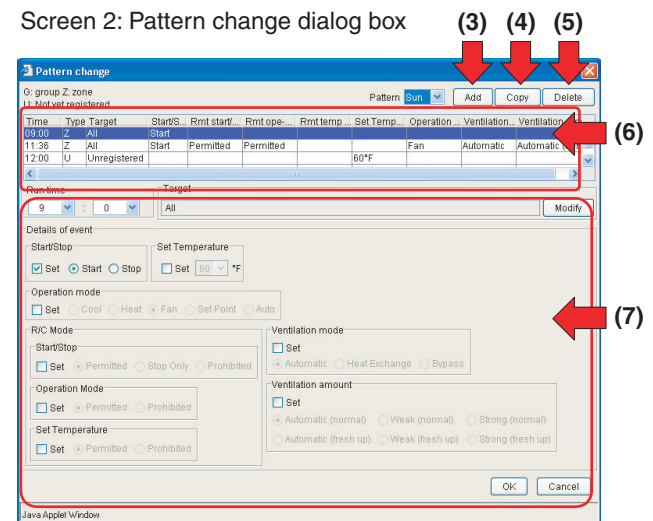

3. To add a new schedule event, click the “Add” button (3).


A new event item appears in the top row of the schedule event list (6).

You can set up or change a new or existing event in this list.

4. Select the new event added in the step 3 or an existing event, and set up or change various variables of the event using options in the schedule event setup area (7). To set up or change these variables, select the Set checkbox in each frame and click a desired radio button. For the description of the setting options, see the “Creating Regular Schedule Patterns” section.

- Upon completion, click the “ ” button on the Pattern change dialog box (Screen 2). To cancel your entry, click the “ ” button.
Return to the Schedule Setup screen (Screen 1).
- Repeat the steps 1 to 5 in this procedure if other extra schedule patterns should be set up.
- In the Schedule Setup screen the schedule pattern bar in the figure (Screen 3) appears. For the description of each mark, see the “Creating Regular Schedule Patterns” section.

 
Screen 3: Pattern bar



If the setting is satisfactory, associate each Ex schedule pattern with a specific date. See the following (Screen 1).

- Then mark the dates on the calendar to indicate when the Ex schedule events should occur. As shown in the figure, by default no Ex schedule is associated (1). (Regular schedule patterns are applied to all the dates.)


Screen 1: Schedule Setup screen

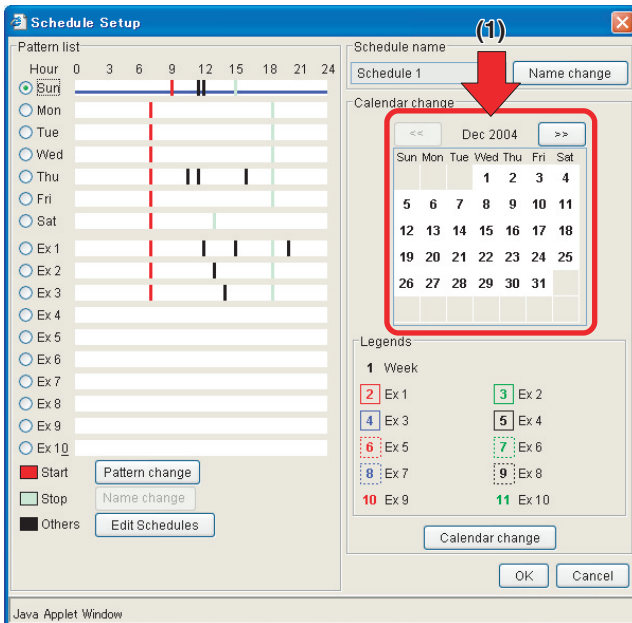

Click the “ ” button.

- The Calendar change screen (Screen 2) appears. Click the Set checkbox (2).

Screen 2: Calendar change screen

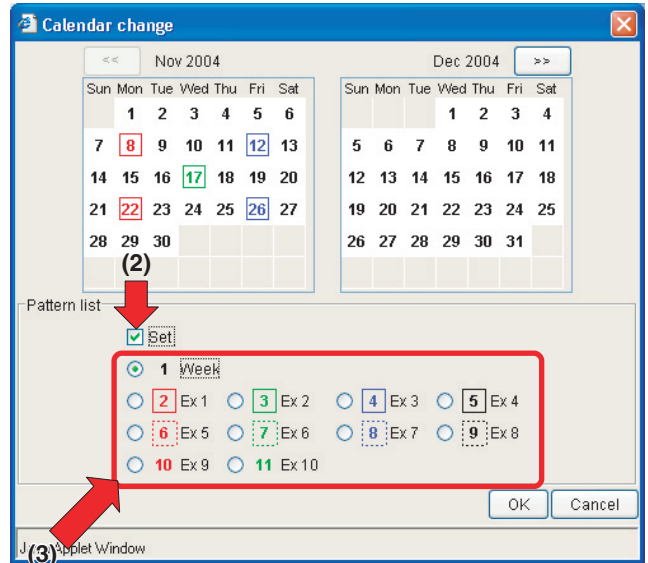

- Click the appropriate radio button to select the Ex schedule pattern to be set.
- With the Ex schedule pattern radio button selected, click a date on the calendar to assign that date to the Ex schedule pattern.
To deselect an Ex-schedule-pattern-assigned date, select the Week radio button and then click the date.
- Upon completion, click the “ ” button to return to the main scheduling screen.
In this screen you can enable the schedule program just created. By default it is disabled. Click the Enable radio button to enable it.

CAUTION

- Disabled schedule programs do not work.


The extra schedule patterns are now created.

8-6 Copying or Deleting a Schedule Program

To copy or delete a schedule program


- Click the “ ” button (1) in the main scheduling screen (Screen 1).

Screen 1: Main scheduling screen

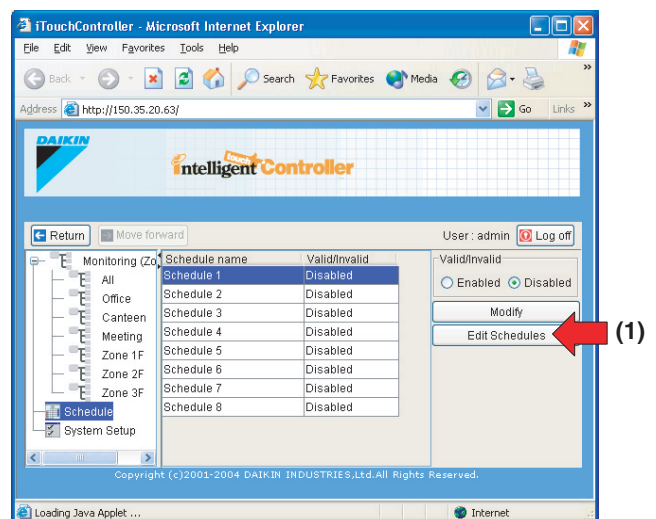

2. The Edit Schedule screen (Screen 2) appears.

Screen 2: Edit schedule screen

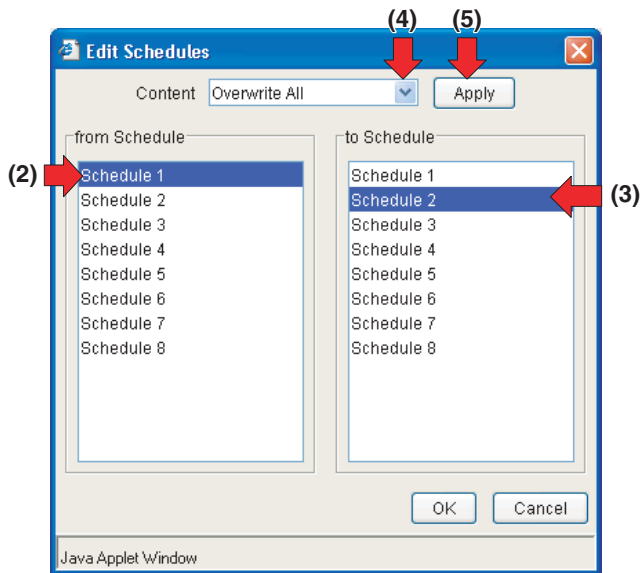

[Copy Procedure]

Select a source schedule program in the left list (2) and a target schedule program in the right list (3). In the example (Screen 2) the items of the Schedule 1 are copied to the Schedule 2. Then select a copy option in the pull down menu (4). The following options are provided

- All settings are overwritten.
- Only the calendar setting is overwritten.

Click the “ ” button (5).

Then click the “ ” button to complete the copy process.

[Deletion Procedure]

Select the schedule program to be deleted in the right list (3) and then choose a deletion option from the pull down menu (4). The following options are provided.

- All settings are deleted.
- Only the calendar setting is deleted.

Click the “ ” button (5).


Then click the “ ” button to complete the copy process.

8-7 Copying or Deleting Schedule Events

■ To copy or delete schedule events


1. Click the “ ” button (1) in the Schedule Setup screen (Screen 1).

Screen 1: Schedule Setup screen

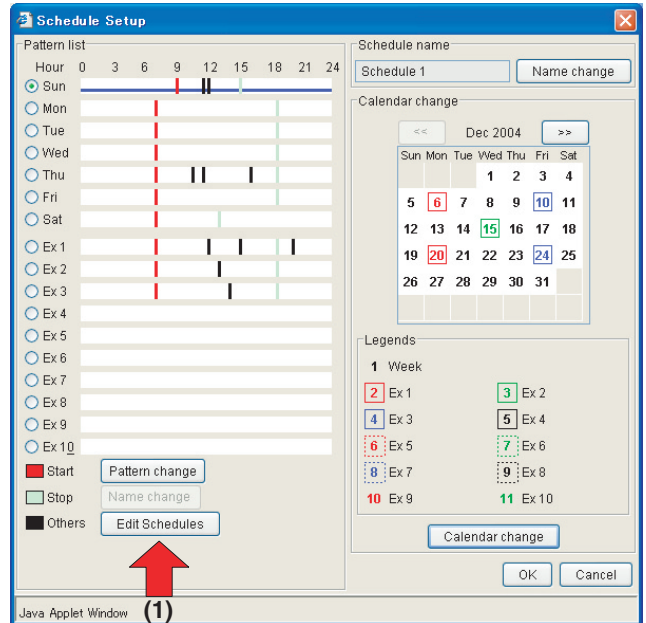

2. The Edit Schedule screen (Screen 2) appears.

Screen 2: Edit Schedule screen

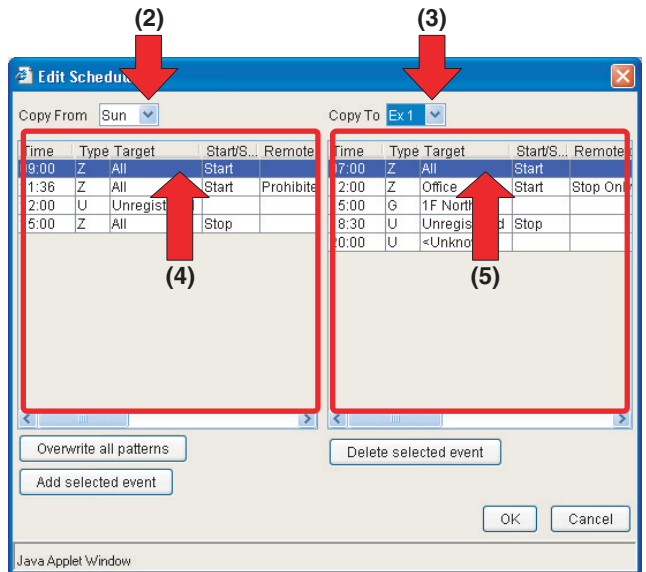

[Copy Procedure]

Select a source date in the left pull down menu (2) and a target date in the right pull down menu (3). The following two copy options are provided.

- 1) To overwrite all the events of the target date (3) with ones of the source date (2), click the “ ” button.
- 2) To insert an event selected in the left list (4) into the right list (5), select appropriate events and click the “ ” button.

[Deletion Procedure]

Select the date including the event to be deleted in the right pull down menu (3). Then choose the target event from the events displayed in the right list (5) and click the

“ Delete selected event ” button.

3. Then click the “ OK ” button to complete the copy process.


8-8 Naming a Schedule Program

■ To name a schedule program

1. Select the schedule program to be named in the list (1) on the main scheduling screen (Screen 1), and click the


“ Modify ” button.

Screen1: Main scheduling screen

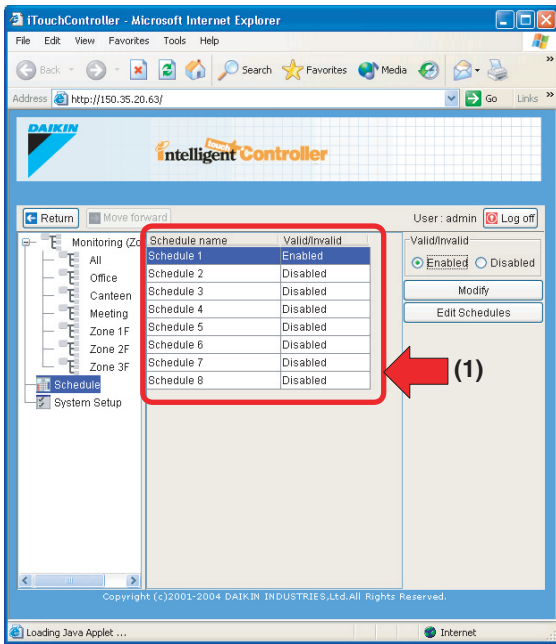

2. The Edit Schedule Setup screen (Screen 2) appears.


Screen 2: Schedule Setup screen

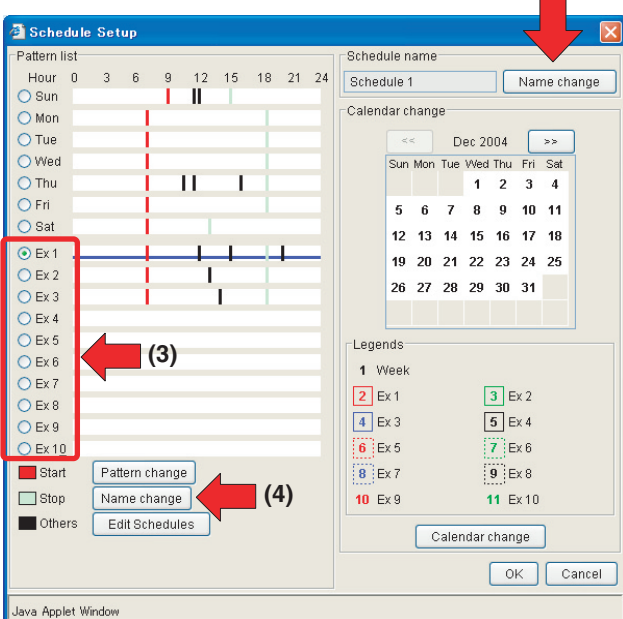


Click the “ Name change ” button (2).

3. The Name Change dialog box (Screen 3) appears. Enter a name into the field of this box. Up to 16 characters can be entered.

Screen 3:

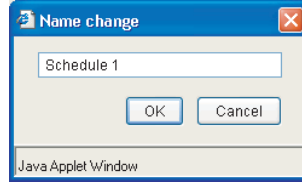

Screen 4:

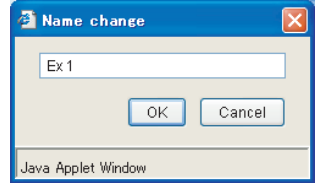

4. Click the “ OK ” button to complete this process.





5. To name an Ex schedule pattern, select the Ex schedule pattern from the list (3) on the Schedule Setup screen (Screen 2), and click the “ Name change ” button (4).

6. The Name Change dialog box (Screen 4) appears. Enter a name into the field of this box. Up to 16 characters can be entered.

7. Click the “ OK ” button to complete this process.

9. BEFORE CONTACTING US: TROUBLESHOOTING

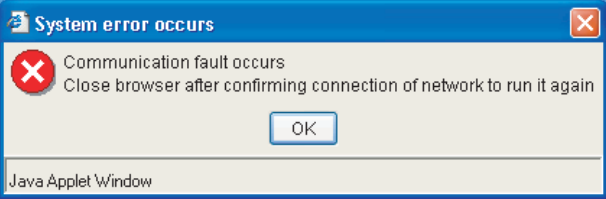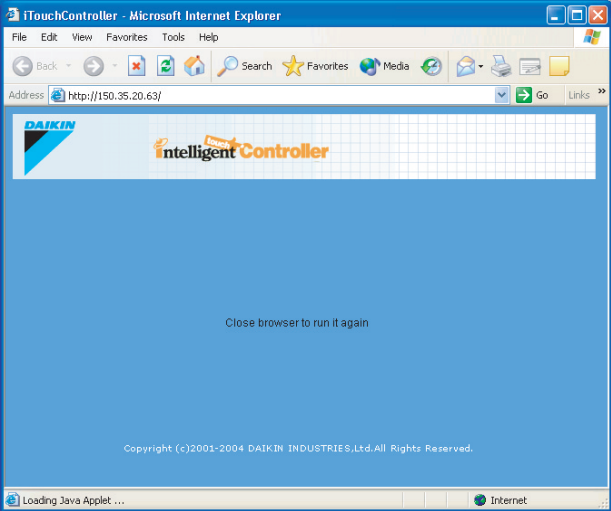Problems	Possible Reasons and Solutions
<p>Air conditioners are not operational, although I did not click the stop button on the web interface.</p>	<p>The most likely causes are:</p> <ol style="list-style-type: none"> 1. The air conditioners were stopped using the local remote controllers. 2. The air conditioners were stopped from the intelligent Touch Controller console or any centralized controller. 3. A power failure occurred. 4. A schedule program set via the web interface stopped the air conditioners. 5. The Heating Optimization function of the intelligent Touch Controller stopped the conditioners. <p>In the HEAT operation mode room temperature may increase if thermostats do not work. The function prevents this problem by automatically stopping air conditioners.</p> <p>For more information, refer to the intelligent Touch Controller operation manual.</p>
<p>Air conditioners are operational, although I did not click the start button on the web interface.</p>	<p>The most likely causes are:</p> <ol style="list-style-type: none"> 1. The air conditioners were started using local remote controllers. 2. The air conditioners were started from the intelligent Touch Controller console or any centralized controller. 3. A schedule program set via the web interface started the conditioners. 4. The Temperature Limit function of the intelligent Touch Controller started the air conditioners. <p>This function prevents room temperature from becoming extremely high or low by automatically starting air conditioners when a specified temperature threshold is exceeded.</p> <p>For more information, refer to the intelligent Touch Controller operation manual.</p>
<p>The temperature setting and/or operation mode of the air conditioner were changed, although I did not change these settings on the web interface.</p>	<p>The most likely causes are:</p> <ol style="list-style-type: none"> 1. The settings were changed using the local remote controllers. 2. The settings were changed from the intelligent Touch Controller console or any centralized controller. 3. A schedule program set via the web interface changed the settings. 4. The Change Over function of the intelligent Touch Controller changed the settings. <p>This function maintains optimal room temperature by automatically changing the operation mode and/or temperature setting according to the changing environment conditions.</p> <p>For more information, refer to the intelligent Touch Controller operation manual.</p>

Problems	Possible Reasons and Solutions
<p>The following dialog box appears stating that a communication error occurred, and I cannot operate the air conditioners from my PC.</p> <p>Screen 1:</p>  <p>Screen 2:</p> 	<p>The most likely causes are:</p> <ol style="list-style-type: none"> 1. Your PC is not cabled correctly to the intelligent Touch Controller. 2. The intelligent Touch Controller is turned off. <p>Clicking the OK button on the dialog box (Screen 1) displays the Screen 2. Close your browser software and then restart it.</p>
<p>I cannot access the intelligent Touch Controller web interface.</p>	<ul style="list-style-type: none"> • Your PC is not correctly connected to the network. • The intelligent Touch Controller address entered in the browser is incorrect. • The intelligent Touch Controller is turned off. • The network is congested for any reason. In this case wait for a while and then access it again.
<p>When accessing the intelligent Touch Controller web interface, the following screen appears.</p> 	<ul style="list-style-type: none"> • This message informs you that Java plugin is not installed or the version of the installed Java plugin is not supported. Install the correct version of Java plugin. Refer to "BEFORE STARTING" for more information. (See page 3)
<p>When accessing the intelligent Touch Controller web interface, the following screen appears.</p> 	<ul style="list-style-type: none"> • This message informs you that your browser does not support the frame function. Check you browser's specifications. Refer to "BEFORE STARTING" for more information. (See page 3)

Problems	Possible Reasons and Solutions
I can access the web interface. However it takes too much time to refresh the screen.	<ul style="list-style-type: none"> • The network may be congested for any reason. In this case wait for a while and then access it again.
The room temperature value on the intelligent Touch Controller web interface does not match the actual measurement value.	<ul style="list-style-type: none"> • Since the suction temperature of air conditioners is used, this may not reflect the actual measurement value, especially when the indoor unit's fans are stopped. This temperature value should be considered as a rough indicator.
Java plugin does not work correctly.	<ul style="list-style-type: none"> • Java plugin is not installed correctly. • The version of the installed Java plugin is not supported. <p>* The latest version may not be supported. Refer to "BEFORE STARTING" for more information. (See page 3)</p>

10. AFTER-SALES SERVICE

- To have the product repaired, prepare the following information

- | |
|---|
| <ul style="list-style-type: none"> • Model • Date of installation • Circumstances - as detailed as possible • Address, name, phone number |
|---|

- **Transfer**

Transfer requires professional technique. Be sure to contact the vendor you purchased the product from or service station.

The customer will be charged for the expense required for transfer work.

- **Questions**

For after-sales service, contact the vendor you purchased the product from or the nearest service station.

DAIKIN U.S. CORPORATION

1645 Wallace Drive, Suite 110
Carrollton, TX 75006

info@daikinac.com
www.daikinac.com

DAIKIN INDUSTRIES, LTD.

Head office:

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan