


Engineering Data

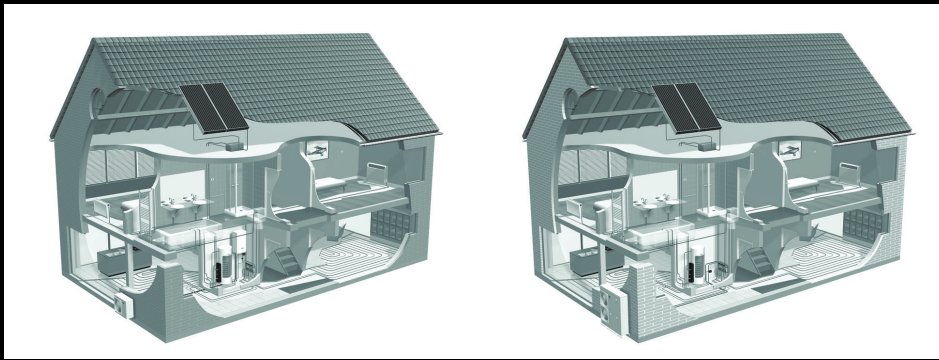

Daikin Altherma

R-410A

Daikin Altherma Engineering Data

Part 1: Overview

1. Daikin Altherma Overview	1
1.1 Daikin Altherma Split System	1
1.2 Daikin Altherma Monobloc System	2
1.3 System Configurations	3
2. The Basics of Daikin Altherma	4
2.1 Air-to-Water Heat Pump	4
2.2 Split Type	6
2.3 Monobloc	7
3. Model Identification.....	8
3.1 Outdoor Units	8
3.2 Indoor Units	8
3.3 Options	9
4. System and Design Operation Recommendations.....	10
5. Combination Overview	12
6. Split System Component Selection	13
7. Monobloc Component Selection.....	14

Part 2: ERLQ018_024_030BAVJU Split Type

1. ERLQ - Split System Outdoor Unit	15
1.1 Features	15
2. Specifications - Split System	16
3. Capacity Tables - Split System.....	19
3.1 Heating	19
3.2 Cooling	20
3.3 Altitude Correction	21
4. Dimensional Drawing - Split System	22
5. Center of Gravity - Split System	23
6. Piping Diagram - Split System.....	24
7. Wiring Diagram - Split Sytem	25
8. Sound Data - Split System	26
9. Installation - Split System	27
9.1 Installation Location	27
9.2 Installation Space	28
10. Operation Range - Split System.....	29

Part 3: EKHB_030BA Hydrobox

1. EKHB_030BA - Hydrobox	30
1.1 Features	30
2. Specifications - Hydrobox.....	31
3. Dimensional Dwg. & Center of Gravity- Hydrobox	34
4. Piping Diagram - Hydrobox	35
5. Wiring Diagram - Hydrobox	36
5.1 EKHB(H/X)030BA3VJU	36
5.2 EKHB(H/X)030BA6VJU	37
6. External Connection Diagram - Hydrobox.....	38
7. Condensate Instructions - Hydrobox	39
8. Hydrobox Installation Precautions.....	40
9. Application Examples - Hydrobox.....	41
10. Hydronic Performance - Hydrobox	45
11. Operation Range - Hydrobox	46

Part 2: ERLQ036_048_054BAVJU Split Type

1. ERLQ - Split System Outdoor Unit	47
1.1 Features	47
2. Specifications - Split System	48
3. Capacity Tables - Split System.....	51
3.1 Heating	51
3.2 Cooling	52
3.3 Altitude Correction.....	53
4. Dimensional Drawing - Split System	54
5. Center of Gravity – Split System	55
6. Piping Diagram - Split System.....	56
7. Wiring Diagram - Split Sytem	57
8. Sound Data - Split System	58
9. Installation - Split System	59
9.1 Installation Location	59
9.2 Installation Space	60
10. Operation Range - Split System.....	61

Part 5: EKHB_054BA Hydrobox

1. EKHB_054BA - Hydrobox	62
1.1 Features	62
2. Specifications - Hydrobox.....	63
3. Dimensional Dwg. & Center of Gravity- Hydrobox	65
4. Piping Diagram - Hydrobox	66
5. Wiring Diagram - Hydrobox	67
5.1 EKHB(H/X)054BA3VJU	67
5.2 EKHB(H/X)054BA6VJU	68
6. External Connection Diagram - Hydrobox.....	69
7. Condensate Instructions - Hydrobox	70
8. Hydrobox Installation Precautions.....	71
9. Application Examples - Hydrobox.....	72

10. Hydronic Performance - Hydrobox	76
11. Operation Range - Hydrobox	77

Part 6: EDLQ / EBLQ_036_048_054 Monobloc

1. Monobloc - EDLQ / EBLQ	78
1.1 Features	78
2. Specifications – EDLQ – Heat Only	79
3. Capacity Tables – EDLQ – Heat Only	83
4. Specifications – EBLQ Heat Pump.....	84
5. Capacity Tables – EBLQ – Heating.....	88
6. Capacity Tables – EBLQ – Cooling	89
6.1 Altitude Correction	90
7. Dimensional Drwg. & Center of Gravity - Monobloc	91
8. Piping Diagram - Monobloc	92
9. Wiring Diagram - Monobloc	93
9.1 Wiring Diagram	94
9.2 External Connection Diagram - Monobloc	95
10. Sound Data - Monobloc.....	96
10.1 Sound Pressure Spectrum - Normal Operation	96
10.2 Sound Pressure Night Quiet Mode	96
11. Application Examples - Monobloc	97
12. Installation - Monobloc.....	102
12.1 Installation Location	102
12.2 Installation Space	103
13. Hydronic Performance - Monobloc.....	104
14. Glycol Correction Factors-Power Input & Capacity	105
15. Glycol Correction Factors - Flow Rate & Pressure Drop.....	106
16. Operation Range - Monobloc	107

Part 7: EKHWS050_080BA3VJU Domestic Hot Water

1. Domestic Hot Water Tank	108
1.1 Features	108
2. Specifications - DHW.....	109
3. Domestic Hot Water Basic Performance Overview	110
4. Dimensional Drawing & Center of Gravity - DHW	111
4.1 Domestic Hot Water Tank Summary	112
5. Three-Way Valve Summary	113

Part 8: Options

1. Solar Kit (EKSOLHWBAVJU)	115
1.1 Features	115
1.2 Specifications – Solar Kit	116
1.3 Dimensional Drwg. & Center of Gravity - Solar Kit	117
1.4 Piping Diagram - Solar Kit	118
1.5 Wiring Diagram - Solar Kit	119
2. Room Thermostat – EKRTWA	120
2.1 Specifications - Room Thermostat	121
2.2 Dimensions - Room Thermostat	122

2.3 Application Example - Room Thermostat	123
2.4 Wiring Connection - Room Thermostat	124
2.5 User Display - Room Thermostat	125
2.6 Functional Summary - Room Thermostat	126
3. Condensate Kit – EKHBDP	127
4. Digital I/O PCB Kit – EKRP1HBAAU	128
5. DHW Kit Option - DACA - DHW Kit -1	129
6. BSP to NPT Adaptor Kits.....	131

Part 9: Field Setting Overview / Appendix

1. Field Setting Overview.....	135
--------------------------------	-----


1. Daikin Altherma Overview

1.1 Daikin Altherma Split System


Daikin Altherma is a Total Comfort air-to-water heat pump system that utilizes an outdoor R-410A heat pump system, with Inverter controlled compressor, to extract heat from the outdoor air and transfers this heat through refrigerant piping to a refrigerant-to-water cupro-nickel brazed plate heat exchanger in the hydrobox (indoor unit on split system and incorporated in the outdoor unit on the monobloc). The hydrobox circulates the heated water through low temperature heat emitters (low temperature radiators, floor heating systems and fan coil units) and also provides domestic hot water (DHW) with the optional DHW tank (316L stainless steel heat exchanger and tank). The heat pump version of the hydrobox can reverse the cycle and provide chilled water for cooling through fan coil units (fan coil units for cooling are field supplied and must have a condensate drain pan). Daikin Altherma can heat spaces, produces domestic hot water and with the heat pump version hydrobox or monobloc can cool spaces.

The high coefficient of performance (COP) of the Daikin Altherma heat pump is largely attributed to the Daikin inverter principle. An integrated frequency converter adjusts the rotational speed of the compressor to suit the heating (cooling) demand. The system seldom operates at full capacity and maximizes efficiency by controlling the compressor rpm.

Daikin Altherma Split System

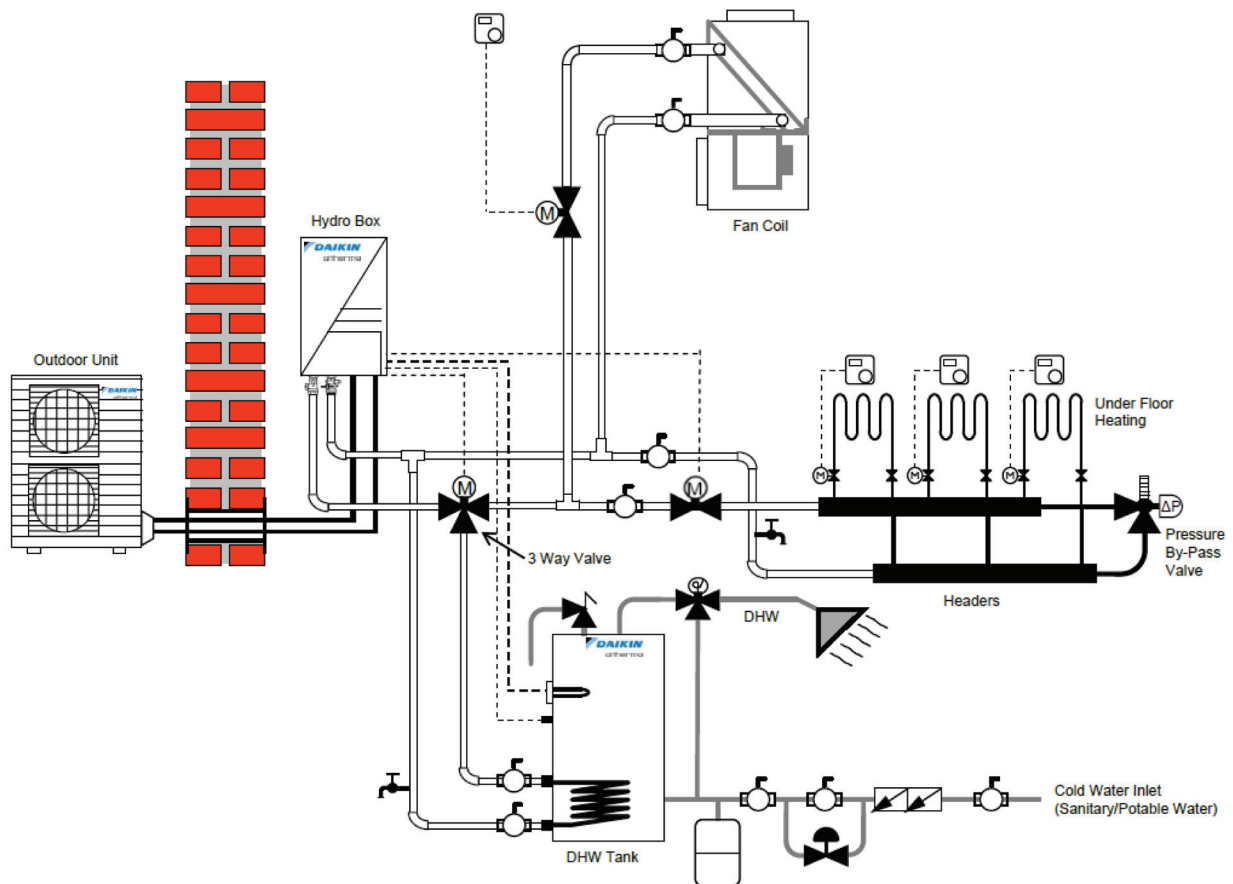

1.2 Daikin Altherma Monobloc System

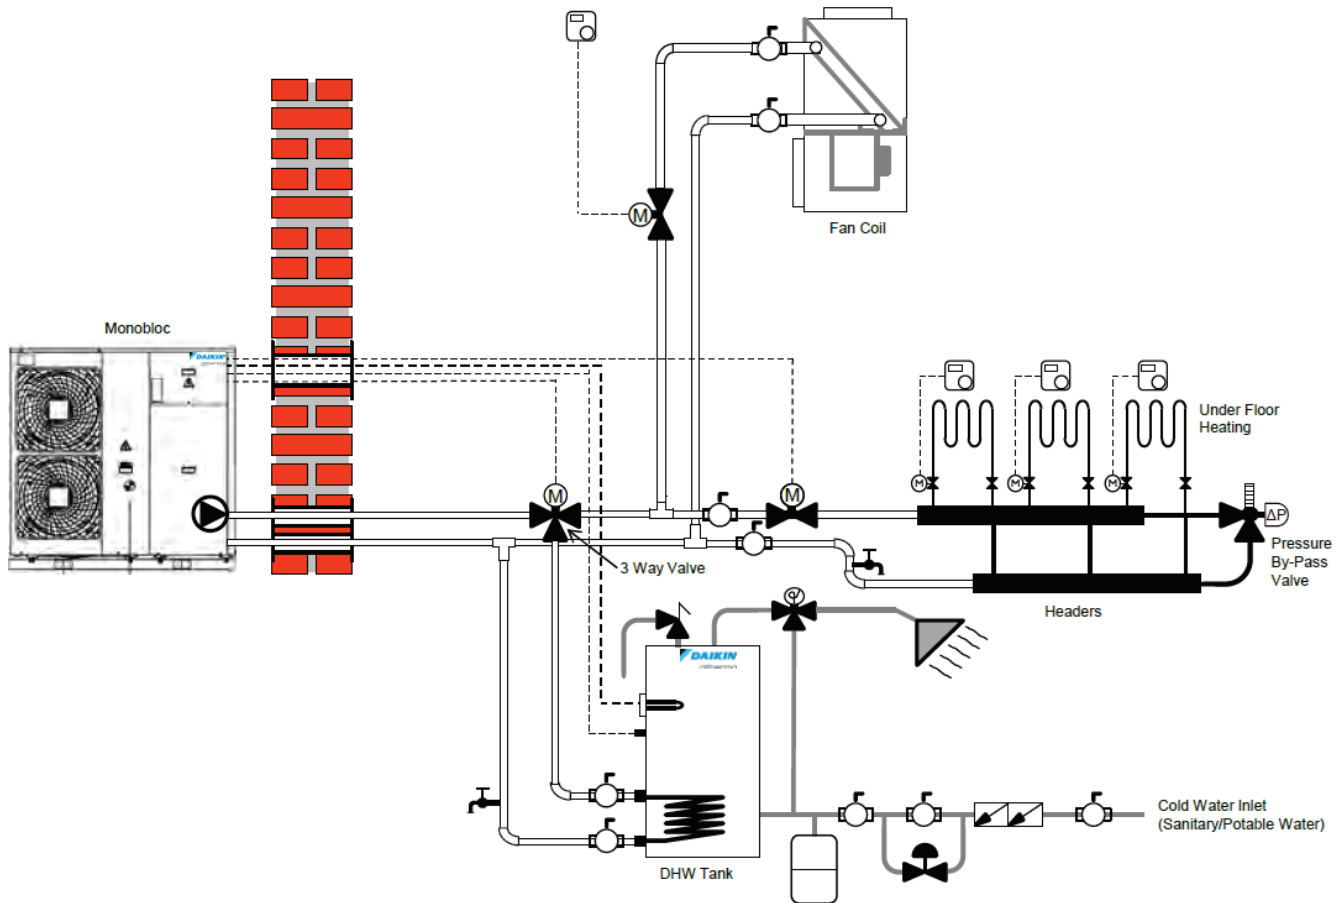

Design Considerations:

Minimum water volume : 5.3 gallons

Heat Exchanger never exceeds 121°F (55°C)

Maximum water temperature: 149°F (65°C)



Maximum water pressure: 43.5 psi (3 bar)

NOTE: Never set the target leaving-water temperature setpoint on boiler controller: 131°F (55°C)

1.3 System Configurations



MONO-VALENT

- Uses heat pump energy only
- Ideal for new construction
- 100% heat pump coverage: selection of bigger capacity and higher investment cost heat pump

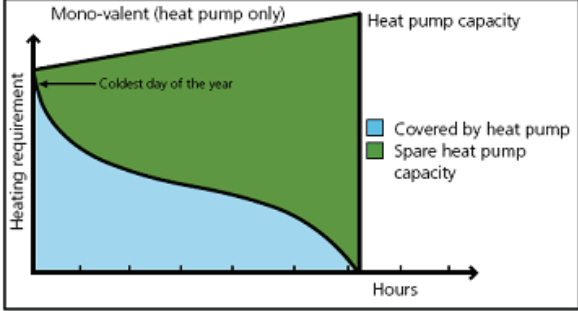MONO-ENERGETIC


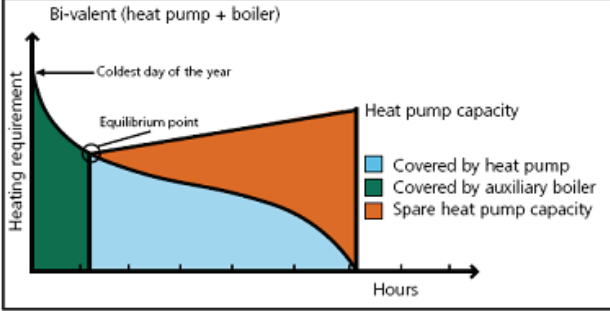
- Uses heat pump energy with backup electric heater
- Ideal for new construction
- Best balance between investment cost and running cost, results in lowest lifecycle cost

*Back up heater is mounted inside the hydrobox

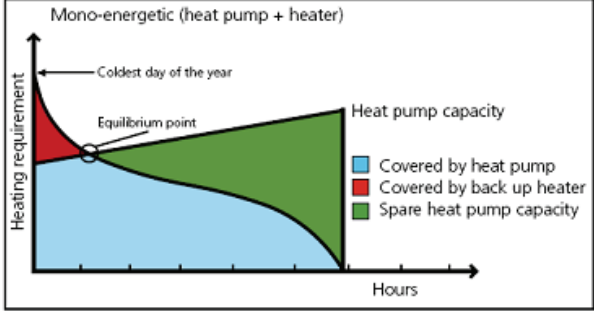BI-VALENT

- Uses heat pump energy with auxiliary boiler
- Ideal for refurbishment/upgrade

SPACE HEATING WITH AN AUXILIARY BOILER

1. Space heating application by either the Daikin Altherma Hydrobox or by an auxiliary boiler connected in the system.
2. An auxiliary contact decides whether the Hydrobox or the boiler will operate.
3. The auxiliary contact can be an outdoor temperature thermostat, an electricity tariff contact, a manually operated contact, etc...
4. Domestic hot water in such an application is always produced by the system tank connected to the Hydrobox, including when the boiler is in operation for space heating.

Selection Conditions

Typical conditions for the heating LWT are:

86 to 95° F (at design conditions) for floor heating

86 to 113° F (at design conditions) for fan coil units

104 to 122° F (at design conditions) for low temperature radiators

2. The Basics of Daikin Altherma

2.1 Air-to-Water Heat Pump



THE BASICS

AIR-TO-WATER HEAT PUMP

The system consists of 5 components which together to provide the ideal comfort and water temperature.

1A/ OUTDOOR UNIT :

AN EFFICIENT USE OF ENERGY FROM THE AIR

Daikin Altherma uses a natural source of energy. The outdoor unit extracts heat from the outside air and transfers it inside through refrigerant piping to supply heating. The compact outdoor unit is easily installed and, as no drilling or excavation work is required, it can also be installed in condos and apartments.

1B/ HYDROBOX :

THE HEART OF THE DAIKIN ALTHERMA SYSTEM


The hydrobox heats the water that circulates through low temperature radiators, floor heating systems or fan coil units and also provides domestic hot water. If you opt for the combination of heating and cooling, then the hydrobox can also reverse the cycle to provide lower water temperatures and thus cooling to the home.

2/ DOMESTIC HOT WATER TANK :

FOR LOW ENERGY CONSUMPTION

As for your domestic hot water, Daikin Altherma is just as clever. The unique lay-out and special placement of the system components maximize energy efficiency. The water inside the storage tank is primarily warmed up by thermal energy from the outside air, thanks to a heat exchanger connected to the heat pump. However, an additional electrical heating element in the domestic water tank can take care of extra heat

required in the shower, tub or sink. At necessary intervals the water is automatically heated to 158°F or more to prevent the risk of bacteria growth. With Daikin Altherma, delightfully warm and perfectly safe water can be enjoyed at all times. Depending on the daily consumption of hot water, Daikin Altherma domestic hot water tanks are available in two different sizes.

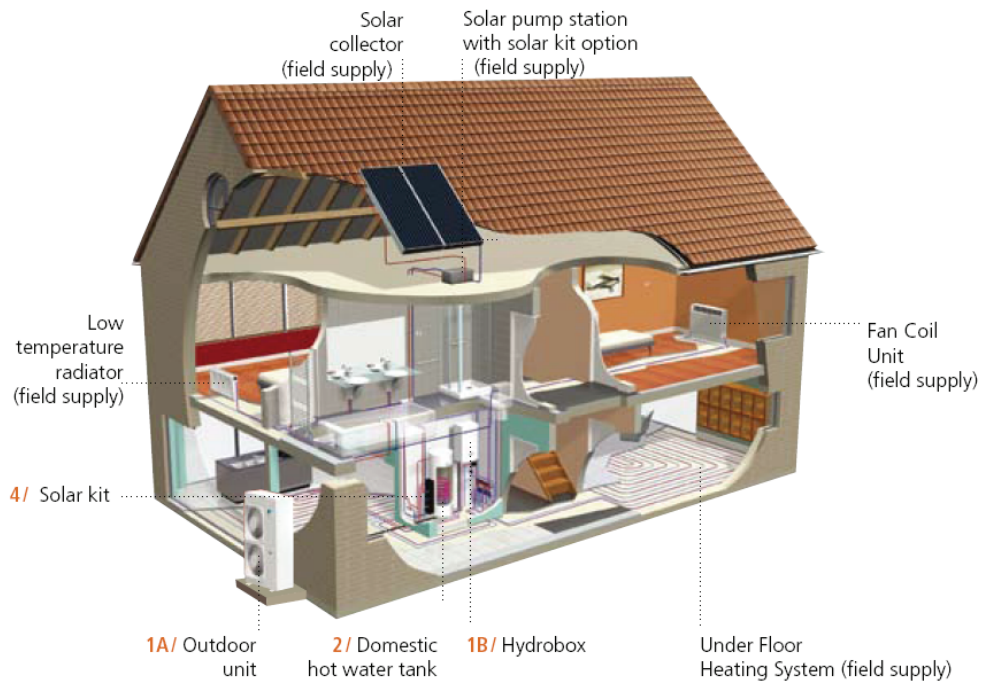

3/ MONOBLOC OUTDOOR UNIT: ALL IN ONE

In addition to Daikin Altherma Split type systems, Daikin has a monobloc version in which the hydrobox components are located within the outdoor unit. In this new system, the water pipes, rather than refrigerant


lines, run indoors from the outdoor unit, making installation much quicker and easier for the installer.

4/ SOLAR KIT

The solar kit provides the transfer of solar heat to the Daikin Altherma hot water tank via an external heat exchanger. In contrast to tanks with two heat exchangers, this system allows the entire content of the tank to be efficiently heated with solar heat and, if necessary, with heat pump energy.


5/ ROOM THERMOSTAT

With the wired room thermostat, the ideal temperature can be easily, quickly and conveniently regulated.

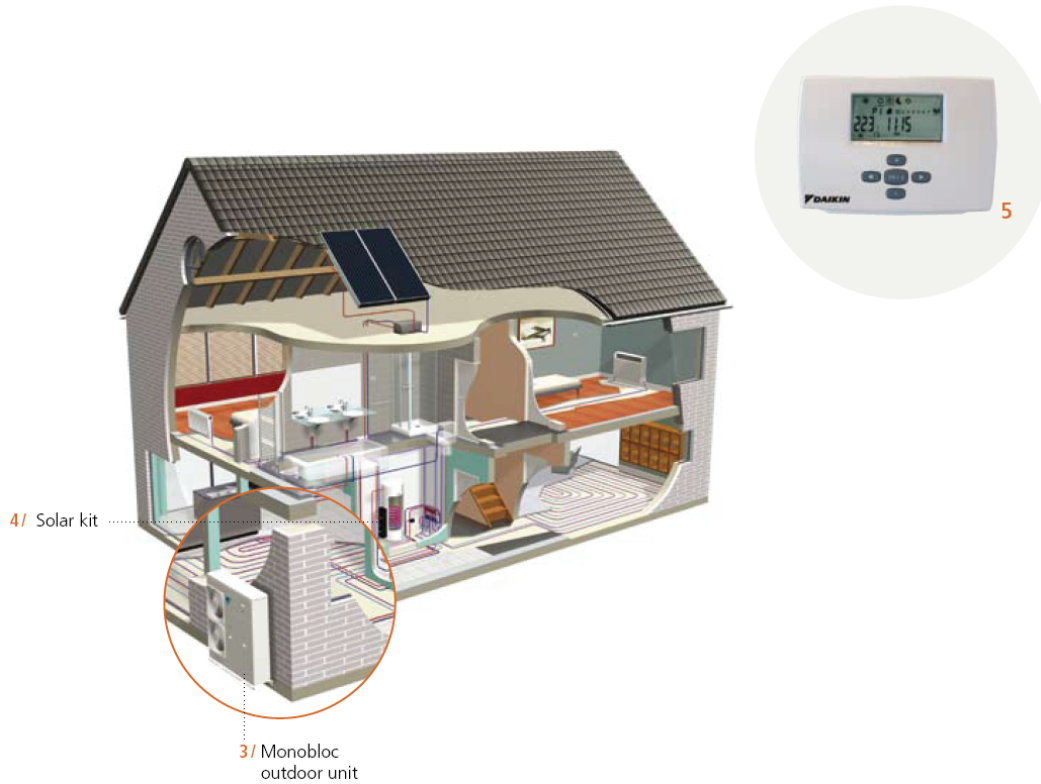

2.2 Split Type

Daikin offers you the choice between a Daikin Altherma system with an outdoor unit and indoor unit, or a Daikin Altherma Monobloc System, in which the hydrobox components are located within the outdoor unit.

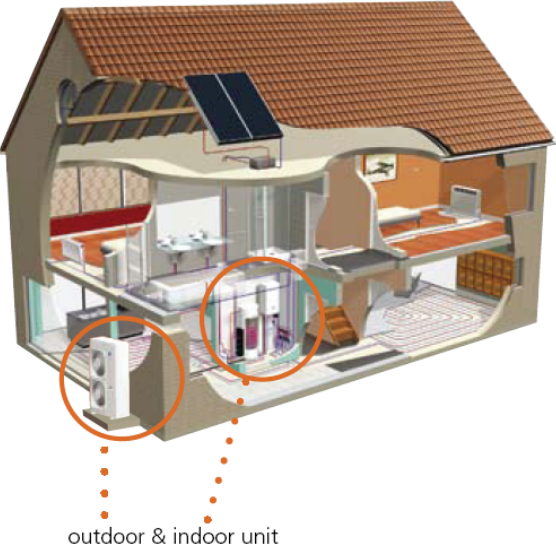	DAIKIN ALTHERMA SPLIT TYPE
Application	Heating and (optional) cooling (+ domestic hot water)  <p style="text-align: center;">outdoor & indoor unit</p>
Heat pump type	Outdoor (compressor) unit + Indoor (hydronic parts) unit
R-410A refrigerant piping	Between outdoor unit and indoor unit
H ₂ O piping	Between indoor unit and indoor heating appliances
Installer's advantages	No extra insulation of H ₂ O piping required to protect from freezing up


The Split system can be combined with

- Under floor heating
- Fan coil units
- Low temperature radiators to provide your customers the comfort they require.

In addition, the Split system can be connected to

- A domestic hot water tank to supply your customer's hot water needs
- Solar collectors, with optional solar kit, to compliment the production of hot water
- A room thermostat, to regulate the ideal temperature easily, quickly and conveniently.

2.3 Monobloc

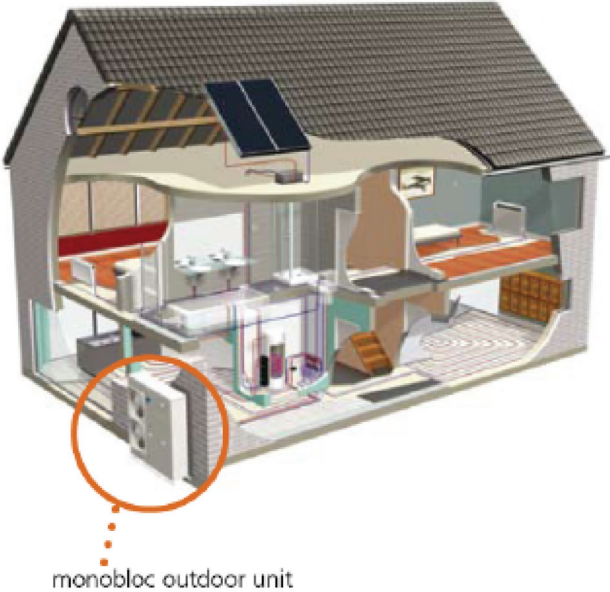	<p>DAIKIN ALTHERMA MONOBLOC</p>
Application	<p>Heating and (optional) cooling (+ domestic hot water)</p>  <p>monobloc outdoor unit</p>
Heat pump type	Outdoor unit only (compressor and hydronic parts combined)
R-410A refrigerant piping	Inside outdoor unit
H ₂ O piping	Between outdoor unit and heating terminal units
Installer's advantages	Only H ₂ O piping needed to install the system

The monobloc system can be combined with



- Under floor heating
- Fan coil units
- Low temperature radiators to provide your customer the comfort they require.

In addition, the monobloc system can be connected to


- A domestic hot water tank to supply your customer's hot water needs
- Solar collectors, with optional solar kit, to compliment the production of hot water
- A room thermostat, to regulate the ideal temperature easily, quickly and conveniently.

3. Model Identification

3.1 Outdoor Units

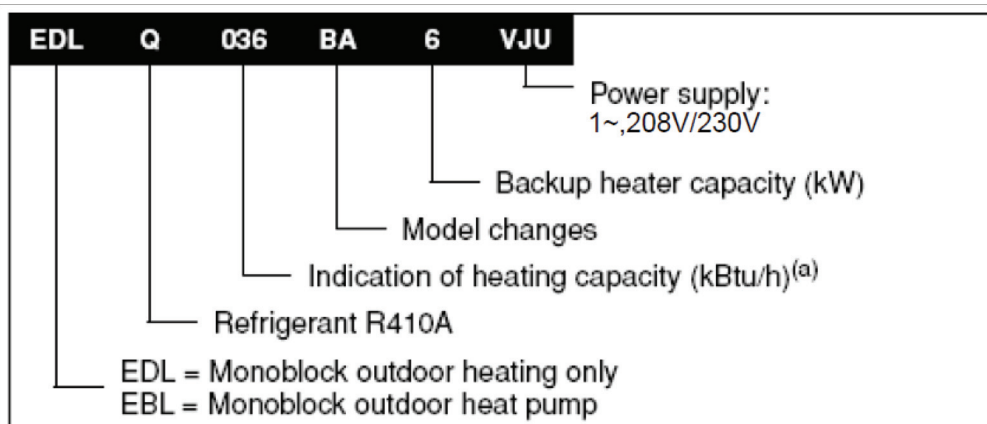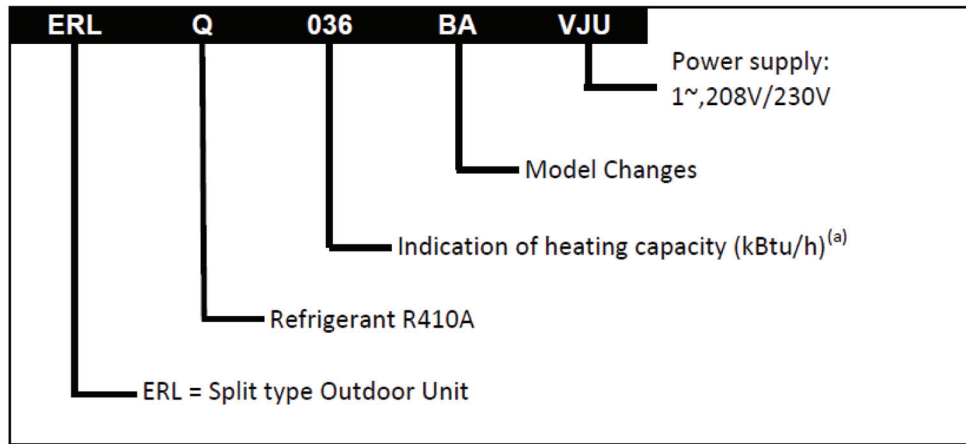


3.2 Indoor Units

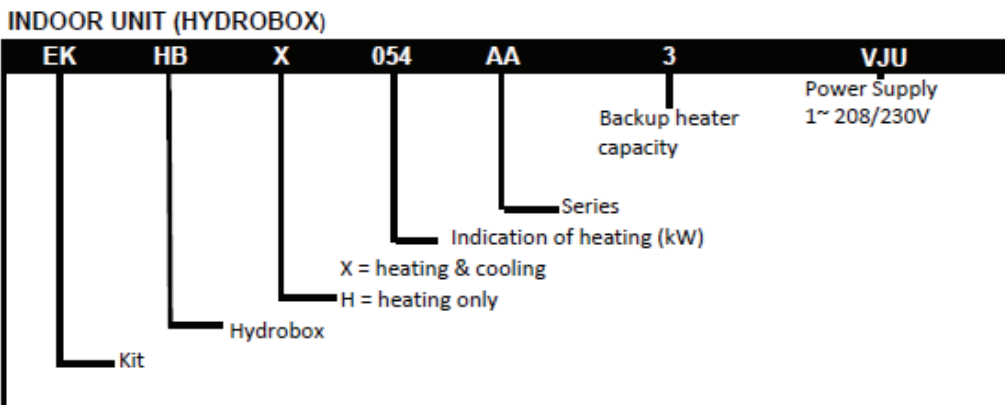


3.3 Options


DOMESTIC HOT WATER TANK

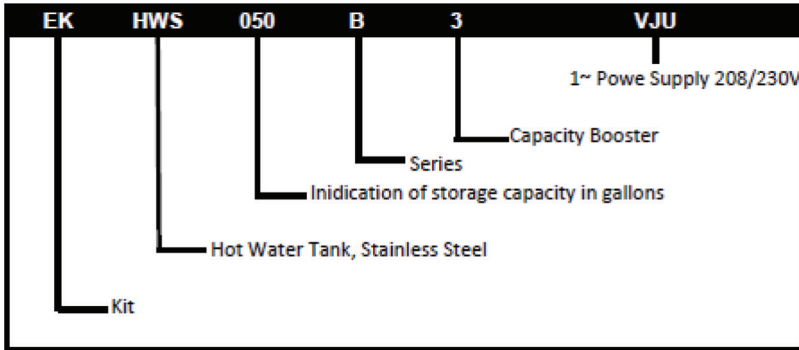


CONDENSATE KIT (required with EKHBX Hydrobox)

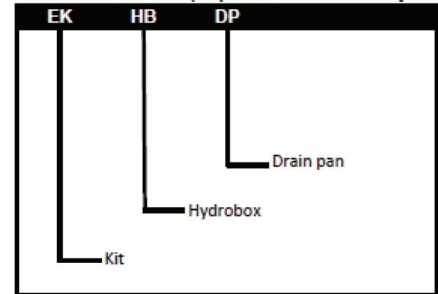


SOLAR PUMP KIT

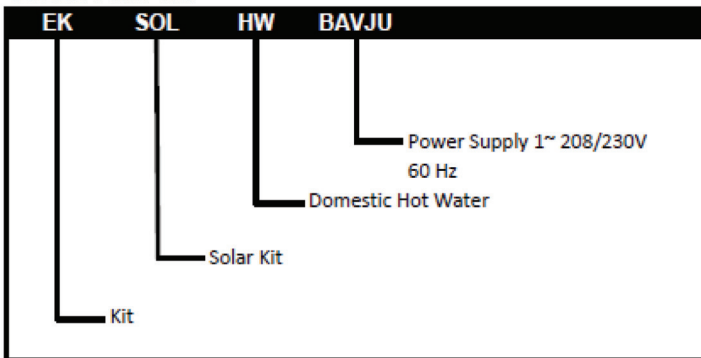

REMOTE WIRED THERMOSTAT

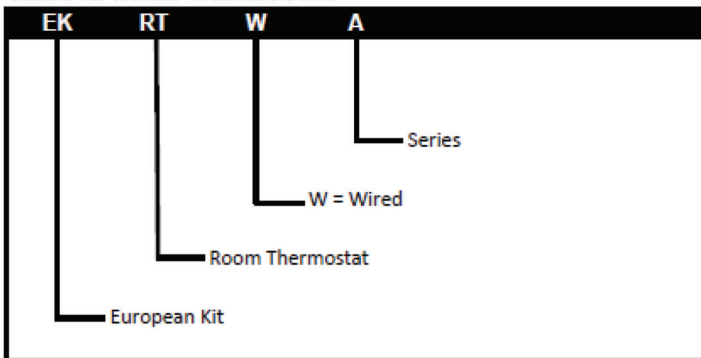

DIGITAL I/O PCB

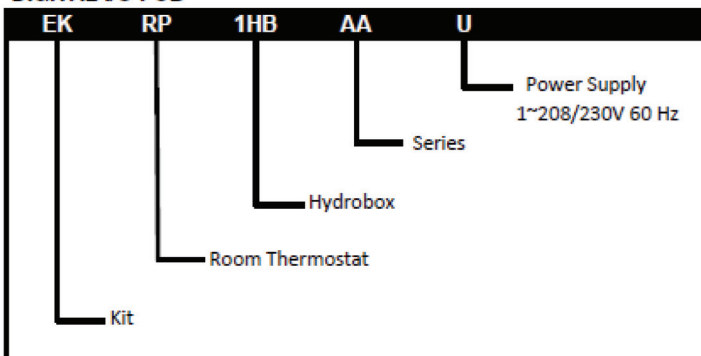

4. System and Design Operation Recommendations

Three (3) steps for a good design:

1. Accurate calculations of heat losses (transmission and ventilation losses).
2. Selection of Daikin Altherma based on heat loss calculation and preferably for low water temperature application (95°F/35°C to 104°F/40°C). Use the available Daikin Altherma selection and software tools.
3. Selection of heat emitters should be based on design ΔT of 9°F/5°C for optimum efficiency and capacity. The actual heat emitter ΔT can be designed between 5°F/3°C to 14°F/8°C. The circulator in the hydrobox section has a three speed motor and is factory set on high speed; remember to match the circulator speed with the required system flow (lower circulator speed can be selected at lower flow and head). If the system flow exceeds 12 gpm @ approximately 10 feet of head, a primary/secondary hydronic piping system is recommended.

Design hint: If the heat losses exceed the single total Altherma capacity at design ambient conditions, multiple Altherma systems may be used in unison to aid greater DHW consumption or larger heating loads in single zones. For multiple zones it is highly recommended to utilize multiple (separate) systems. Daikin Altherma can also be applied using an auxiliary boiler connected in parallel (Bi-Valent application)

Recommended Altherma leaving water temperature (LWT) selections conditions:

86°F/30°C to 95°F/35°C (at design conditions) for floor heating

86°F/30°C to 113°F/45°C (at design conditions) for fan coil units

104°F/40°C to 122°F/50°C (at design conditions) for low temperature radiators

Operating the System:

To get the most comfort with the lowest energy consumption with Daikin Altherma, it is very important to observe the following items:

- Define possible schedule timer actions for each day by filling out the form at the end of the operation manual can help minimize energy consumption.
- Make sure the heat pump system works at the lowest possible hot water temperature to heat the home. To optimize this, make sure the weather dependent set point (outdoor reset) is used and configured to match the installation environment (use the available selection and software tool).

Next recommendations apply to installations with an optional domestic hot water (DHW) tank:

- Make sure the DHW is only heated up to the hot water temperature required.
- Optimize the scheduling of DHW operation of the Altherma system so that DHW is heated via the system 1-2hrs prior to the DHW being required (refer to the schedule timer function and programming explained in the users operation manual)

Quote #:

Daikin Altherma Checklist
Low Temperature Model



Job Name: _____
Customer: _____
Contact: _____

Date: _____
Required by: _____
PO: _____

A) Sizing Information: Outdoor Temperature Where Heat Loss = Zero: _____ Night Setback Temperature: _____
Outdoor Temperature Where Cooling load = Zero: _____
Heat Loss: _____ Btu/h Heating Months: _____ Cooling Months: _____
Heat Gain (if cooling): _____ Btu/h Total Area: _____ Square Feet
Energy Cost: Electricity _____ kW; Gas _____ Therm; Oil _____ gal Peak / Standard Demand Charge Period: _____
Details: _____

B) System Selection:

System Layout:
 Split System-Small Capacity (018,024,030) (R410A piping to indoor hydrobox)
 Split System-Large Capacity (036,048,054) (R410A piping to indoor hydrobox)
 Monobloc (packaged unit) (H₂O piping to inside) (6kW 2-stg backup heater)

System Type:
 Heating Only (EKHBH-Split System / EDLQ-Monobloc)
 Heat Pump (Heating & Cooling) (EKHBX-Split System / EBLQ-Monobloc)
 Backup heater selection is not applicable to Monobloc
 3 kW Backup heat cap.
 6kW Backup heat cap. 2-stage

System Criteria:
 Heating (LWT _____ °F/°C) (Maximum temperature 131°F / 55°C)
 Cooling (LWT _____ °F/°C) (EKBDHP Condensate Kit Required)
 DHW (Water Temp _____ °F/°C)

System Source:
 100% Heat Pump (Mono-Valent)
 Heat Pump w/Electric Heater (Mono-Energetic)
 Heat Pump with Auxiliary Boiler (Bi-Valent)

Heat Emitters: Dual Setpoint Temperature: _____ high _____ low

Type	Heat or Cool	Capacity Btu/h	CFM-Fan Coil	Additional Heat Emitter Specifications
Radiant Floor	_____	_____	_____	_____
86 to 95°F / 30 to 35°C	_____	_____	_____	_____
Fan Coil	_____	_____	_____	_____
86 to 113°F / 30 to 45°C	_____	_____	_____	_____
Low Temp Radiators	_____	_____	_____	_____
104 to 122°F / 40 to 50°C	_____	_____	_____	_____

Domestic Hot Water:
 50 Gallon (Integrated 3kW booster heater)
 80 Gallon
 DACA-DHWKIT-1 (Optional DHW Connection Kit)
 Optional Solar Kit (Connection kit to storage tank only)

Option:
 I/O Control Board Interface (PCB)

BSP to NPT Adaptor:

Hydrobox Inlet/Outlet	3-Way Valve	DHW Tank Inlet / Outlet
<input type="checkbox"/> DACA-HBA-1: 1-1/4"(F)BSPT X 1-1/4"(M)NPT	<input type="checkbox"/> DACA-3WVTH-1: 1"(M)BSPT X 1"(F)NPT	<input type="checkbox"/> DACA-THXA-1: 3/4"(M)BSPP X 3/4"(F)NPT
<input type="checkbox"/> DACA-HBA-2: 1"(F)BSPT X 1"(M)NPT	<input type="checkbox"/> DACA-3WVTA-1: 1"(M)BSPT X 1-1/4"(F)NPT	Water Inlet / Outlet
<input type="checkbox"/> DACA-HBA-3: 1-1/4"(M)BSPP X 1-1/4"(M)NPT		<input type="checkbox"/> DACA-DHWTA-1: 3/4"(M)BSPT X 3/4"(F)NPT

Thermostats:
 Daikin Thermostat (EKRTWA) (Wired to hydro box)
 Zone Thermostats (by others)
 Room Thermostat (by others) (Wired to hydro box) Must have 6min. run time

Notes:

5. Combination Overview

Daikin Altherma Split System Combination Overview	Hydrobox Heating Only		Hydrobox Heat Pump (Reversible)		Hydrobox Heating Only		Hydrobox Heat Pump (Reversible)	
	EK1BH030BA3V1U	EK1BH030BA6V1U	EK1BH030BA3V1U	EK1BH030BA6V1U	EK1BH054BA3V1U	EK1BH054BA6V1U	EK1BH054BA3V1U	EK1BH054BA6V1U
ERL0018BAV1U	X	X	X	X				
ERL0024BAV1U	X	X	X	X				
ERL0030BAV1U	X	X	X	X				
ERL0036BAV1U								
ERL0048BAV1U								
ERL0054BAV1U								
DHW Tank (50 gal)	X	X	X	X				
DHW Tank (80 gal)	X	X	X	X				
Digital I/O PCB	1	1	1	1	1	1	1	1
Solar Pump Kit	2	2	2	2	2	2	2	2
Wired Thermostat	X	X	X	X	X	X	X	X
Condensate Kit	N/A	N/A	3	3	N/A	N/A	3	3


Daikin Altherma Monobloc Combination Overview	Monobloc Heating Only		Monobloc Heat Pump (Reversible)	
	EDLQ036BA6V1U	EDLQ048BA6V1U	EDLQ054BA6V1U	EBLQ036BA6V1U
DHW Tank (50 gal)	X	X	X	X
DHW Tank (80 gal)	X	X	X	X
Digital I/O PCB	1	1	1	1
Solar Pump Kit	2	2	2	2
Wired Thermostat	X	X	X	X
Condensate Kit	N/A	N/A	N/A	N/A

Notes:

- X - Can be applied
- 1 - Applied with Solar Pump Kit (DHW solar priority); alarm output; Bi-Valent operation (auxiliary boiler)
- 2 - Can be applied with DHW Tank (thermal solar panels and pump station to be field supplied)
- 3 - Must be applied with Heat Pump Hydrobox

6. Split System Component Selection


Daikin Altherma Split System Component Selection (All Outdoor units have base pan heater)

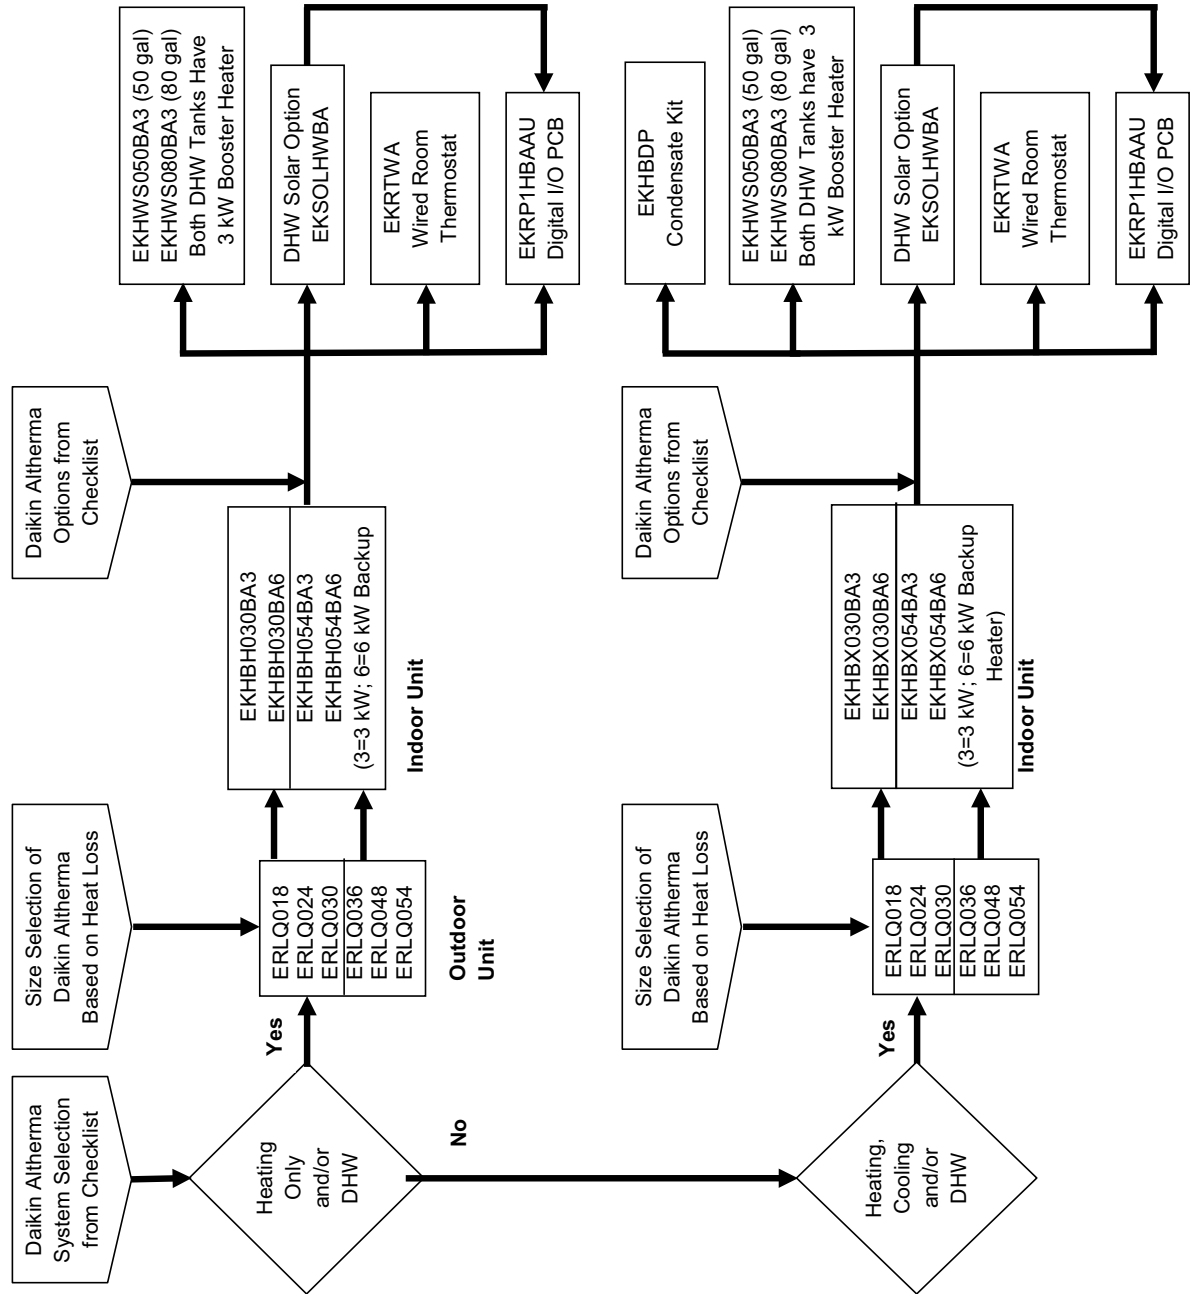

7. Monobloc Component Selection




Daikin Altherma Monobloc System Component Selection (All monobloc units have base pan heater)

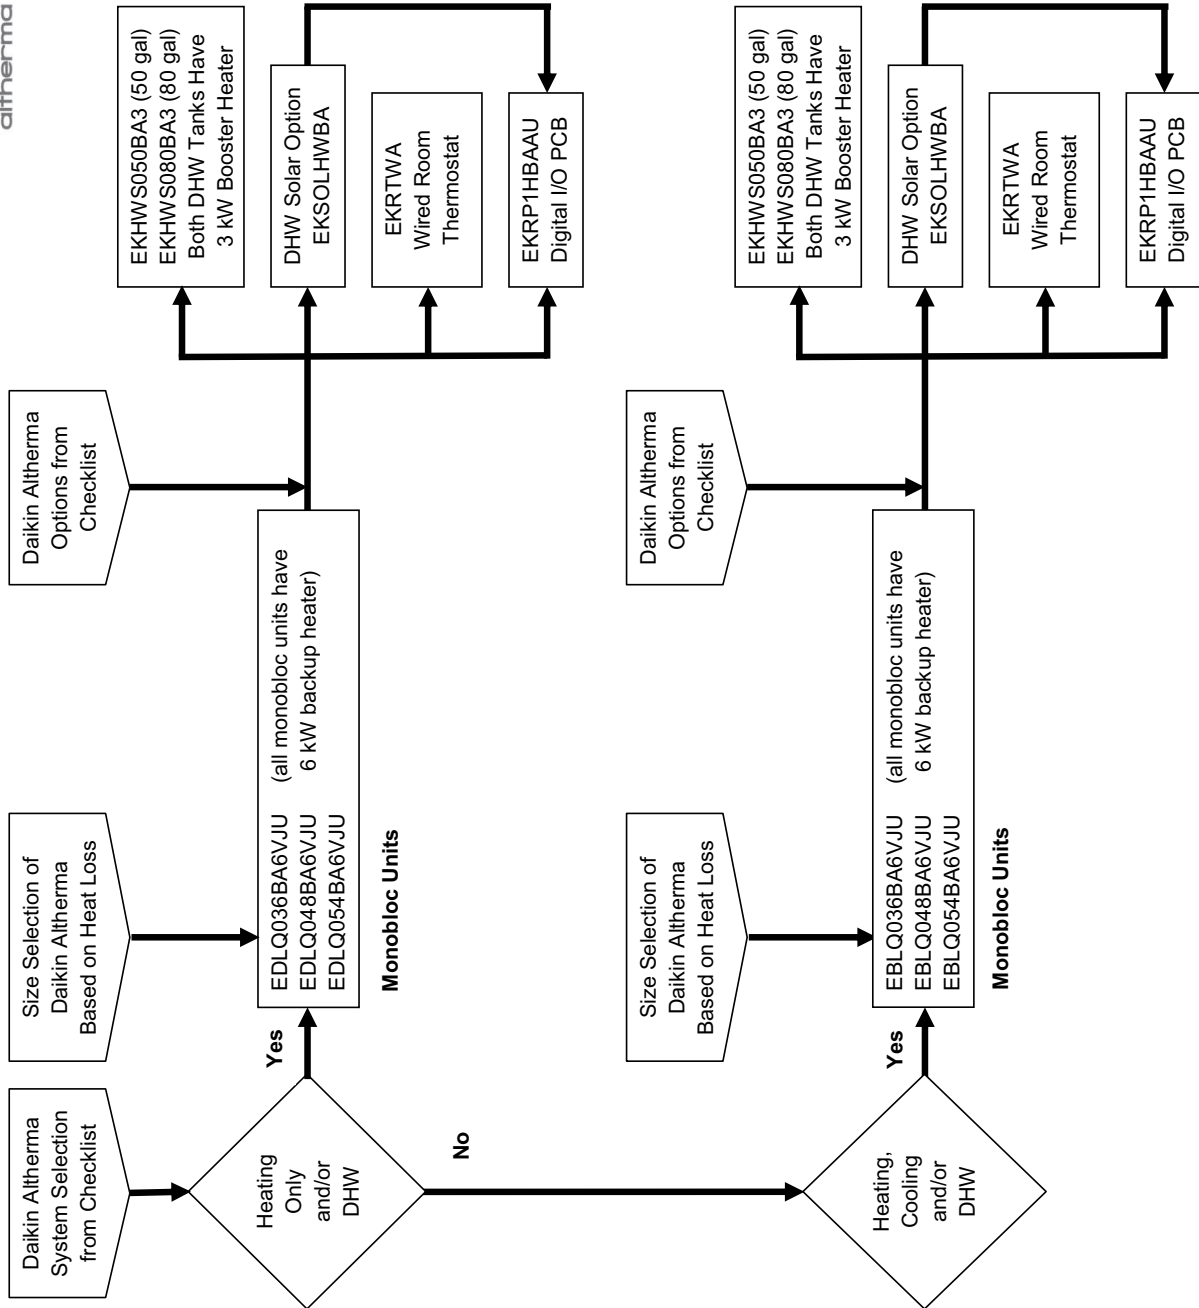

1. ERLQ - Split System Outdoor Unit

1.1 Features

- Inverter operated compressor
- Single phase large capacity outdoor unit (018, 024, 030)
- Cost effective alternative to a fossil fuel boiler
- Low energy bills and low CO2 emissions
- Easy to install
- Total solution for year round comfort
- Anti-corrosion treatment on outdoor coil
- Bottom base pan heater to improve water drainage during defrost
- Excellent solution for multi-family applications requiring heating, cooling, and DHW.

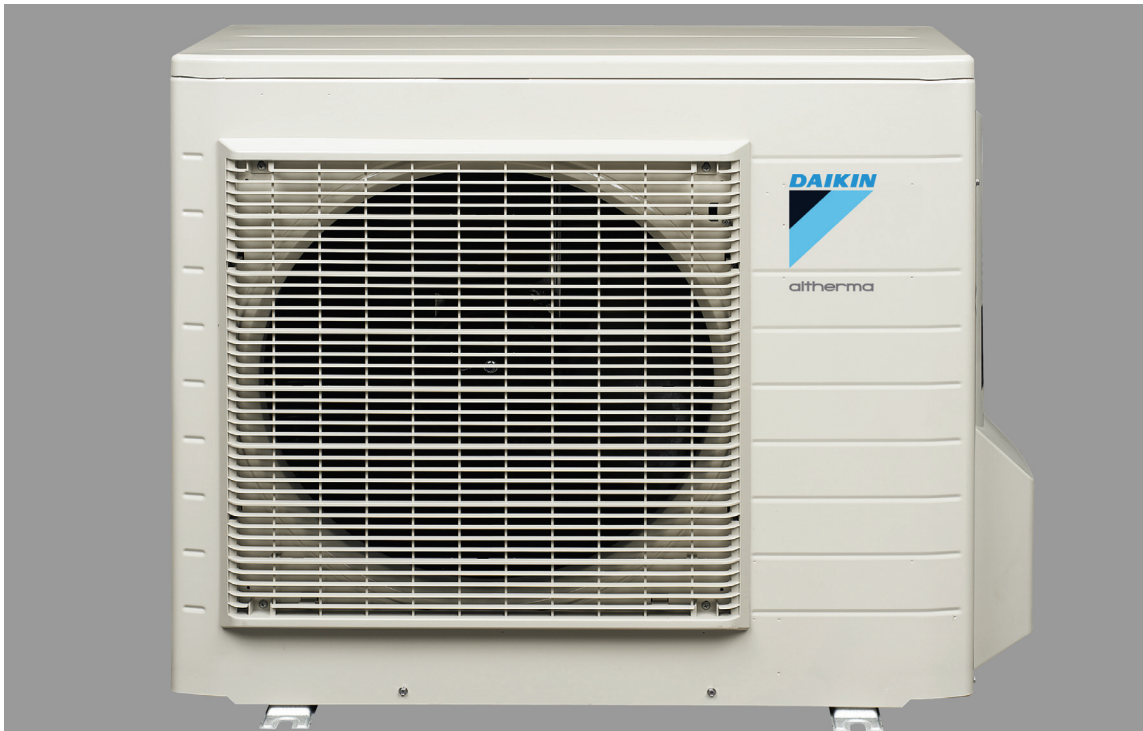

ERLQ outdoor units are combined with an indoor hydrobox; a heating-only hydrobox version (EKHBH), and a heat pump (heating & cooling) hydrobox version (EKHBX). Both hydrobox versions can be applied with an optional domestic hot water tank (EKHWS) and optional solar pump kit (EKSOLHW)



2. Specifications - Split System

2-1 NOMINAL CAPACITY AND NOMINAL INPUT				ERLQ018BAVJU	ERLQ024BAVJU	ERLQ030BAVJU
For combination indoor units + outdoor units	Indoor Units			EKHBH030BA (Heating Only)		
Condition (Floor Heating)	Heating capacity	Nominal	kBTU/hr (kW)	19.62 (5.75)	23.34 (6.84)	28.76 (8.43)
	Heating PI	Nominal	kBTU/hr (kW)	4.61 (1.35)	5.66 (1.66)	7.54 (2.21)
	COP	Nominal		4.24	4.12	3.81
Condition 2 (Fan Coil)	Heating capacity	Nominal	kBTU/hr (kW)	17.16 (5.03)	20.81 (6.1)	26.07 (7.64)
	Heating PI	Nominal	kBTU/hr (kW)	5.66 (1.66)	6.96 (2.04)	9.11 (2.67)
	COP	Nominal		3.03	2.99	2.86
For combination indoor units + outdoor units	Indoor Units			EKHBX030BA (Reversible)		
Condition 1 (Floor Heating)	Heating capacity	Nominal	kBTU/hr (kW)	19.62 (5.75)	23.34 (6.84)	28.76 (8.43)
	Cooling capacity	Nominal	kBTU/hr (kW)	24.57(7.2)	27.84 (8.16)	28.56 (8.37)
	Heating PI	Nominal	(kW)	1.35	1.66)	2.21
	Cooling PI	Nominal	kW	2.36	2.87	3.06
	COP	Nominal		4.25	4.12	3.81
	EER	Nominal		--	10.41	9.70
Condition 2 (Fan Coil)	Heating capacity	Nominal	kBTU/hr (kW)	17.16 (5.03)	20.81 (6.1)	26.07 (7.64)
	Cooling capacity	Nominal	kBTU/hr (kW)	17.47 (5.12)	20.0 (5.86)	20.75 (6.08)
	Heating PI	Nominal	(kW)	1.66	2.04	2.67
	Cooling PI	Nominal	(kW)	2.25	2.68	2.84
	COP	Nominal		3.03	2.99	2.86
	EER	Nominal		7.76	7.46	7.30
Notes				Condition 1: cooling Ta 95°F (35°C) - LWE 64.4°F (18°C) - heating Ta DB/WB 44.6/42.8°F (7/6°C - LWC 95°F (35°C) (ΔT = 9°F (5°C))		
				Condition 2: cooling Ta 95°F (35°C) - LWE 45°F (7°C) (ΔT = 9°F (5°C) - heating Ta DB/WB 44.6/42.8°F (7/6°C) - LWC 113°F (45°C) (ΔT = 9°F (5°C))		

2-2 TECHNICAL SPECIFICATIONS				ERLQ018BAVJU	ERLQ024BAVJU	ERLQ030BAVJU
Casing	Colour			Ivory white		
	Material			<Polyester painted galvanised steel>		
Dimensions	Unit	Height	in (mm)	28.9 (735)		
		Width	in (mm)	32.5 (825)		
		Depth	in (mm)	11.8 (300)		
	Packing	Height	in (mm)	31.4 (797)		
		Width	in (mm)	37.8 390)		
		Depth	in (mm)	15.4 (390)		
Weight	Unit		lb (kg)	126 (57)		
	Packed Unit		lb (kg)	137 (62)		
Packing	Material			EPS, CARTON		
				Carton		
				Wood		
				PP (Straps)		
Weight			lb (kg)	11 (5)		

2-2 TECHNICAL SPECIFICATIONS				ERLQ018BAVJU	ERLQ024BAVJU	ERLQ030BAVJU	
Heat Exchanger	Dimensions	Length	in (mm)	33-1/3" (845 mm)	33-1/3" (845 mm)	33-1/3" (845 mm)	
		Nr of Rows		2	2	2	
		Fin Pitch	in (mm)	0.07" (1.8 mm)	0.07" (1.8 mm)	0.07" (1.8 mm)	
		Nr of Passes		-	-	-	
		Face Area	ft² (m²)	3.22 ft² (0.98 m²)	3.22 ft² (0.98 m²)	3.22 ft² (0.98 m²)	
	# of Stages		32	32	32		
	Tube type	Hi-XSS(8)					
	Fin	Type	WF fin				
		Treatment	Anti-corrosion treatment (PE)				
Fan	Type	Propeller					
	Quantity		1	1	1		
Air Flow Rate (nominal at 230V)	Heating	High	cfm (m³/min)	-	-	-	
	Cooling	High	cfm (m³/min)	-	-	-	
Fan	Discharge direction			Horizontal			
	Motor	Quantity			1		
		Model			Brushless DC motor		
Motor	Speed (nominal)	Steps		-	-	-	
		Heating	rpm	-	-	-	
		Cooling	rpm	-	-	-	
Fan	Motor	Output	W	53	53	53	
		Drive			Direct drive		
Compressor	Quantity			1			
	Motor	Model			2YC63BXD#C		
		Type			<Hermetically sealed swing compressor>		
		Motor Output	W	1920			
Starting Method			Inverter driven				
Ambient Operation Range	Heating	Min	°F (°C)	5 (-15)			
		Max	°F (°C)	77 (25)			
	Cooling	Min	°F (°C)	50 (10)			
		Max	°F (°C)	109 (43)			
	Domestic Hot Water	Min	°F (°C)	5 (-15)	5 (-15)	5 (-15)	
		Max	°F (°C)	109.4 (43) 95 (35) HP / 109.4 (43) BH	109.4 (43) 95 (35) HP / 109.4 (43) BH	109.4 (43) 95 (35) HP / 109.4 (43) BH	
Sound Level (nominal) *1	Heating	Sound Power	dBA	61	61	62	
		Sound Pressure	dBA	48	48	49	
	Cooling	Sound Power	dBA	63	63	63	
		Sound Pressure	dBA	48	48	50	
Sound Level (Night quiet)	Heating	Sound Pressure	dBA	-	-	-	
	Cooling	Sound Pressure	dBA	-	-	-	
Refrigerant	Type			<R-410A>			
	Charge		lbs (kg)	3.7 (1.7)			
	Control			Expansion valve(electronic type)			
	Nr of Circuits			1			
Refrigerant Oil	Type			<FVC50K>			
	Charged Volume		GAL (l)	0.20 (0.75)			

2-2 TECHNICAL SPECIFICATIONS				ERLQ018BAVJU	ERLQ024BAVJU	ERLQ030BAVJU
Piping connections	Liquid (OD)	Quantity		1		
		Type		Flare connection		
		Diameter (OD)	in (mm)	1/4 (6.35)		
	Gas	Quantity		1		
		Type		Flare connection		
		Diameter (OD)	in (mm)	5/8" (15.9 mm)		
	Drain	Quantity		1		
		Type		Hole		
		Diameter (OD)	in (mm)	0.79 (20)		
	Piping Length	Minimum	ft (m)	9.8 (3)		
		Maximum	ft (m)	98 (30)		
		Equivalent	ft (m)	--		
		Chargeless	ft (m)	32.8 (10)		
Additional Refrigerant Charge		kg	See installation manual outdoor unit			
Installation height difference	Maximum	ft (m)	66 (20)			
Heat Insulation			<Reverse cycle>			
Defrost Method			Pressure equalizing			
Defrost Control			Sensor for outdoor heat exchanger temperature			
Capacity Control Method			Inverter controlled			
Safety Devices			Fan motor thermal protector			
			Fuse			
			High pressure switch			
Standard Accessories	Item		Installation Manual			
	Quantity		1			
Notes				(*1) The sound pressure level is measured via a microphone at a certain distance from the unit. It is a relative value depending on the distance and acoustic environment. Refer to sound spectrum drawing for more information.		
				(*2) Down to 10 ft. (3 m) with recharging of the outdoor unit. Refer to the installation manual of the outdoor unit.		

2-3 ELECTRICAL SPECIFICATIONS				ERLQ018BAVJU	ERLQ024BAVJU	ERLQ030BAVJU
Power Supply	Name			VJU		
	Phase			1~		
	Frequency		Hz	60		
	Voltage		V	208-230		
	Voltage range	Minimum	V	187		
		Maximum	V	253		
Current	Compressor	Rated Load Amps (RLA)	A	17.5		
		Total	Full Load Amps (FLA)	A	18	
		Minimum Circuit Amps (MCA)	A	18		
		Maximum Overcurrent Protection (MOP)	A	20		
Wiring Connections	For Power Supply	Remark		See installation manual outdoor unit		
	For Connection with Indoor	Remark		See installation manual outdoor unit		
Power Supply Intake				Outdoor Unit Only		
Notes				Standard for Safety Heating and Cooling Equipment; UL1995/CSA (U&C) C22.2 #236.		

3. Capacity Tables - Split System

3.1 Heating

MAXIMUM HEATING CAPACITY - PEAK VALUE																
MODEL	LWC (°F/°C)	86/30			95/35			104/40			113/45			122/50		
	T _{amb} (°F/°C)	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP
ERLQ018BAVJU	5/-15	13.41	5.05	2.66	12.53	5.43	2.31	11.84	5.84	2.03	11.37	6.28	1.81	11.09	6.79	1.63
	14/-10	15.87	5.19	3.06	14.74	5.83	2.62	13.89	6.11	2.27	13.28	6.62	2.01	12.90	7.17	1.80
	19.4/-7	17.54	5.26	3.34	16.28	5.73	2.84	15.32	6.25	2.45	14.61	6.79	2.15	14.16	7.37	1.92
	28.4/-2	20.68	5.36	3.86	19.18	5.87	3.27	18.02	6.42	2.81	17.17	7.03	2.44	16.62	7.68	2.16
	35.6/2	23.52	5.36	4.39	21.77	5.94	3.67	20.48	6.52	3.14	19.52	7.20	2.71	18.87	7.88	2.39
	44.6/7	27.41	5.36	5.11	25.43	5.97	4.26	23.89	6.62	3.61	22.80	7.34	3.11	22.08	8.09	2.73
ERLQ024BAVJU	5/-15	16.62	6.21	2.68	15.77	6.62	2.38	15.12	7.10	2.13	14.68	7.61	1.93	14.47	8.19	1.77
	14/-10	19.35	6.42	3.02	18.23	6.89	2.64	17.37	7.44	2.33	16.79	8.05	2.08	16.45	8.70	1.89
	19.4/-7	21.19	6.52	3.25	19.60	7.06	2.82	18.94	7.65	2.48	18.28	8.26	2.21	17.85	8.98	1.99
	28.4/-2	24.68	6.66	3.71	23.11	7.27	3.18	21.91	7.92	2.77	21.06	8.60	2.45	20.55	9.39	2.19
	35.6/2	27.78	6.72	4.13	25.97	7.37	3.52	24.61	8.09	3.04	23.62	8.84	2.67	23.00	9.66	2.38
	44.6/7	32.08	6.76	4.75	30.00	7.47	4.01	28.40	8.26	3.44	27.24	9.08	3.00	26.55	9.97	2.66
ERLQ030BAVJU	5/-15	18.50	7.03	2.63	17.61	7.47	2.36	16.96	7.99	2.12	16.59	8.57	1.94	16.38	9.22	1.78
	14/-10	21.40	7.27	2.94	20.24	7.82	2.59	19.39	8.40	2.31	18.81	9.04	2.08	18.50	9.78	1.90
	19.4/-7	23.34	7.41	3.15	22.05	7.99	2.76	21.06	8.63	2.44	20.38	9.32	2.19	20.00	10.07	1.99
	28.4/-2	27.03	7.58	3.57	25.43	8.23	3.09	24.23	8.94	2.71	23.38	9.73	2.40	22.87	10.58	2.16
	35.6/2	30.38	7.71	3.94	28.50	8.40	3.39	27.07	9.18	2.95	26.11	10.00	2.61	25.50	10.92	2.33
	44.6/7	34.81	7.78	4.47	32.70	8.57	3.82	31.08	9.42	3.30	29.90	10.31	2.90	29.22	11.30	2.59

Peak value does not include capacity drop during frosting and defrosting periods.

MAXIMUM HEATING CAPACITY - INTEGRATED VALUE																
MODEL	LWC (°F/°C)	86/30			95/35			104/40			113/45			122/50		
	T _{amb} (°F/°C)	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP
ERLQ018BAVJU	5/-15	11.95	4.78	2.50	11.16	5.15	2.17	10.55	5.53	1.91	10.14	5.97	1.70	9.86	6.45	1.53
	14/-10	14.13	4.95	2.86	13.14	5.32	2.47	12.36	5.80	2.13	11.81	6.28	1.88	11.47	6.83	1.68
	19.4/-7	15.43	4.95	3.12	14.33	5.39	2.66	13.48	5.87	2.30	12.87	6.38	2.02	12.46	6.93	1.80
	28.4/-2	17.93	4.95	3.61	16.63	5.48	3.06	15.67	5.97	2.52	14.95	6.55	2.28	14.47	7.17	2.02
	35.6/2	20.20	4.95	4.08	18.74	5.46	3.43	17.61	6.01	2.93	16.79	6.62	2.54	16.25	7.27	2.23
	44.6/7	27.41	5.36	5.11	25.43	5.97	4.26	23.89	6.62	3.61	22.80	7.34	3.11	22.08	8.09	2.73
ERLQ024BAVJU	5/-15	14.81	5.90	2.51	14.03	6.31	2.22	13.45	6.76	1.99	13.07	7.24	1.81	12.87	7.78	1.65
	14/-10	17.20	6.11	2.82	16.21	6.55	2.47	15.46	7.06	2.19	14.95	7.65	1.96	14.64	8.26	1.77
	19.4/-7	18.63	6.14	3.03	17.51	6.62	2.64	16.66	7.17	2.32	16.08	7.78	2.07	15.70	8.43	1.86
	28.4/-2	21.47	6.18	3.48	20.10	6.76	2.97	19.08	7.34	2.60	18.33	8.02	2.29	17.85	8.74	2.04
	35.6/2	23.89	6.18	3.87	22.36	6.79	3.29	21.18	7.34	2.88	20.34	8.12	2.50	19.80	9.01	2.22
	44.6/7	32.08	6.76	4.75	30.00	7.47	4.01	28.40	8.26	3.44	27.24	9.08	3.00	26.55	9.97	2.66
ERLQ030BAVJU	5/-15	16.45	6.89	2.46	15.67	7.10	2.21	15.12	7.61	1.99	14.74	8.16	1.81	14.57	8.74	1.67
	14/-10	19.04	6.83	2.75	18.02	7.41	2.43	17.27	7.89	2.16	16.78	8.60	1.95	16.45	9.28	1.77
	19.4/-7	20.55	6.96	2.95	19.42	7.51	2.59	18.53	8.09	2.29	17.95	8.77	2.05	17.58	9.49	1.85
	28.4/-2	23.52	7.06	3.33	22.12	7.68	2.88	21.06	8.33	2.53	20.34	9.04	2.25	19.90	9.83	2.02
	35.6/2	25.94	7.10	3.65	24.51	7.75	3.16	23.28	8.43	2.76	22.46	9.22	2.44	21.95	10.03	2.19
	44.6/7	34.81	7.10	4.50	32.70	8.57	3.82	31.08	9.42	3.30	29.90	10.31	2.90	29.22	11.30	2.59

Integrated value takes into consideration the capacity drop during frosting and defrosting periods.

3.2 Cooling

MAXIMUM COOLING CAPACITY																			
MODEL	T _{amb} (°F/°C)	68/20			77/25			86/30			95/35			104/40			113/45		
		LWE (°F/°C)	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)
ERL0016BAVJU	44.6/7	20.51	1.56	13.15	19.56	1.75	11.18	18.53	1.95	9.50	17.47	2.16	8.09	16.38	2.39	6.85	15.67	2.53	6.19
	51.8/11	23.24	1.57	14.80	22.18	1.77	12.53	21.06	1.98	10.64	19.90	2.21	9.00	18.09	2.32	7.80	17.00	2.38	7.14
	55.1/13	24.68	1.57	15.72	23.55	1.78	13.23	22.39	2.00	11.19	21.16	2.23	9.49	18.98	2.28	8.32	17.68	2.30	7.69
	60.8/16	26.89	1.56	17.24	25.73	1.78	14.46	24.47	2.01	12.17	23.17	2.26	10.25	20.31	2.22	9.15	18.63	2.18	8.55
	68/20	30.03	1.55	19.38	28.74	1.79	16.05	27.41	2.03	13.50	26.04	2.29	11.37	22.12	2.13	10.38	19.86	1.99	9.98
ERL0024BAVJU	44.6/7	24.40	2.05	11.90	23.34	2.28	10.24	22.18	2.52	8.80	20.92	2.77	7.55	19.26	2.68	6.81	16.69	2.59	6.44
	51.8/11	27.61	2.09	13.21	26.38	2.34	11.27	25.05	2.59	9.67	23.69	2.87	8.25	19.93	2.62	7.61	17.78	2.43	7.32
	55.1/13	29.25	2.11	13.86	27.99	2.36	11.86	26.59	2.63	10.11	25.12	2.91	8.63	20.79	2.59	8.03	18.29	2.34	7.82
	60.8/16	31.84	2.13	14.95	30.44	2.40	12.68	28.98	2.68	10.81	27.41	2.97	9.23	22.05	2.53	8.71	19.01	2.20	8.64
	68/20	35.50	2.16	16.43	33.79	2.44	13.85	32.36	2.73	11.85	30.68	3.04	10.09	23.75	2.44	9.74	19.86	1.99	9.98
ERL3014BAVJU	44.6/7	28.12	2.43	11.57	26.96	2.68	10.06	25.67	2.94	8.73	24.23	3.23	7.50	19.39	2.86	6.78	16.62	2.59	6.42
	51.8/11	31.60	2.49	12.69	30.27	2.76	10.97	28.84	3.05	9.46	26.59	3.31	8.03	20.89	2.80	7.46	17.68	2.43	7.28
	55.1/13	33.41	2.52	13.26	32.01	2.80	11.43	30.48	3.10	9.83	27.78	3.36	8.27	21.64	2.77	7.81	18.19	2.35	7.74
	60.8/16	36.18	2.57	14.08	34.71	2.86	12.14	33.07	3.17	10.43	29.62	3.41	8.69	22.76	2.71	8.40	18.94	2.20	8.61
	68/20	39.93	2.63	15.18	38.57	2.94	13.12	36.69	3.26	11.25	32.05	3.48	9.21	24.20	2.61	9.27	19.80	1.99	9.95

Symbols:


- CC Cooling Capacity @ maximum operating frequency, BTU/h
- HC Heating Capacity @ maximum operating frequency, BTU/h
- PI Cooling Power Input (kW), Heating Power Input (kBTU/h measured according to Eurovent 6/C003-2006 (kW)/EN14511
- LWE Leaving Water evaporator temperature (Cooling)
- LWC Leaving Water condenser temperature (Heating)
- Tamb Outdoor Ambient temperature, RH = 85%

Conditions:

- Cooling Capacity BTU/h and valid for chilled water range $\Delta T = 5-15^{\circ}F$ ($3-8^{\circ}C$)
- Heating Capacity is according to Eurovent 6/C/003-2006 (kW) and valid for heating water range $\Delta T = 5-15^{\circ}F$ ($3-8^{\circ}C$)
- Power Input is total of indoor and outdoor unit, except the circulation pump; (90W per EN14511)

3.3 Altitude Correction

Capacity Correction Factor- due to lower air density

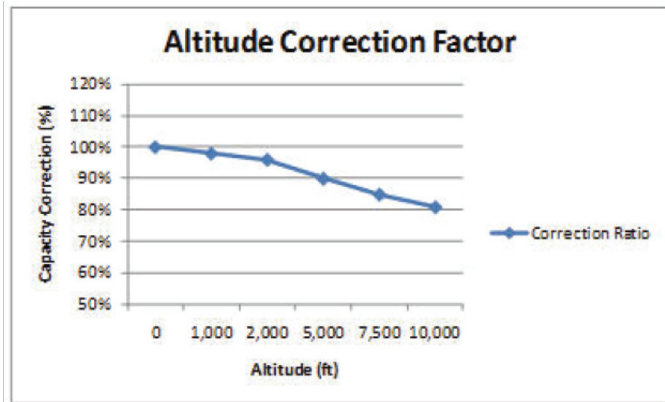

ALTITUDE		DENSITY		CAPACITY RATIO
(ft)	(m)	(lb/ft ³)	(kg/m ³)	(%)
0	0	0.0807	1.293	100
1,000	305	0.7785	1.247	98
2,000	610	0.075	1.202	96
5,000	1,524	0.0672	1.076	90
7,500	2,286	0.0611	0.979	85
10,000	3,048	0.0555	0.889	81

Altitude Influence on Daikin Altherma Operation Range

Altitude		Ambient Temperature		Absolute Atmospheric		Absolute Pressure		R410A Condition	
(ft)	(m)	(°F)	(°C)	(bar)	(psi)	40 bar (G)	580.15 psi	Temp (°F)	(psi)
0	0	59	15	1.013	14.7	38.99	565.45	143.87	62.15
1,000	305	59	15	0.977	14.17	39.02	565.98	143.94	62.19
2,000	610	59	15	0.942	13.66	39.06	566.49	144.01	62.23
5,000	1,524	59	15	0.843	12.23	39.16	567.92	144.21	62.34
7,500	2,286	59	15	0.767	11.13	39.23	568.99	144.37	62.43
10,000	3,048	59	15	0.697	10.11	39.3	570.04	144.52	62.51

Taking this influence into consideration, it is recommended to design your Daikin Altherma system, with a target leaving water temperature 2°F (1°C) below the maximum permitted set-point of 122°F (50°C).

Considerations for project designs in high altitude conditions

1. Determine the altitude at the location the Daikin Altherma system is being considered for.
2. Verify the altitude correction factor from the table enclosed in this bulletin.
3. If an altitude falls within specified values, use the correction graph to determine the applicable capacity correction factor.
4. Since the Daikin Altherma selection and simulator software does not correct for altitude, add the altitude correction factor to the load requirements before the initial selection is made.
5. Conduct the equipment selection based on these conditions as per normal procedures.

Example: -



A Daikin Altherma system is being considered for an application in Denver, CO.

Denver is located at an altitude of 5,000ft, thus the capacity correction factor would be 10%.



If the load calculations determined a 40,000 Btu/hr requirement, adding the correction factor for altitude would result in 40,000 Btu/hr + 10% (4,000 Btu/hr), thus the load required for the selection of Daikin Altherma would be 44,000 Btu/hr.

4. Dimensional Drawing - Split System



MINIMUM SPACE FOR AIR PASSAGE

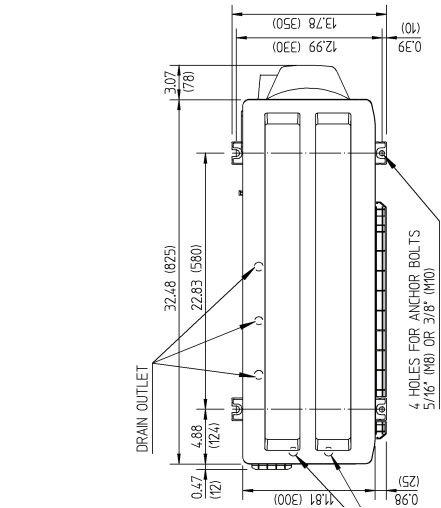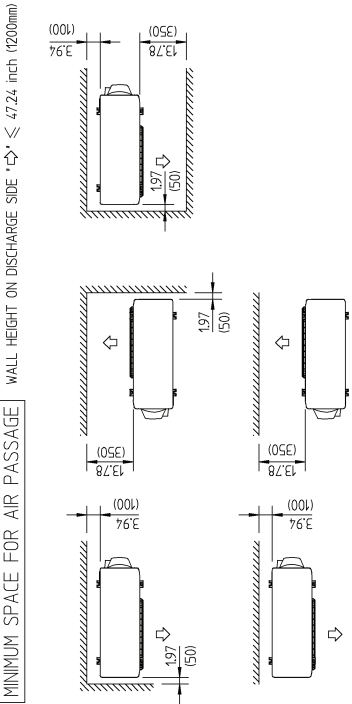


WITHOUT STOP VALVE COVER

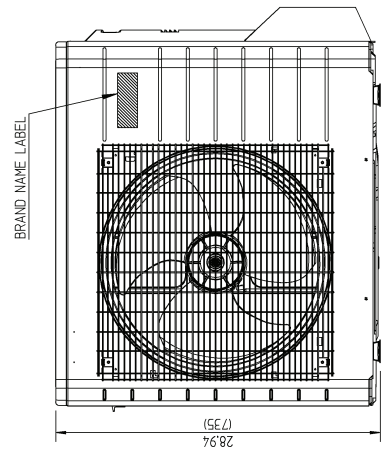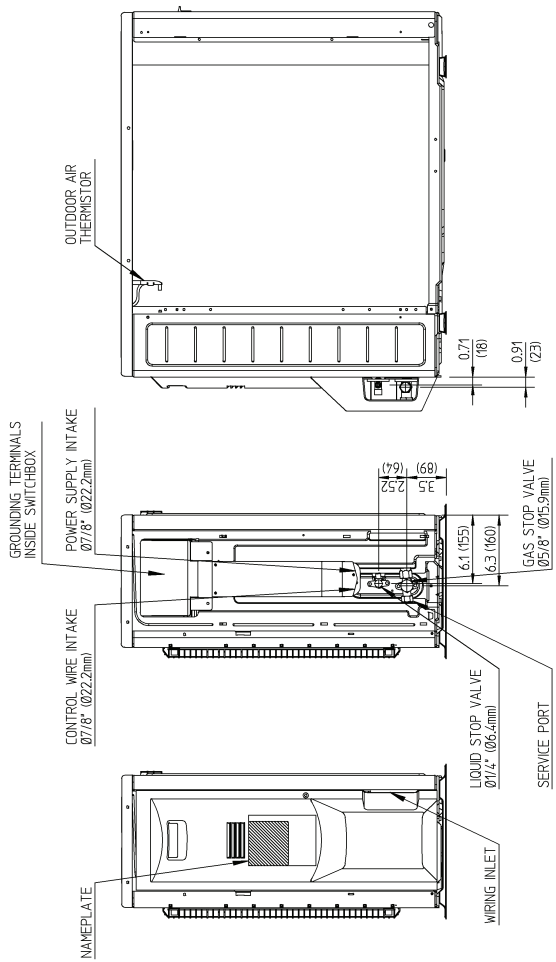


5. Center of Gravity - Split System

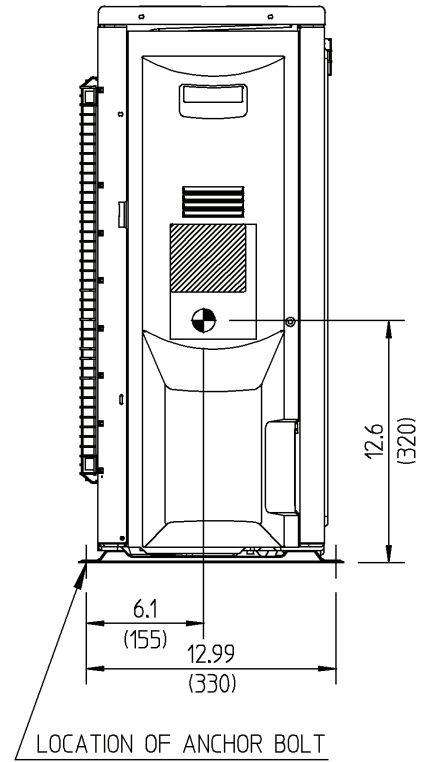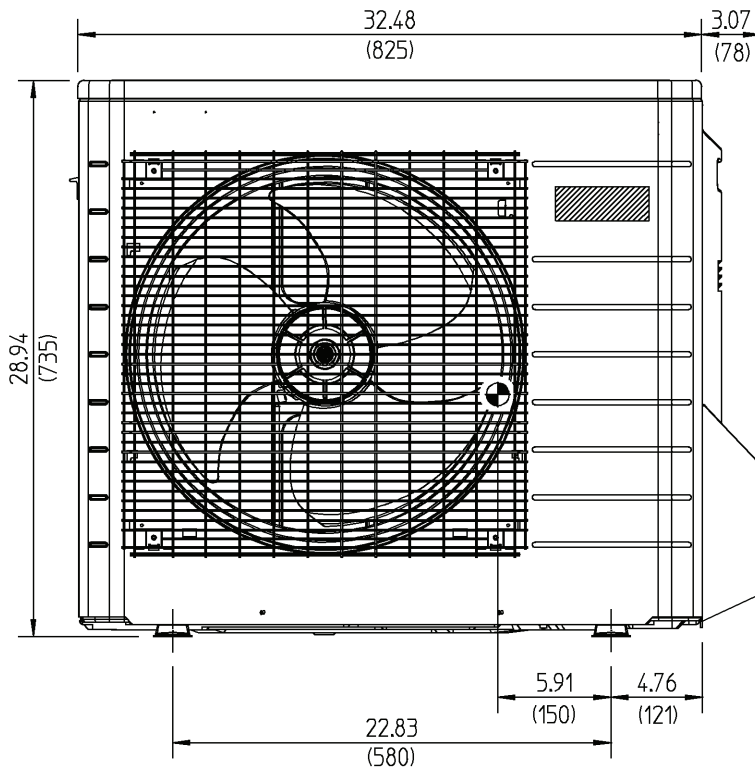

6. Piping Diagram - Split System

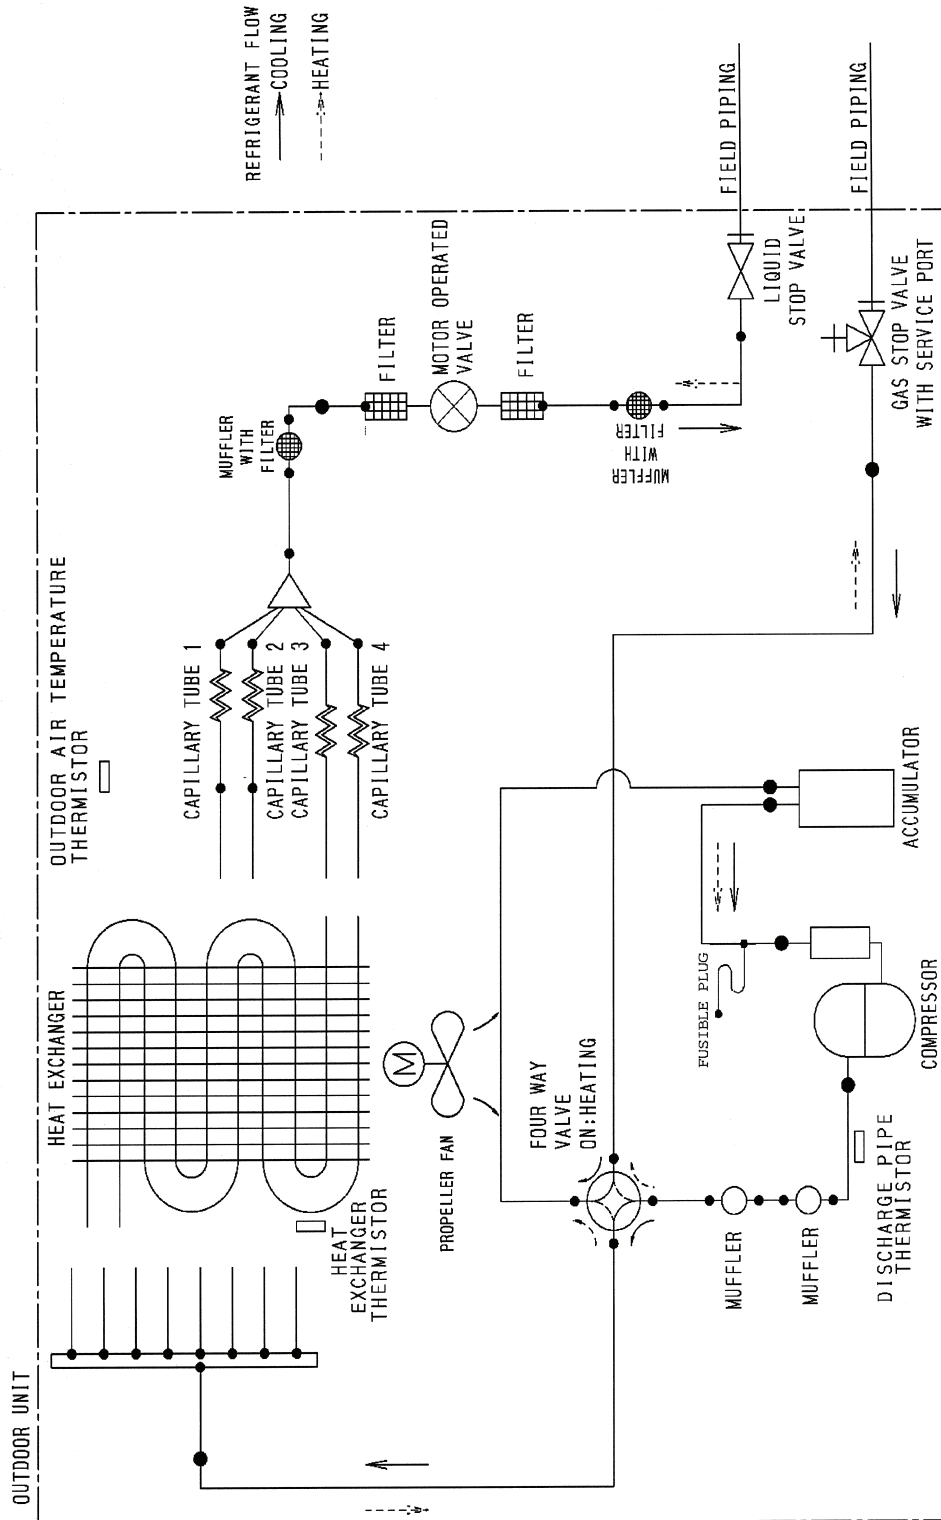


7. Wiring Diagram - Split System

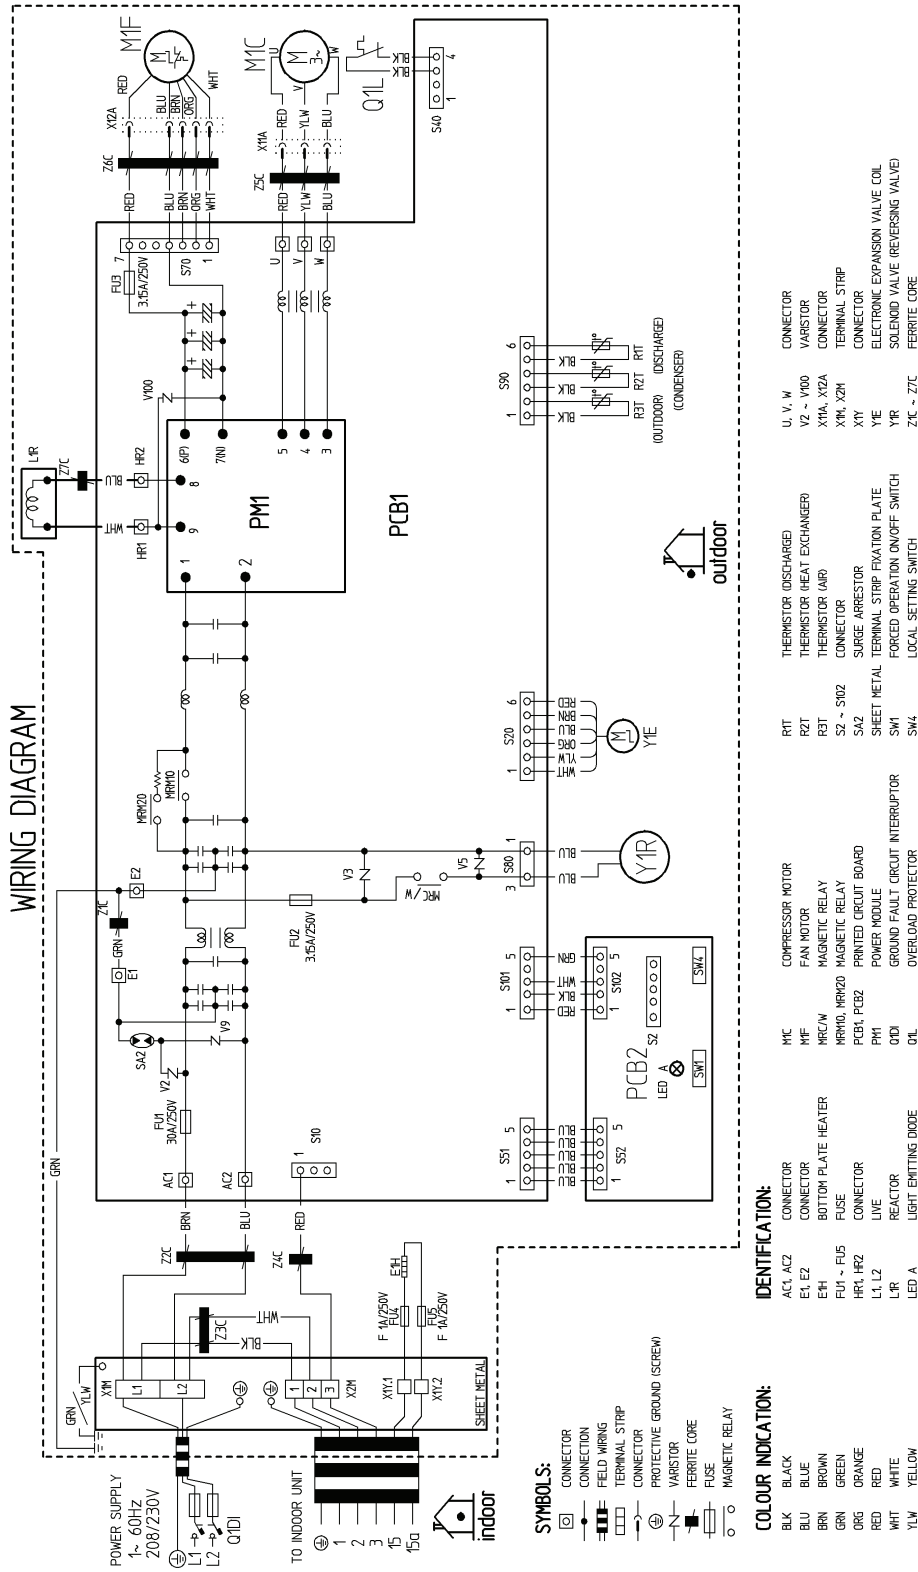


8. Sound Data - Split System

HEATING MODE

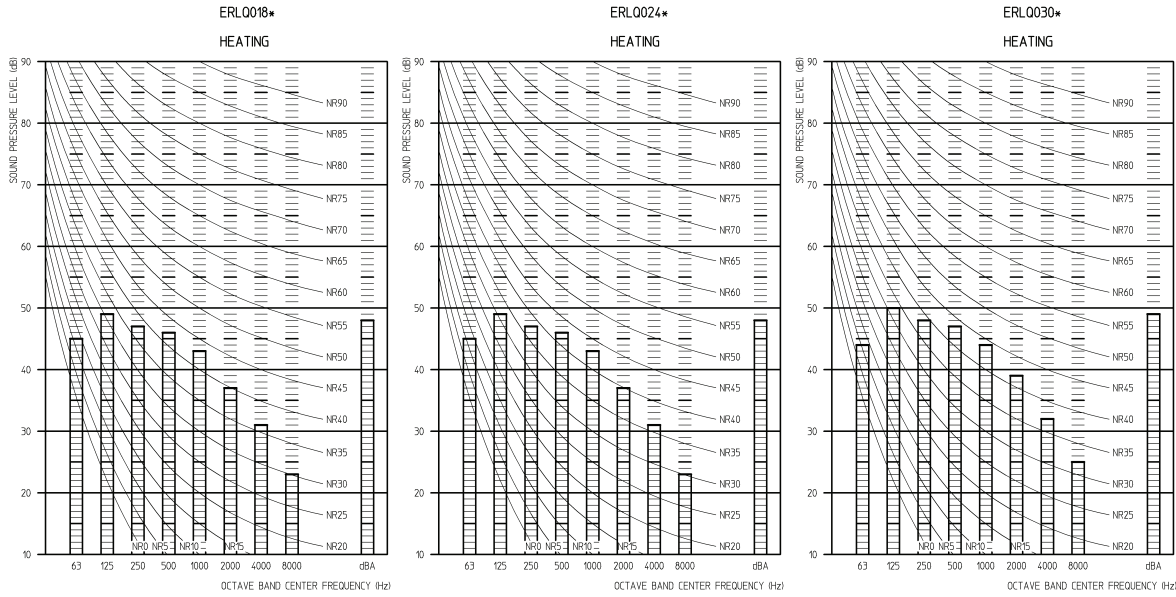


NOTES :

- DATA IS VALID AT FREE FIELD CONDITION (MEASURED IN A SEMI-ANCHOIC ROOM).
- dBA = A-WEIGHTED SOUND PRESSURE LEVEL, (A-SCALE ACCORDING TO IEC)
- REFERENCE ACOUSTIC PRESSURE 0dB = 20μPa.
- IF SOUND IS MEASURED UNDER ACTUAL INSTALLATION CONDITIONS, THE MEASURED VALUE WILL BE HIGHER DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTIONS.

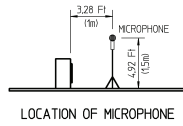


COOLING MODE

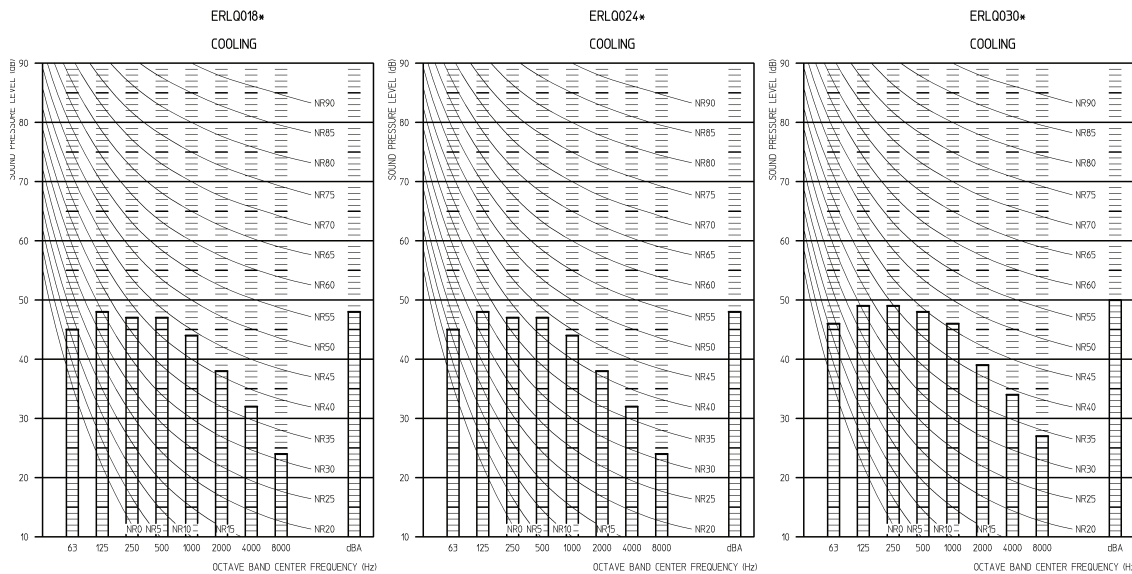

NOTES :

- DATA IS VALID AT FREE FIELD CONDITION (MEASURED IN A SEMI-ANCHOIC ROOM).
- dBA = A-WEIGHTED SOUND PRESSURE LEVEL, (A-SCALE ACCORDING TO IEC)
- REFERENCE ACOUSTIC PRESSURE 0dB = 20μPa.
- IF SOUND IS MEASURED UNDER ACTUAL INSTALLATION CONDITIONS, THE MEASURED VALUE WILL BE HIGHER DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTIONS.

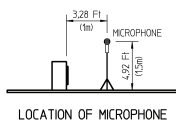

9. Installation - Split System

9.1 Installation Location

- The equipment is not intended for use in a potentially explosive atmosphere.
- Choose a place solid enough to bear the weight and vibration of the unit, where operation sounds will not be amplified.
- Locate the unit so that operation sounds and discharged hot/cold air will not bother neighbors.
- Avoid places such as bedrooms so that operation sounds are not a problem.
- Allow sufficient space for carrying the unit into and out of the site.
- Ensure there is sufficient space for air passage and a lack of obstructions around the air inlet and the air outlet.
- The site must be free from the possibility of flammable gas leakage in any nearby area.
- Install units, power cable, and inter-unit cables at least 10 feet (3 m) away from televisions and radios to prevent interference.
- Depending on radio wave conditions, electromagnetic interference may still occur even if installed more than 10 ft. (3 m) away.
- In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the outdoor unit.
- Since condensate flows out of the outdoor unit, do not place anything under the unit that must be kept from moisture.

IN COLD CLIMATES:


- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, install a baffle plate on the air discharge side of the outdoor unit.
- Unit should be installed with a minimum of 4" (10 cm) free space below the unit's bottom plate at all condition, e.g., heavy snowfall (construct a pedestal if necessary).
- In heavy snowfall areas, it is very important to select an installation site where the snow will not affect the unit. If lateral snowfall is possible, make sure the heat exchanger coil is not affected by the snow (construct a lateral canopy if necessary). See Figure 1:




Figure 1: construction of canopy and pedestal

9.2 Installation Space


Wall on one side

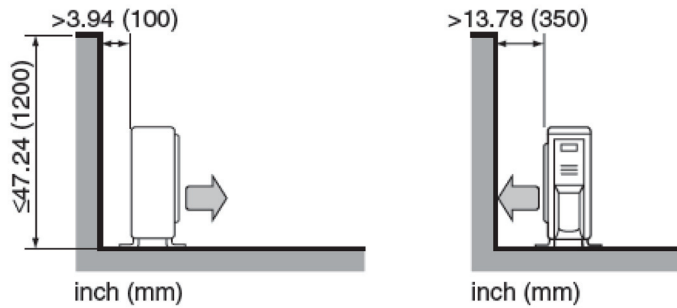

Wall on two sides

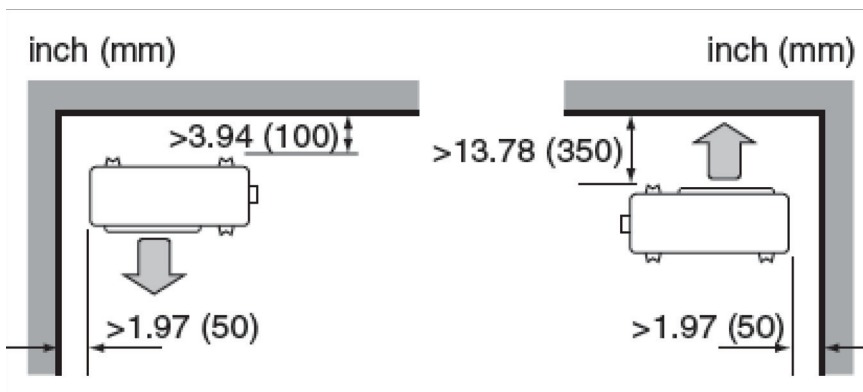

Wall on three sides



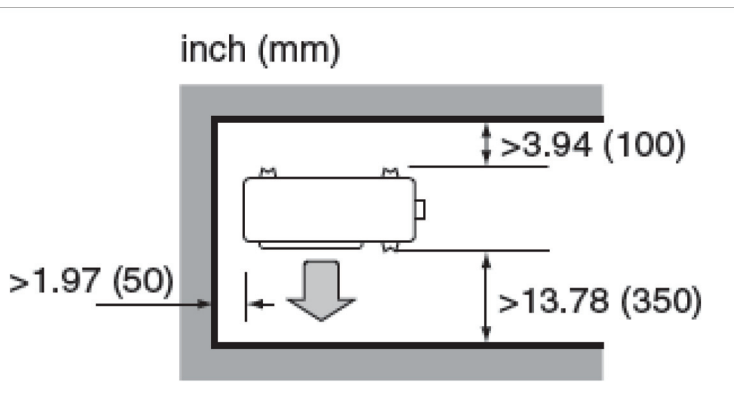


Additional Precautions:

It is recommended to install the equipment and electric wires keeping proper distances away from stereo equipment, personal computers, and other electronics. In extreme circumstances, you should keep distances of 9.84 ft (3 m) or more and use conduit tubes for power and transmission lines.

- Do not install the unit in places often used as a work place.
- In case of construction works (e.g. grinding works) where a lot of dust is created, the unit must be covered.
- Do not place any objects or equipment on top of the unit (top plate).
- Do not climb, sit, or stand on top of the unit.
- Be sure that sufficient precautions are taken, in accordance with the applicable legislation, in case of refrigerant leaks.

10. Operation Range - Split System

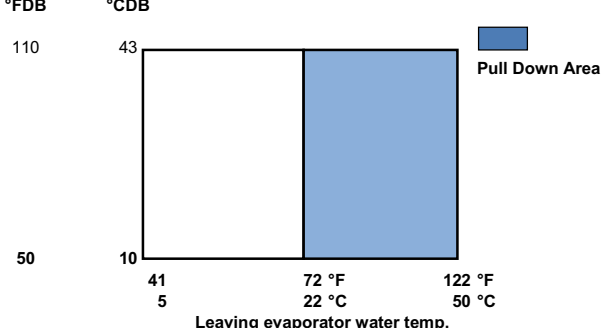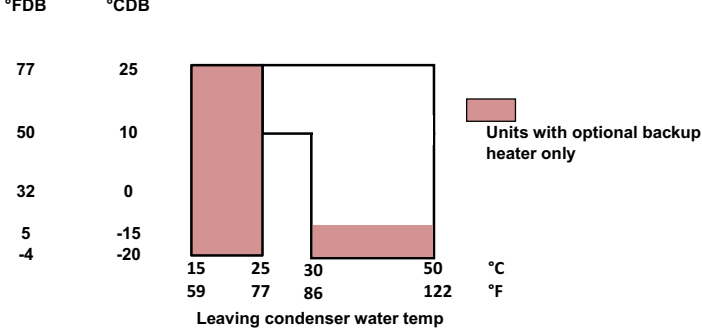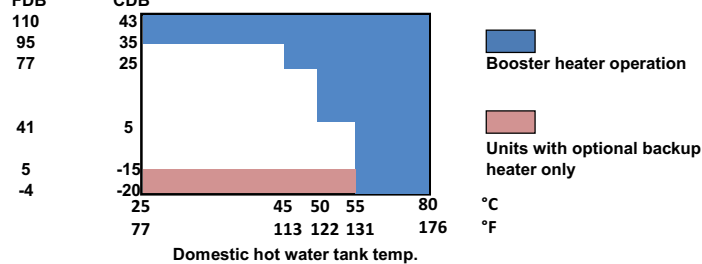Mode	ERLQ018, 024, 030
<p>COOLING MODE Outdoor Temp.</p>	 <p>°FDB °CDB</p> <p>110 43</p> <p>50 10</p> <p>41 5 72 °F 122 °F</p> <p>5 22 °C 50 °C</p> <p>Leaving evaporator water temp.</p> <p>Pull Down Area</p>
<p>HEATING MODE Outdoor temp.</p>	 <p>°FDB °CDB</p> <p>77 25</p> <p>50 10</p> <p>32 0</p> <p>5 -15</p> <p>-4 -20</p> <p>15 25 30 50</p> <p>59 77 86 122</p> <p>Leaving condenser water temp</p> <p>Units with optional backup heater only</p>
<p>DOMESTIC WATER HEATING MODE Outdoor temp.</p>	 <p>°FDB °CDB</p> <p>110 43</p> <p>95 35</p> <p>77 25</p> <p>41 5</p> <p>5 -15</p> <p>-4 -20</p> <p>25 45 50 55 80</p> <p>77 113 122 131 176</p> <p>Domestic hot water tank temp.</p> <p>Booster heater operation</p> <p>Units with optional backup heater only</p>

1. EKHB_030BA - Hydrobox

1.1 Features

- Heating only - **EKHBH030BA**
- Heat Pump (heating & cooling) - **EKHBX030BA**
- Small capacity indoor unit
- Cost effective alternative to a fossil fuel boiler
- Low energy bills and low CO₂ emissions
- Interface control with field selectable options that include dual set point (heating & cooling), Quiet Mode, DHW priority settings, schedule timer.
- Easy to install
- Total solution for year round comfort
- Apply with split system outdoor unit (ERLQ018,024,030)
- Select from 2 sizes of integrated backup heat 3kW (single stage) or 6 kW (2-stage)



The hydrobox is the indoor part of the air-to-water ERLQ outdoor heat pump. These units are designed for wall-mounted indoor installation. The units can be combined with fan coil units, floor heating applications, low temperature radiators, optional Daikin Domestic Hot Water Tanks, and optional Daikin Solar Kits for domestic hot water applications.

The unit range consists of two main versions: a heating/cooling version (EKHBX) and a heating-only version (EKHBH). Both versions are delivered with an integrated backup heater for additional heating during cold outdoor temperatures. The backup heater also serves as a backup if malfunctioning of the outdoor unit should occur. The backup heater models are available for a heating capacity of 3kW and 6kW.

2. Specifications - Hydrobox

2-1 TECHNICAL SPECIFICATIONS											
				EKHBH*			EKHBX*				
				EKHBH030BA*			EKHBX030BA*				
Outdoor units				ERLQ018BAVJU	ERLQ024BAVJU	ERLQ030BAVJU	ERLQ018BAVJU	ERLQ024BAVJU	ERLQ030BAVJU		
Nominal input (Indoor only without electric heater)				208-230V / 1 ph / 60Hz							
Casing		Color	Neutral White RAL9010								
		Material	Epoxy polyester painted galvanized steel								
Dimensions	Packing	Height	in (mm)	48.23 (1225)							
		Width	in (mm)	25.98 (660)							
		Depth	in (mm)	24.02 (610)							
	Unit	Height	in (mm)	36.30 (922)							
		Width	in (mm)	19.76 (502)							
		Depth	in (mm)	14.21 (361)							
Weight of unit	Machine net weight		lbs (kg)	101 (46)							
	Packed machine weight		lbs (kg)	130 (59)							
Weight of packing materials	Material	EPS, Wood, Carton, PP (straps)									
	Weight	lbs (kg)	29 (13)								
Main Components	Pump	Type	water cooled								
		no. of speeds	3								
		Nominal ESP unit	Cooling	psi (kPa)	-	-	-	7.40 (51.1)	6.85 (47.2)	6.67 (46.0)	
			Heating	psi (kPa)	6.93 (47.8)	5.99 (41.3)	4.42 (30.5)	6.93 (47.8)	5.99 (41.3)	4.42 (30.5)	
		Power Input	W	130							
		Water Side Heat Exchanger	Type	Braze Plate							
	Quantity		1								
	Water volume		gal/m (l/min)	0.18 (0.67)							
	Water flow rate Min.		gal/m (l/min)	3.17 (12)							
	Water flow rate Nom.		Cooling (2)	gal/m (l/min)	-	-	-	3.88 (28.7)	4.44 (16.8)	4.60 (17.4)	
			Heating (3)	gal/m (l/min)	4.36 (16.5)	5.18 (19.6)	6.37 (24.1)	4.36 (16.5)	5.18 (19.6)	6.37 (24.1)	
	Water flow rate Max.		Cooling	gal/min (l/min)	-						
			Heating	gal/min (l/min)	-						
	Insulation material		Polyurethane foam								
	Expansion vessel	Volume	gal/min (l/min)	2.64 (10)							
		Max. water pressure	psi (bar)	43.5 (3)							
		Pre pressure	psi (bar)	14.3 (1)							
	Water Filter	Diameter perforations	inch (mm)	0.039 (1)							
		Material	brass								





2-1 TECHNICAL SPECIFICATIONS									
Water Circuit	Piping Connections (7)			G (MALE)					
	Piping		in (mm)	1 (25.4) BSP					
	Safety valve		psi (bar)	43.5 (3)					
	Manometer			Yes					
	Drain valve / Fill valve			Yes					
	Shut-off valve			Yes					
	Air Purge valve			Yes					
	Total water volume (6)		gal (l)	1.45 (5.5)					
Refrig. Circuit	Gas side		in (mm)	5/8 (15.9)					
	Liquid side		in (mm)	1/4 (6.35)					
Sound Level	Sound Pressure (4)	Heating/medium speed- 0 ESP	dBA	29					
	Sound power (8)	Heating/medium speed- 0 ESP	dBA	43					
	Sound pressure (4)	Medium speed - nominal flow	dBA	31	30	30	31	30	30
	Sound pressure (4)	High speed - nominal flow	dBA	33	33	32	33	33	32
Operation range	Ambient	Cooling	°F (°C)	-			50 ~ 109.4 (10 ~ 43)		
		Heating	°F (°C)	5 ~ 77 (-15 ~ 25)			5 ~ 77 (-15 ~ 25)		
	Waterside	Heating	°F (°C)	-			41 ~ 76.6 (5 ~ 22)		
		Heating (5)	°F (°C)	59 ~ 122 (15 ~ 50) (9)			59 ~ 122 (15 ~ 55) (9)		
* (1) With option kit EKHBDP installed: Height = 36.85" (936 mm) * (2) Tamb 95°F (35°C) – LWE 44.6°F (7 C) (DT = 9°F (5°C)) * (3) DB/WB 44.6°F/42.8 F (7°C/6°C) – LWC 95°F (35°C) (DT = 9°F (5°C)) * (4) The sound pressure level is measured via a microphone at 3.23 ft (1 m) from the unit. It is a relative value, depending on the distance and acoustic environment. The sound pressurer level is valid for pump medium speed. * (5) 59°F–77°F (15°C–25°C): BUH only, no heat pump operation = during commissioning * (6) Including piping + PHE + backup heater / excluding expansion vessel * (7) Value mentioned is connection after ball valves. Connection at unit is G1 1/2 female. * (8) DB/WB 45°F/43°F (7° C/6°C)–LWC 95°F (35°C) (DT = 9°F (5°C), medium pump speed * (9) Ssee operation range drawing									

Electrical Specifications							
Electric heater (optional)	Type				3VJU	6VJU	
	Power supply (1),(2)	Phase				1~	
		Frequency		Hz	60		
		Voltage		V	208/230		
	Current	Minimum Circuit Amps (MCA)		A	14.3	28.6	
		Maximum Overcurrent Protection (MOP)		A	20	30	
		Running Current (backup heater+booster heater (EKHWS* models)	+EK*VJU	A	28.6(14.3+14.3)	42.9(28.6+14.3)	
Voltage range	Minimum		V	187			
	Maximum		V	253			


Wiring connections	for power supply backup heater	quantity of wires			3G
		type of wires			Note (3)
	for power supply connection to optional domestic hot water tank	quantity of wires			3G
		type of wires			Note (3) & (4)
	For connection with Q2L	quantity of wires			2
		type of wires			Note (3) & (4)
	for connection with R5T	quantity of wires			Note (7)
		type of wires			Note (7)
	for connection with A3P	quantity of wires			Note (6)
		type of wires			Note (3) & (5)
	for connection with M2S	quantity of wires			2
		type of wires			Note (3) & (5)
	for connection with M3S	quantity of wires			3
		type of wires			Note (3) & (5)
	for communication + bottom plate heater	quantity of wires			6G
		type of wires			Note (3)

* (1) Above mentioned power supply of hydrobox is fro backup heater only. The Switch box & pump of the hydrobox are supplied via the outdoor unit. The optional domestic hot water tank has a separate power supply.
 * (2) Optional electric heater has 2 capacity steps except for the 3VJU model which has only 1 capacity step.
 * (3) Select diameter and type according to local laws and regulations.
 * (4) For more details of the voltage range and current, refer to installation manual EKHBH/X030BA*
 * (5) Voltage: 24V / Maximum current: 100mA / Minimum AWG 18 (0.75MM²)
 * (6) Depends on thermostat type; refer to Installation Manual for EKHBH/X054BA*
 * (7) Wire included in Option EKHWS*

3. Dimensional Dwg. & Center of Gravity- Hydrobox

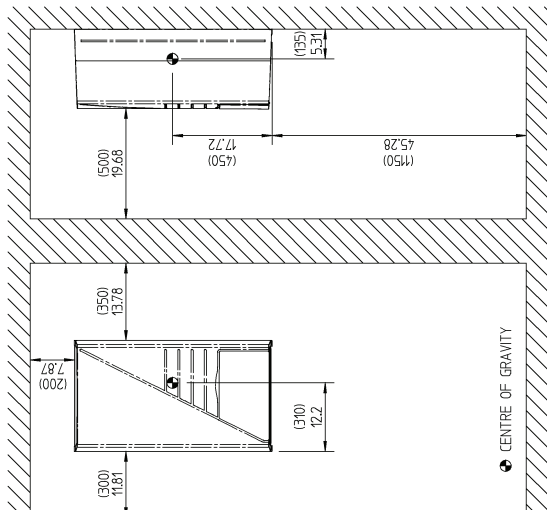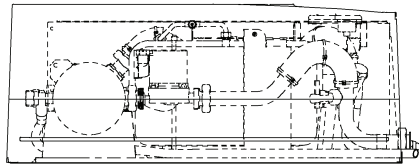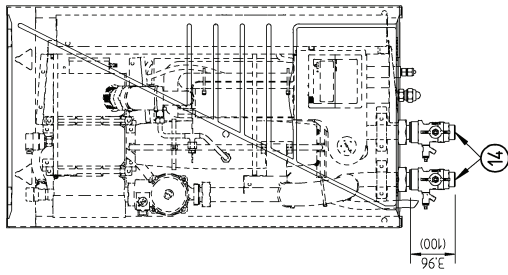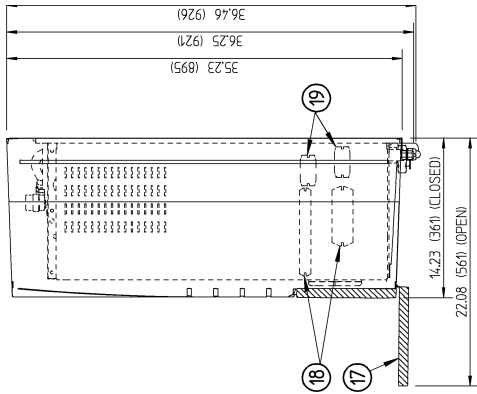


REQUIRED SPACE FOR SERVICE AND VENTILATION

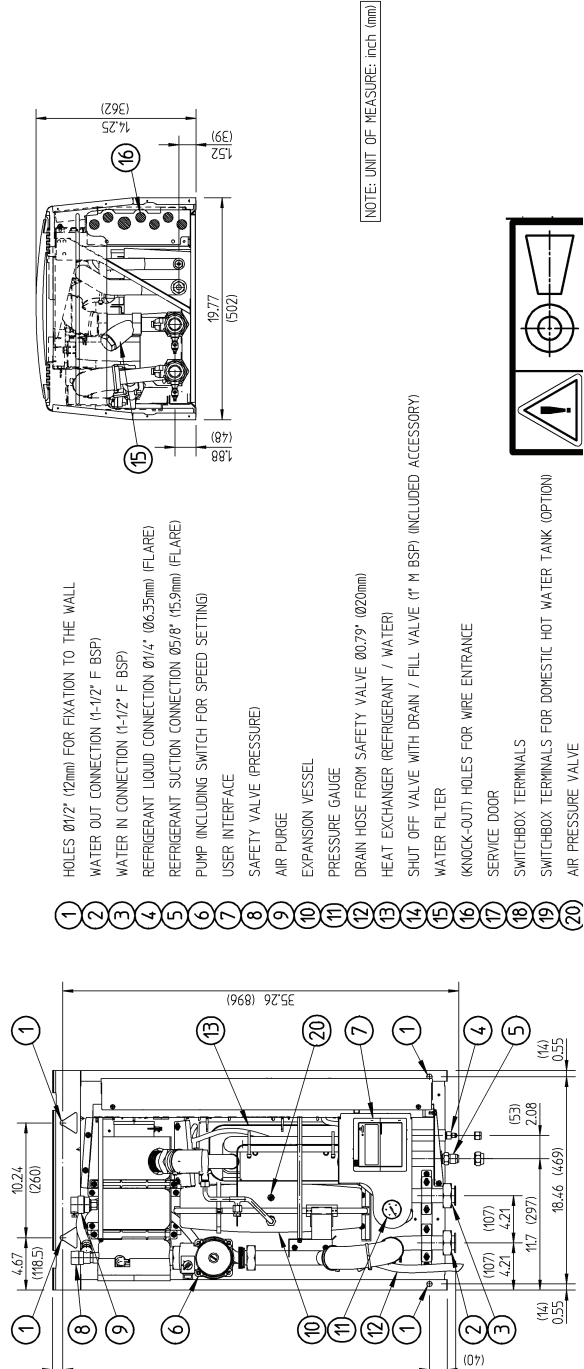


- 1 HOLES Ø1/2" (12mm) FOR FIXATION TO THE WALL
- 2 WATER OUT CONNECTION (1/4-1/2" F BSP)
- 3 WATER IN CONNECTION (1/4-1/2" F BSP)
- 4 REFRIGERANT LIQUID CONNECTION Ø1/4" (6.35mm) (FLARE)
- 5 REFRIGERANT SUCTION CONNECTION Ø5/8" (15.9mm) (FLARE)
- 6 PUMP (INCLUDING SWITCH FOR SPEED SETTING)
- 7 USER INTERFACE
- 8 SAFETY VALVE (PRESSURE)
- 9 AIR PURGE
- 10 EXPANSION VESSEL
- 11 PRESSURE GAUGE
- 12 DRAIN HOSE FROM SAFETY VALVE Ø0.79" (Ø20mm)
- 13 HEAT EXCHANGER (REFRIGERANT / WATER)
- 14 SHUT OFF VALVE WITH DRAIN / FILL VALVE (1" M BSP) (INCLUDED ACCESSORY)
- 15 WATER FILTER
- 16 (KNOCK-OUT) HOLES FOR WIRE ENTRANCE
- 17 SERVICE DOOR
- 18 SWITCHBOX TERMINALS
- 19 SWITCHBOX TERMINALS FOR DOMESTIC HOT WATER TANK (OPTION)
- 20 AIR PRESSURE VALVE

NOTE: UNIT OF MEASURE: INCH (MM)




4. Piping Diagram - Hydrobox

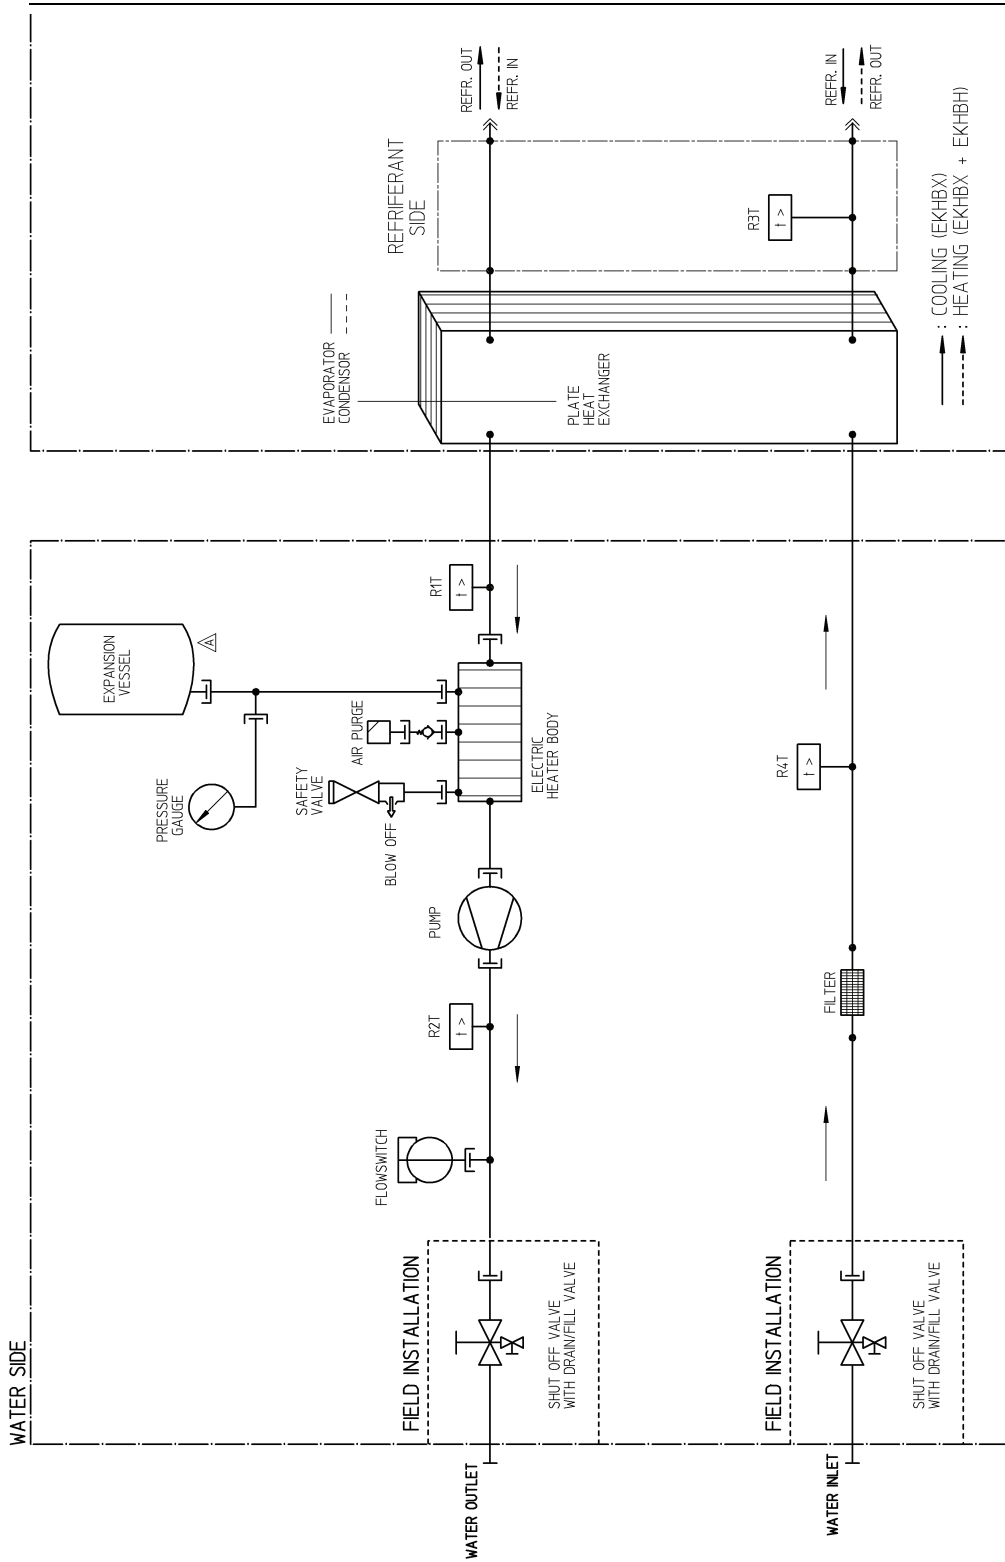


THERMISTOR	DESCRIPTION
R4T	Inlet water thermistor
R3T	Refrigerant liquid side thermistor
R2T	Outlet water backup heater thermistor
R1T	Outlet water heat-exchanger thermistor

6. External Connection Diagram - Hydrobox

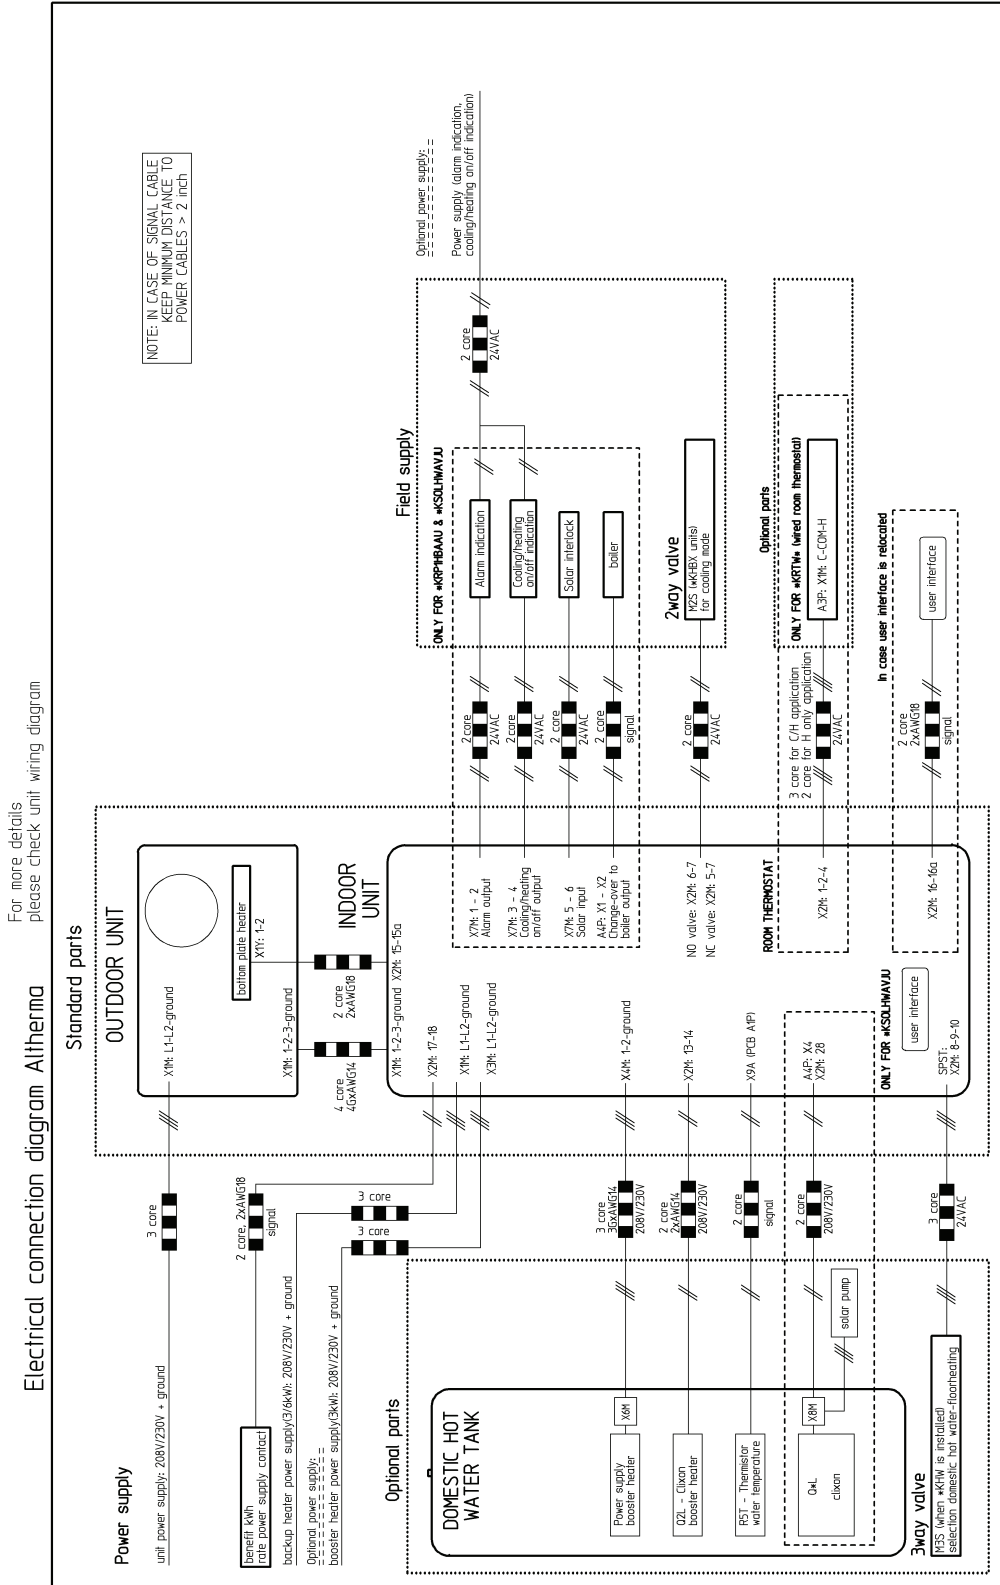

7. Condensate Instructions - Hydrobox

Leaving water temperature limit to prevent condensation

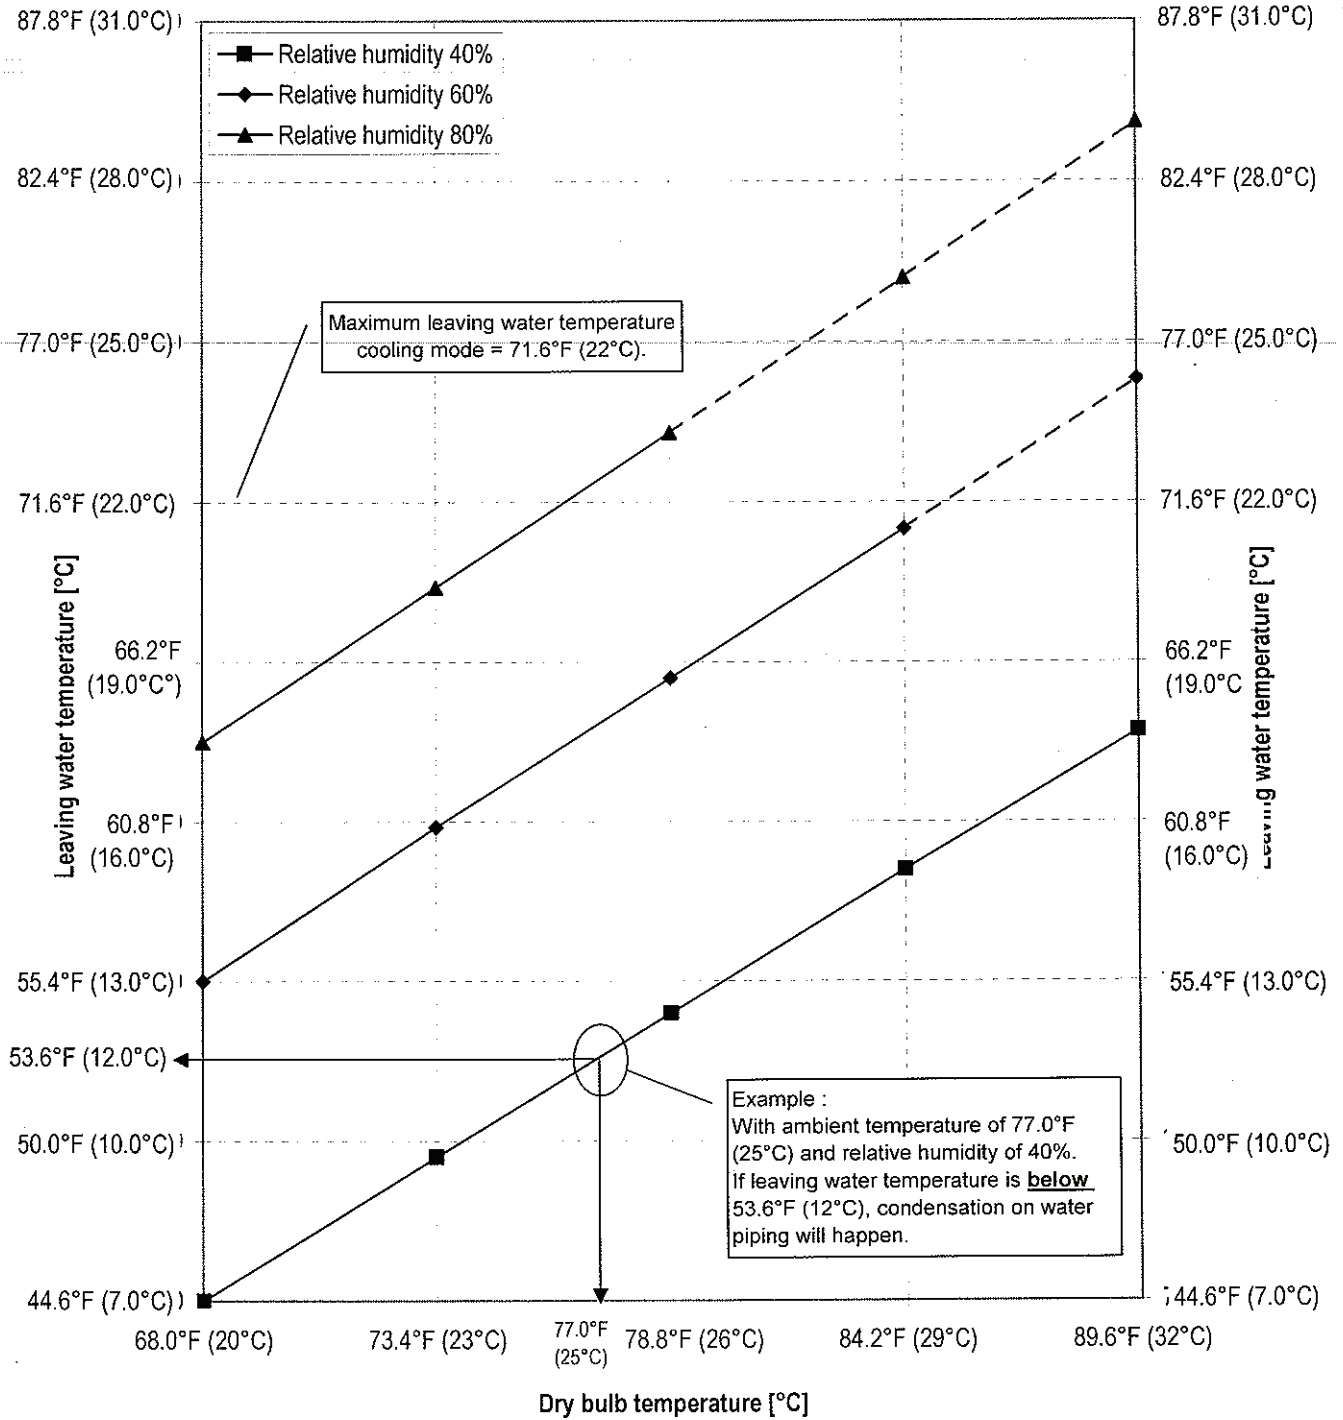


1. Refer to psychometric chart for more information.
2. If condensation is expected, installation of EKHB DP - drainpan kit must be considered.

8. Hydrobox Installation Precautions

MINIMUM WATER VOLUME:

Assure that the total water volume within the installation, excluding the internal water volume of the indoor unit, is enough :

- minimum 2.64 gallon for GBS (*RLQ030*)
- minimum 5.28 gallon for GQI (*RLQ054*)

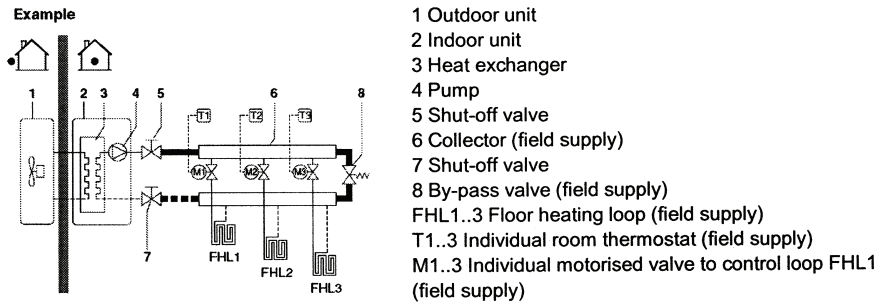

FIELD PIPING DIAMETERS

■ Select the field piping diameters in relation to the required water flow and available ESP of the indoor unit pump (See "Hydraulic performance").

INSTALLATION LOCATION

■ During normal operation the hydrobox unit will produce sound which could be observed as noise. The sound origin can be water pump operation and/or contactor activation.

Therefore it is advisable to install the hydrobox unit on a firm wall and not in nor close to a sound sensitive environment (example bedroom).

■ The unit is to be wall mounted in an indoor location that meets the following requirements:

- The installation location is frost-free.
- The space around the unit is adequate for servicing. (See "Dimensional drawing").
- The space around the unit allows for sufficient air circulation.
- There is a provision for condensate drain (only for EKHBX models with drain pan kit EKHBDBP) and pressure relief valve blow-off.
- The installation surface is a flat and vertical non-combustible wall, capable of supporting the operation weight of the unit (See "Technical specifications").
- There is no danger of fire due to leakage of inflammable gas.
- All piping lengths and distances have been taken into consideration (See "Technical specifications").
- Do not install the unit in places with high humidity (e.g. bathroom)


9. Application Examples - Hydrobox

TYPICAL APPLICATION EXAMPLES

The application examples given below are for illustration purposes only.

Application 1

Space heating only application with the room thermostat connected to the indoor unit.

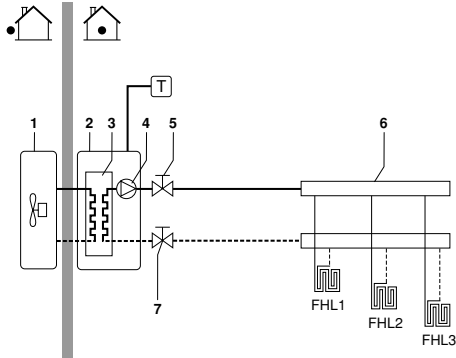

- | | |
|------------------|------------------------------|
| 1 Outdoor unit | 6 Collector (field supply) |
| 2 Indoor unit | 7 Shut-off valve |
| 3 Heat exchanger | FHL1..3 Floor heating loop |
| 4 Pump | T Room thermostat (optional) |
| 5 Shut-off valve | |

Pump operation and space heating

When the room thermostat (T) is connected to the indoor unit, the pump (4) will operate when there is a heating request from the room thermostat, and the outdoor unit will start operating to achieve the target leaving water temperature as set on the user interface.


When the room temperature is above the thermostat set point, the outdoor unit and pump will stop operating.



Make sure to connect the thermostat wires to the correct terminals (see "Connection of the thermostat cable" on page 18) and to configure the DIP switch toggle switches correctly (see "Room thermostat installation configuration" on page 22).

Application 2

Space heating only application without room thermostat connected to the indoor unit. The temperature in each room is controlled by a valve on each water circuit. Domestic hot water is provided through the domestic hot water tank which is connected to the indoor unit.

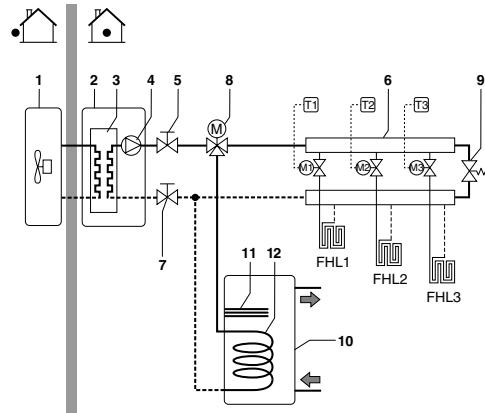

- | | |
|--|--|
| 1 Outdoor unit | 9 By-pass valve (field supply) |
| 2 Indoor unit | 10 Domestic hot water tank (optional) |
| 3 Heat exchanger | 11 Booster heater |
| 4 Pump | 12 Heat exchanger coil |
| 5 Shut-off valve | FHL1..3 Floor heating loop |
| 6 Collector (field supply) | T1..3 Individual room thermostat (optional) |
| 7 Shut-off valve | M1..3 Individual motorised valve to control loop FHL1 (field supply) |
| 8 Motorised 3-way valve (delivered with domestic hot water tank) | |

Pump operation

With no thermostat connected to the indoor unit (2), the pump (4) can be configured to operate either as long as the indoor unit is on, or until the required water temperature is reached.

NOTE



Details on pump configuration can be found under "Pump operation configuration" on page 23.

Space heating

The outdoor unit (1) will operate to achieve the target leaving water temperature as set on the user interface.

NOTE



When circulation in each space heating loop (FHL1..3) is controlled by remotely controlled valves (M1..3), it is important to provide a by-pass valve (9) to avoid the flow switch safety device from being activated.

The by-pass valve should be selected as such that at all time the minimum water flow as mentioned under "Water pipework" on page 14 is guaranteed.

It is recommended to select a pressure difference controlled by-pass valve.

1	Outdoor unit	14	Motorised 2-way valve for activation of the room thermostat (field supply)
2	Indoor unit		
3	Heat exchanger		
4	Pump	FCU1...3	Fan coil unit with thermostat (optional)
5	Shut-off valve		
6	Collector (field supply)	FHL1...3	Floor heating loop
7	Shut-off valve	T	Heating only room thermostat (optional)
9	By-pass valve (field supply)		
13	Motorised 2-way valve to shut off the floor heating loops during cooling operation (field supply)	T4..6	Individual room thermostat for fan coil heated/cooled room (optional)

Pump operation

With no thermostat connected to the indoor unit (2), the pump (4) can be configured to operate either as long as the indoor unit is on, or until the required water temperature is reached.

NOTE Details on pump configuration can be found under "Pump operation configuration" on page 23.

Space heating and cooling

According to the season, the customer will select heating or cooling through the user interface on the indoor unit.

The outdoor unit (1) will operate in heating mode or cooling mode to achieve the target leaving water temperature.

With the unit in heating mode, the 2-way valve (13) is open. Hot water is provided to both the fan coil units and the floor heating loops.

With the unit in cooling mode, the 2-way valve (13) is closed to prevent cold water running through the floor heating loops (FHL).

! When closing several loops in the system by remotely controlled valves, it might be required to install a by-pass valve (9) to avoid the flow switch safety device from being activated. See also "Application 2" on page 4.

! Wiring of the 2-way valve (13) is different for a NC (normal closed) valve and a NO (normal open) valve! Make sure to connect to the correct terminal numbers as detailed on the wiring diagram.

The ON/OFF setting of the heating/cooling operation is done by the user interface on the indoor unit.

Application 5

Space heating with an auxiliary boiler (alternating operation)

Space heating application by either the Daikin indoor unit or by an auxiliary boiler connected in the system. The decision whether either the EKHB* indoor unit or the boiler will operate can be achieved by an auxiliary contact or an EKHB* indoor controlled contact.

The auxiliary contact can e.g. be an outdoor temperature thermostat, an electricity tariff contact, a manually operated contact, etc. See "Field wiring configuration A" on page 7.

The EKHB* indoor unit controlled contact (also called 'permission signal for the auxiliary boiler') is determined by the outdoor temperature (thermistor located at the outdoor unit). See "Field wiring configuration B" on page 7.


Bivalent operation is only possible for space heating operation, **not** for the domestic water heating operation. Domestic hot water in such an application is always provided by the domestic hot water tank which is connected to the Daikin indoor unit.

The auxiliary boiler must be integrated in the piping work and in the field wiring according to the illustrations below.




CAUTION

- Be sure that the boiler and the integration of the boiler in the system is in accordance with relevant local laws and regulations.
- Daikin can not be put responsible for incorrect or unsafe situations in the boiler system.

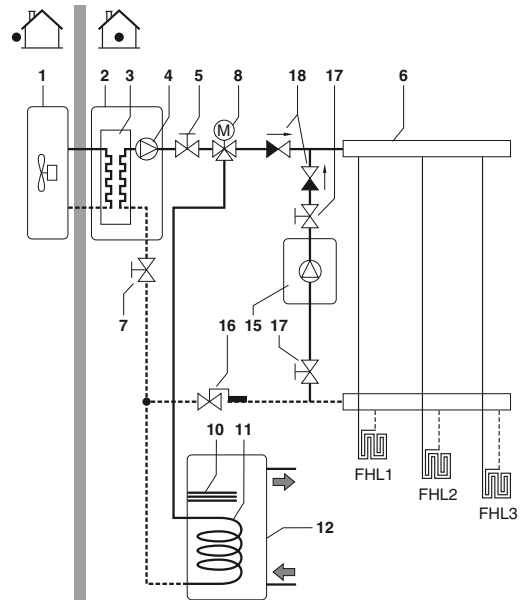


1	Outdoor unit	11	Heat exchanger coil
2	Indoor unit	12	Domestic hot water tank (optional)
3	Heat exchanger		
4	Pump	15	Boiler (field supply)
5	Shut-off valve	16	Aquastat valve (field supply)
6	Collector (field supply)		
7	Shut-off valve	17	Shut-off valve (field supply)
8	Motorised 3-way valve (delivered with the domestic hot water tank)	18	Non-return valve (field supply)
10	Booster heater	FHL1...3	Floor heating loop (field supply)

Field wiring configuration A

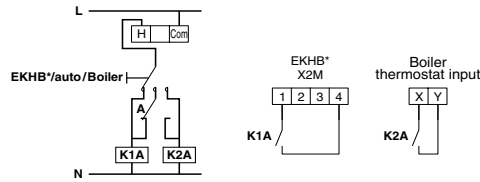

- Boiler thermostat input** Boiler thermostat input
- A** Auxiliary contact (normal closed)
- H** Heating demand room thermostat (optional)
- K1A** Auxiliary relay for activation of EKHB* unit (field supply)
- K2A** Auxiliary relay for activation of boiler (field supply)

Field wiring configuration B

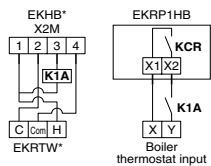

- Boiler thermostat input** Boiler thermostat input
- C** Cooling demand room thermostat (optional)
- H** Heating demand room thermostat (optional)
- Com** Common room thermostat (optional)
- K1A** Auxiliary relay for activation of boiler unit (field supply)
- KCR** Permission signal for the auxiliary boiler

Operation

- **Configuration A**

When the room thermostat requests heating, either the EKHB* unit or the boiler starts operating, depending on the position of the auxiliary contact (A).
- **Configuration B**

When the room thermostat requests heating, either the EKHB* unit or the boiler starts operating, depending on the outdoor temperature (status of "permission signal for the auxiliary boiler").

When the permission is given towards the boiler, the space heating operation by the EKHB* unit will be automatically switched off.

For more details see field setting [C-02~C-04].

NOTE

■ **Configuration A**
Make sure that auxiliary contact (A) has sufficient differential or time delay so as to avoid frequent changeover between the EKHB* unit and the boiler. If the auxiliary contact (A) is an outdoor temperature thermostat, make sure to install the thermostat in the shade, so that it is not influenced or turned ON/OFF by the sun.

Configuration B

Make sure that the bivalent hysteresis [C-04] has sufficient differential to avoid frequent changeover between the EKHB* unit and the boiler. As the outdoor temperature is measured via the outdoor unit, air thermistor make sure to install the outdoor unit in the shade, so that it is not influenced by the sun.

Frequent switching may cause corrosion of the boiler in an early stage. Contact the manufacturer of the boiler.

■ During heating operation of the EKHB* unit, the unit will operate so as to achieve the target leaving water temperature as set on the user interface. When weather dependent operation is active, the water temperature is determined automatically depending on the outdoor temperature.

During heating operation of the boiler, the boiler will operate so as to achieve the target leaving water temperature as set on the boiler controller.

Never set the target leaving water temperature set point on the boiler controller above 131°F (55°C).

■ Make sure to only have 1 expansion vessel in the water circuit. An expansion vessel is already pre-mounted in the Daikin indoor unit.

NOTE

Make sure to configure the DIP switch SS2-3 on the PCB of the EKHB* switchbox correctly. Refer to "Room thermostat installation configuration" on page 22.

For configuration B: Make sure to configure the field settings [C-02, C-03 and C-04] correctly. Refer to "Bivalent operation" on page 32.



CAUTION

Make sure that return water to the EKHB* heat exchanger never exceeds 131°F (55°C).

For this reason, never put the target leaving water temperature set point on the boiler controller above 131°F (55°C) and install an aquastat^(a) valve in the return water flow of the EKHB* unit.

Make sure that the non-return valves (field supply) are correctly installed in the system.

Make sure that the room thermostat (th) is not frequently turned ON/OFF.

Daikin shall not be held liable for any damage resulting from failure to observe this rule.

(a) The aquastat valve must be set for 131°F (55°C) and must operate to close the return water flow to the unit when the measured temperature exceeds 131°F (55°C). When the temperature drops to a lower level, the aquastat valve must operate to open the return water flow to the EKHB* unit again.



Manual permission towards the EKHB* unit on the boiler.

In case only the EKHB* unit should operate in space heating mode, disable the bivalent operation via setting [C-02].

In case only the boiler should operate in space heating mode, increase the bivalent ON temperature [C-03] to 77°F (25°C).


Application 6

Space heating with room thermostat application through floor heating loops and fan coil units. The floor heating loops and fan coil units require different operating water temperatures.

The floor heating loops require a lower water temperature in heating mode compared to fan coil units. To achieve these two set points, a mixing station is used to adapt the water temperature according to requirements of the floor heating loops. The fan coil units are directly connected to the indoor unit water circuit and the floor heating loops after the mixing station. The control of this mixing station is not done by the indoor unit.

The operation and configuration of the field water circuit is the responsibility of the installer.

Daikin only offers a dual set point control function. By this function two set points can be generated. Depending on the required water temperature (floor heating loops and/or fan coil units are required) first set point or second set point can be activated.

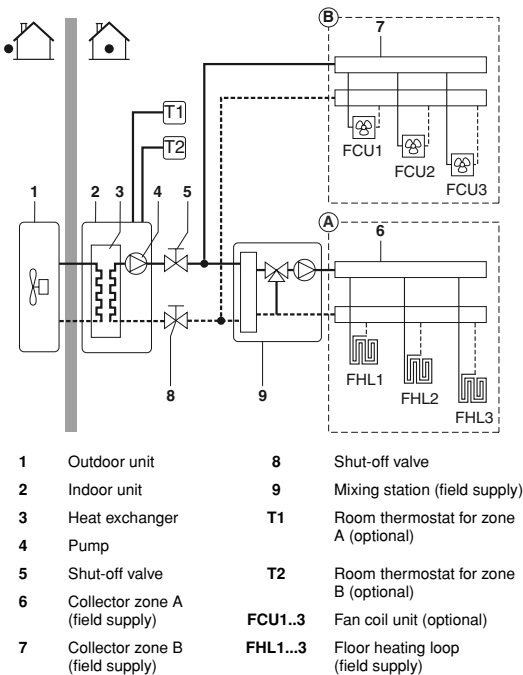

! The advantage of the dual set point control is that the heat pump will/can operate at the lowest required leaving water temperature when only floor heating is required. Higher leaving water temperatures are only required in case fan coil units are operating. This results in a better performance of the heat pump.

Pump operation and space heating

When the room thermostat for the floor heating loop (T1) and the fan coil units (T2) are connected to the indoor unit, the pump (4) will operate when there is a request for heating from T1 and/or T2. The outdoor unit will start operating to achieve the target leaving water temperature. The target leaving water temperature depends on which room thermostat is requesting heating.

	Set point		Thermo status			
	First	Field setting	ON	OFF	ON	OFF
Zone A	First	UI	ON	OFF	ON	OFF
Zone B	Second	[7-03]	OFF	ON	ON	OFF
Resulting water temperature			UI	[7-03]	[7-03]	—
Result pump operation			ON	ON	ON	OFF


When the room temperature of both zones is above the thermostat set point, the outdoor unit and pump will stop operating.

- NOTE**
- Make sure to connect the thermostat wires to the correct terminals (see "Overview of the indoor unit" on page 9).
 - Make sure to configure the field settings [7-02], [7-03] and [7-04] correctly. Refer to "Dual set point control" on page 29.
 - Make sure to configure the DIP switch SS2-3 on the PCB of the EKHBH switch box correctly. Refer to "Room thermostat installation configuration" on page 22.

- NOTE**
- The request signals for space heating can be implemented in two different ways (installer choice).
 - Thermo ON/OFF signal from room thermostat
 - Status signal (active/not active) from the mixing station
 - It is the installers responsibility to make sure no unwanted situations can occur (e.g. too high water temperatures towards floor heating loops, etc.)
 - Daikin does not offer any type of mixing station. Dual set point control only provides the possibility to use two set points.
 - When only zone A request heating, zone B will be fed with water at a temperature equal to the first set point. This can lead to unwanted heating of zone B.
 - When only zone B request heating, the mixing station will be fed with water at a temperature equal to the second set point. Depending on the control of the mixing station, the floor heating loop can still receive water at a temperature equal to set point of the mixing station.

! Be aware that the actual water temperature through the floor heating loops depends on the control and setting of the mixing station.

10. Hydronic Performance - Hydrobox

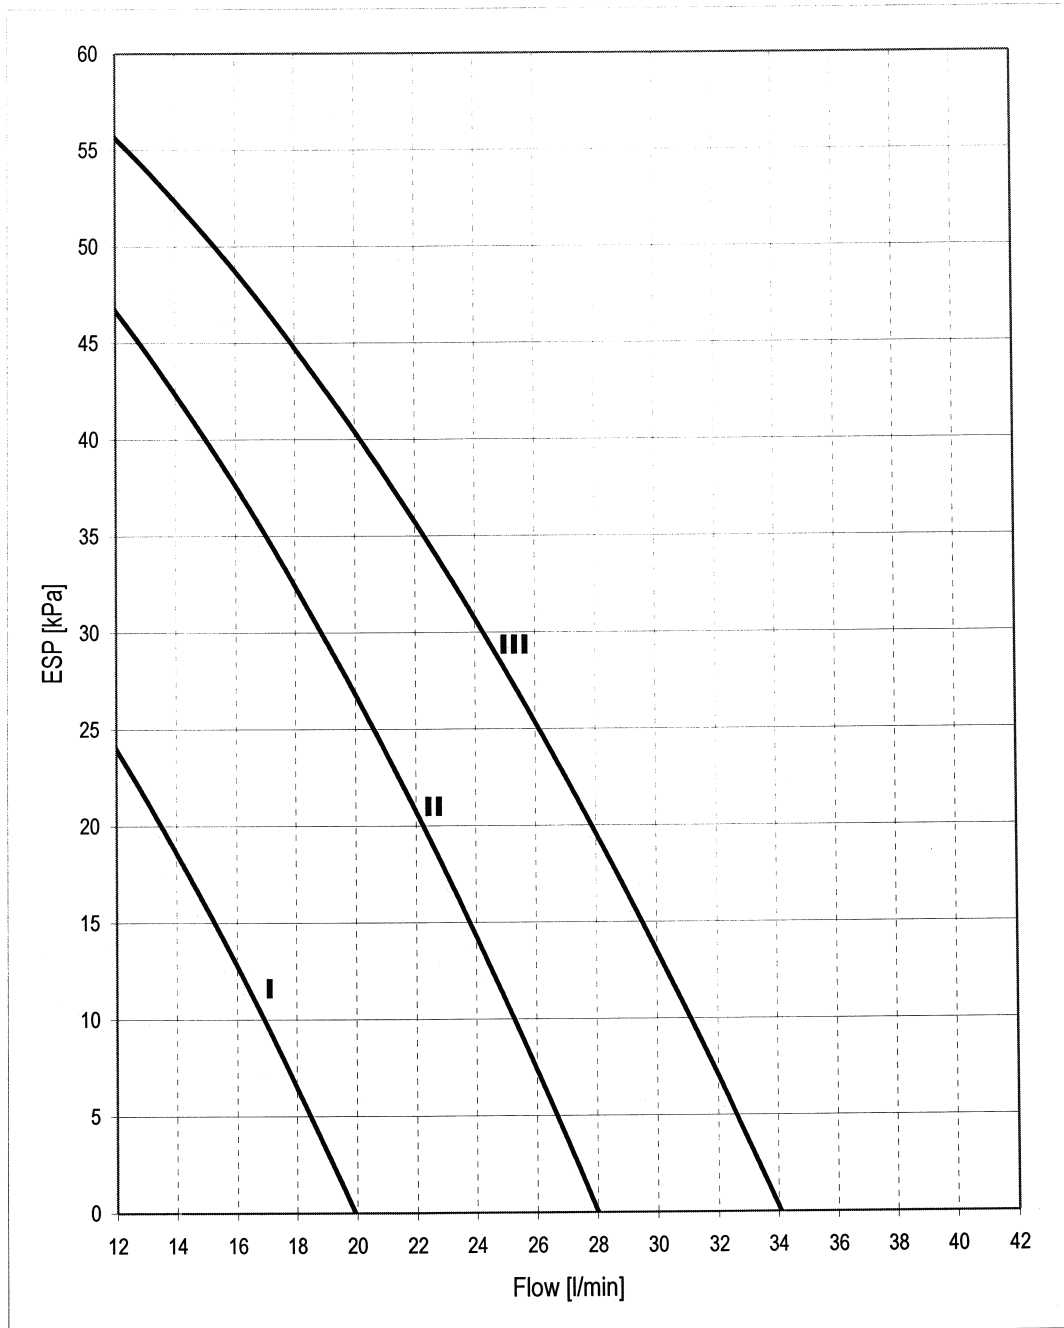

III high speed
 II medium speed
 I low speed
 ESP : external static pressure
 Flow : waterflow through the unit

Warning :
 1. Selecting a flow outside the curves can cause damage to or malfunction of the unit. See also minimum and maximum allowed water flowrange in the technical specifications.
 2. Water quality must be according to "Safe Drinking water Act (42 U.S.C. 300f)"

11. Operation Range - Hydrobox

Mode	ERLQ018, 024, 030	
<p>COOLING MODE Outdoor Temp.</p>	<p>°FDB 110 50</p>	<p>°CDB 43 10</p> <p>41 72 °F 122 °F 5 22 °C 50 °C</p> <p>Leaving evaporator water temp.</p> <p>Pull Down Area</p>
<p>HEATING MODE Outdoor temp.</p>	<p>°FDB 77 50 32 5 -4</p>	<p>°CDB 25 10 0 -15 -20</p> <p>15 25 30 50 °C 59 77 86 122 °F</p> <p>Leaving condenser water temp</p> <p>Units with optional backup heater only</p>
<p>DOMESTIC WATER HEATING MODE Outdoor temp.</p>	<p>°FDB 110 95 77 41 5 -4</p>	<p>°CDB 43 35 25 5 -15 -20</p> <p>25 45 50 55 80 °C 77 113 122 131 176 °F</p> <p>Domestic hot water tank temp.</p> <p>Booster heater operation</p> <p>Units with optional backup heater only</p>

1. ERLQ - Split System Outdoor Unit

1.1 Features

- Inverter operated compressor
- Single phase large capacity outdoor unit (036, 048, 054)
- Cost effective alternative to a fossil fuel boiler
- Low energy bills and low CO2 emissions
- Easy to install
- Total solution for year round comfort
- Anti-corrosion treatment on outdoor coil
- Bottom base pan heater to improve water drainage during defrost



ERLQ outdoor units are combined with an indoor hydrobox; a heating-only hydrobox version (EKHBH), and a heat pump (heating & cooling) hydrobox version (EKHBX). Both hydrobox versions can be applied with an optional domestic hot water tank (EKHWS) and optional solar pump kit (EKSOLHW)



2. Specifications - Split System

2-1 NOMINAL CAPACITY AND NOMINAL INPUT				ERLQ036BAVJU	ERLQ048BAVJU	ERLQ054BAVJU
For combination indoor units + outdoor units	Indoor Units			EKHBH054BA (Heating Only)		
Condition (Floor Heating)	Heating capacity	Nominal	kBTU/hr (kW)	38.2 (11.2)	47.8 (14.0)	54.6 (16.0)
	Heating PI	Nominal	kW	2.58	3.30	3.97
	COP	Nominal		4.34	4.24	4.03
Condition 2 (Fan Coil)	Heating capacity	Nominal	kBTU/hr (kW)	35.3 (10.3)	44.8 (13.1)	51.8 (15.2)
	Heating PI	Nominal	kW	3.18	4.00	4.79
	COP	Nominal		3.24	3.28	3.17
For combination indoor units + outdoor units	Indoor Units			EKHBX054BA (Reversible)		
Condition 1 (Floor Heating)	Heating capacity	Nominal	kBTU/hr (kW)	38.2 (11.2)	47.8 (14.0)	54.6 (16.0)
	Cooling capacity	Nominal	kBTU/hr (kW)	47.6 (13.9)	59.1 (17.3)	60.6 (17.8)
	Heating PI	Nominal	kW	2.58	3.30	3.97
	Cooling PI	Nominal	kW	3.91	5.94	6.94
	COP	Nominal		4.34	4.24	4.03
	EER	Nominal		12.17	9.95	8.73
Condition 2 (Fan Coil)	Heating capacity	Nominal	kBTU/hr (kW)	35.3 (10.3)	44.8 (13.1)	51.8 (15.2)
	Cooling capacity	Nominal	kBTU/hr (kW)	34.1 (10.0)	42.7 (12.5)	44.7 (13.1)
	Heating PI	Nominal	kW	3.18	4.00	4.79
	Cooling PI	Nominal	kW	3.72	5.41	6.08
	COP	Nominal		3.24	3.28	3.17
	EER	Nominal		9.17	7.89	7.35
Notes				Condition 1: cooling Ta 95°F (35°C) - LWE 64.4°F (18°C) - heating Ta DB/WB 44.6/42.8°F (7/6°C - LWC 95°F (35°C) (ΔT = 9°F (5°C))		
				Condition 2: cooling Ta 95°F (35°C) - LWE 45°F (7°C) (ΔT = 9°F (5°C)) - heating Ta DB/WB 44.6/42.8°F (7/6°C) - LWC 113°F (45°C) (ΔT = 9°F (5°C))		

2-2 TECHNICAL SPECIFICATIONS				ERLQ036BAVJU	ERLQ048BAVJU	ERLQ054BAVJU
Casing	Colour			Ivory white		
	Material			Painted galvanised steel plate		
Dimensions	Unit	Height	in (mm)	46" (1,170 mm)		
		Width	in (mm)	35.4" (900 mm)	35.4" (900 mm)	35.4" (900 mm)
		Depth	in (mm)	12-1/2" (320 mm)	12-1/2" (320 mm)	12-1/2" (320 mm)
	Packing	Height	in (mm)	53" (1,349 mm)		
		Width	in (mm)	38-1/2" (980 mm)	38-1/2" (980 mm)	38-1/2" (980 mm)
		Depth	in (mm)	16-1/2" (420 mm)	16-1/2" (420 mm)	16-1/2" (420 mm)
Weight	Unit		lb (kg)	227 lb (103 kg)	227 lb (103 kg)	227 lb (103 kg)
	Packed Unit		lb (kg)	251.3 lb (114 kg)	251.3 lb (114 kg)	251.3 lb (114 kg)
Packing	Material			EPS		
				Carton		
				Wood		
				PP (Straps)		
	Weight		lb (kg)	24.3 lb (11 kg)	24.3 lb (11 kg)	24.3 lb (11 kg)

2-2 TECHNICAL SPECIFICATIONS				ERLQ036BAVJU	ERLQ048BAVJU	ERLQ054BAVJU	
Heat Exchanger	Dimensions	Length	in (mm)	33-3/4" (857 mm)	33-3/4" (857 mm)	33-3/4" (857 mm)	
		Nr of Rows		2	2	2	
		Fin Pitch	in (mm)	1/16" (1.4 mm)	1/16" (1.4 mm)	1/16" (1.4 mm)	
		Nr of Passes		6	6	6	
		Face Area	ft² (m²)	3.22 ft² (0.98 m²)	3.22 ft² (0.98 m²)	3.22 ft² (0.98 m²)	
		# of Stages		52	52	52	
	Tube type			Hi-XSS(8)			
	Fin	Type		WF fin			
Treatment		Anti-corrosion treatment (PE)					
Fan	Type			Propeller			
	Quantity			2	2	2	
Air Flow Rate (nominal at 230V)	Heating	High	cfm (m³/min)	3178 cfm (90 m³/min)	3178 cfm (90 m³/min)	3178 cfm (90 m³/min)	
	Cooling	High	cfm (m³/min)	3355 cfm (96 m³/min)	3531 cfm (100 m³/min)	3426 cfm (97 m³/min)	
Fan	Discharge direction			Horizontal			
	Motor	Quantity		2	2	2	
Model			Brushless DC motor				
Motor	Speed (nominal)	Steps		8	8	8	
		Heating	rpm	760	760	760	
		Cooling	rpm	800	850	830	
Fan	Motor	Output	W	70 each	70 each	70 each	
		Drive			Direct drive		
Compressor	Quantity			1	1	1	
	Motor	Model			JT100G-VD		
		Type			Hermetically sealed scroll compressor		
		Motor Output	W		2,200		
Starting Method			Inverter driven				
Motor	Crankcase Heater	Output	W	33	33	33	
Ambient Operation Range	Heating	Min	°F (°C)	-4 (-20)	-4 (-20)	-4 (-20)	
		Max	°F (°C)	95 (35)	95 (35)	95 (35)	
	Cooling	Min	°F (°C)	50 (10)	50 (10)	50 (10)	
		Max	°F (°C)	114.8 (46)	114.8 (46)	114.8 (46)	
	Sanitary water	Min	°F (°C)	-4 (-20)	-4 (-20)	-4 (-20)	
		Max	°F (°C)	109.4 (43) 95 (35) HP / 109.4 (43) BH	109.4 (43) 95 (35) HP / 109.4 (43) BH	109.4 (43) 95 (35) HP / 109.4 (43) BH	
Sound Level (nominal) *1	Heating	Sound Power	dBA	64	64	66	
		Sound Pressure	dBA	49	51	53	
	Cooling	Sound Power	dBA	64	66	69	
		Sound Pressure	dBA	50	52	54	
Sound Level (Night quiet)	Heating	Sound Pressure	dBA	42	42	43	
	Cooling	Sound Pressure	dBA	45	45	46	
Refrigerant	Type			R-410A			
	Charge	oz (kg)		8.2 lb (3.7 kg)	8.2 lb (3.7 kg)	8.2 lb (3.7 kg)	
	Control			Expansion valve(electronic type)			
	Nr of Circuits			1	1	1	
Refrigerant Oil	Type			Daphne FVC68D			
	Charged Volume	g (l)		1.06 g (1.0 l)	1.06 g (1.0 l)	1.06 g (1.0 l)	

2-2 TECHNICAL SPECIFICATIONS				ERLQ036BAVJU	ERLQ048BAVJU	ERLQ054BAVJU
Piping connections	Liquid (OD)	Quantity		1	1	1
		Type		Flare connection		
		Diameter (OD)	in (mm)	3/8" (9.52 mm)		
	Gas	Quantity		1	1	1
		Type		Flare connection		
		Diameter (OD)	in (mm)	5/8" (15.9 mm)		
	Drain	Quantity		3	3	3
		Type		Hole		
		Diameter (OD)	in (mm)	1-1/32" (26 mm)	1-1/32" (26 mm)	1-1/32" (26 mm)
	Piping Length	Minimum	ft (m)*2	16.4 ft (5 m)	16.4 ft (5 m)	16.4 ft (5 m)
		Maximum	ft (m)	246 ft (75 m)	246 ft (75 m)	246 ft (75 m)
		Equivalent	ft (m)	312 ft (95 m)	312 ft (95 m)	312 ft (95 m)
		Chargeless	ft (m)	98.4 ft (30 m)	98.4 ft (30 m)	98.4 ft (30 m)
Additional Refrigerant Charge		kg	See installation manual outdoor unit			
Installation height difference	Maximum	ft (m)	98.4 ft (30 m)	98.4 ft (30 m)	98.4 ft (30 m)	
Heat Insulation			Both liquid and gas pipes			
Defrost Method			Pressure equalizing			
Defrost Control			Sensor for outdoor heat exchanger temperature			
Capacity Control Method			Inverter controlled			
Safety Devices			Fan motor thermal protector			
			Fuse			
			High pressure switch			
Standard Accessories	Item		Tie-wraps			
	Quantity		2	2	2	
	Item		Installation manual			
	Quantity		1	1	1	
Notes			(*1) The sound pressure level is measured via a microphone at a certain distance from the unit. It is a relative value depending on the distance and acoustic environment. Refer to sound spectrum drawing for more information.			
			(*2) Down to 10 ft. (3 m) with recharging of the outdoor unit. Refer to the installation manual of the outdoor unit.			

2-3 ELECTRICAL SPECIFICATIONS				ERLQ036BAVJU	ERLQ048BAVJU	ERLQ054BAVJU
Power Supply	Name			VJU	VJU	VJU
	Phase			1~	1~	1~
	Frequency		Hz	60	60	60
	Voltage		V	208-230	208-230	208-230
	Voltage range	Minimum	V	-10%	-10%	-10%
		Maximum	V	+10%	+10%	+10%
	Compressor	Rated Load Amps (RLA)	A	23.4	23.4	23.4
		Full Load Amps (FLA)	A	26.5	26.5	26.5
Current	Total	Minimum Current Protection (MCA)	A	26.5	26.5	26.5
		Maximum Current Protection (MOP)	A	30	30	30
Wiring Connections	For Power Supply	Remark		See installation manual outdoor unit		
	For Connection with Indoor	Remark		See installation manual outdoor unit		
Power Supply Intake				Outdoor Unit Only		
Notes				Standard for Safety Heating and Cooling Equipment; UL1995/CSA (U&C) C22.2 #236.		

3. Capacity Tables - Split System

3.1 Heating

MAXIMUM HEATING CAPACITY - PEAK VALUE																			
MODEL	LWC (°F/°C) T _{amb} (°F/°C)	86/30			95/35			104/40			113/45			122/50			131/55		
		HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP
ERLQ036BAVJU	-4/-20	19.30	7.01	2.75	18.70	8.00	2.34	15.60	9.42	1.66									
	5/-15	22.10	8.02	2.76	21.30	8.74	2.44	21.10	9.60	2.20									
	19/-7.2	27.40	8.09	3.39	26.40	8.84	2.99	26.00	9.73	2.67	25.60	10.77	2.38						
	25/-3.9	31.30	8.07	3.88	30.20	8.86	3.41	29.70	9.78	3.04	29.20	10.80	2.70	27.90	11.91	2.34			
	36/2.2	34.80	8.02	4.34	33.50	8.84	3.79	33.00	9.77	3.38	32.50	10.85	3.00	31.10	11.94	2.60	29.80	13.26	2.25
	45/7.2	39.50	7.95	4.97	35.20	8.80	4.00	36.70	9.78	3.75	35.30	10.84	3.26	33.90	12.07	2.81	32.50	13.44	2.42
	54/12.2	44.80	7.85	5.71	43.20	8.70	4.97	41.70	9.69	4.30	40.10	10.79	3.72	38.60	12.04	3.21	37.10	13.42	2.76
	59/15	48.20	7.77	6.20	46.50	8.05	5.78	44.90	9.63	4.66	43.30	10.74	4.03	41.70	12.00	3.48	40.10	13.40	2.99
	68/20	54.30	7.84	7.11	52.50	8.51	6.17	50.70	9.49	5.34	49.00	10.64	4.61	47.20	11.01	4.29	45.40	13.33	3.41
ERLQ048BAVJU	-4/-20	24.70	9.74	2.54	24.40	10.60	2.30												
	5/-15	27.00	9.93	2.72	27.30	10.82	2.52	26.80	11.84	2.26									
	19/-7.2	34.30	10.10	3.40	33.40	11.03	3.03	32.40	12.12	2.87	31.60	13.34	2.37						
	25/-3.9	39.10	10.20	3.83	37.90	11.12	3.41	37.70	12.25	3.08	36.40	13.16	2.77	35.30	14.52	2.43			
	36/2.2	43.30	10.20	4.25	42.00	11.19	3.75	41.70	12.32	3.38	40.30	13.24	3.04	39.00	14.83	2.63	37.80	16.16	2.34
	45/7.2	49.20	10.25	4.80	47.80	11.25	4.25	48.20	12.38	3.89	44.80	13.65	3.28	43.30	15.09	2.87	41.90	16.69	2.51
	54/12.2	55.80	10.25	5.44	54.10	11.26	4.80	52.40	12.40	4.23	50.70	13.71	3.70	49.10	15.17	3.24	47.50	16.78	2.83
	59/15	60.10	10.27	5.85	58.20	11.27	5.16	56.40	12.44	4.53	54.70	13.74	3.98	52.90	15.20	3.48	51.20	16.82	3.04
	68/20	67.80	10.30	6.58	65.80	11.32	5.81	63.80	12.48	5.11	61.80	13.79	4.48	59.90	15.28	3.92	57.90	16.89	3.43
ERLQ054BAVJU	-4/-20	28.50	11.53	2.47	28.40	12.52	2.27												
	5/-15	32.00	11.78	2.72	31.80	12.81	2.48	31.70	14.00	2.26									
	19/-7.2	39.00	12.00	3.25	38.40	13.13	2.92	37.80	14.40	2.63	37.20	15.82	2.35						
	25/-3.9	44.40	12.27	3.63	43.50	13.27	3.27	42.80	14.57	2.94	41.70	16.04	2.60	40.90	17.67	2.31			
	36/2.2	49.10	12.31	3.99	48.00	13.43	3.57	47.00	14.72	3.19	45.90	16.19	2.84	44.90	17.84	2.52	40.60	18.67	2.17
	45/7.2	55.00	12.43	4.42	54.60	13.55	4.03	53.10	14.87	3.57	51.80	16.35	3.17	50.50	18.02	2.80	45.70	18.85	2.42
	54/12.2	63.20	12.57	5.03	61.70	13.71	4.50	60.10	15.01	4.00	58.00	16.51	3.51	57.00	18.19	3.13	51.60	19.01	2.71
	59/15	68.10	12.65	5.38	68.40	13.82	4.95	64.70	15.12	4.28	63.00	16.61	3.79	61.30	18.29	3.35	55.50	20.12	2.76
	68/20	76.00	12.95	6.31	75.00	13.99	5.36	73.10	15.31	4.77	71.10	16.80	4.28	69.20	18.48	3.74	63.70	20.20	3.15

Peak value does not include capacity drop during frosting and defrosting periods.

MAXIMUM HEATING CAPACITY - INTEGRATED VALUE																			
MODEL	LWC (°F/°C) T _{amb} (°F/°C)	86/30			95/35			104/40			113/45			122/50			131/55		
		HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP
ERLQ036BAVJU	-4/-20	17.20	7.93	2.17	16.70	8.01	2.08	16.50	9.43	1.75									
	5/-15	19.70	8.04	2.45	19.00	8.75	2.17	18.70	9.62	1.94									
	19/-7.2	23.50	8.11	2.90	22.00	8.87	2.48	22.30	9.76	2.28	21.90	10.80	2.03						
	25/-3.9	25.40	7.66	3.32	24.40	8.41	2.90	24.10	9.27	2.60	23.70	10.26	2.31	22.60	11.28	2.00			
	36/2.2	27.80	7.81	3.56	26.80	8.60	3.12	28.00	9.49	2.95	26.00	10.54	2.47	24.90	11.80	2.11	23.80	12.89	1.85
	45/7.2	39.50	7.95	4.97	38.20	8.80	4.34	38.70	9.76	3.97	35.30	10.84	3.26	33.90	12.07	2.81	32.50	13.44	2.42
	54/12.2	44.80	7.85	5.71	43.20	8.70	4.97	41.70	9.69	4.30	40.10	10.79	3.72	38.60	12.04	3.21	37.10	13.42	2.76
	59/15	48.20	7.77	6.20	46.50	8.05	5.78	44.00	9.63	4.57	43.30	10.74	4.03	41.70	12.00	3.48	40.10	13.40	2.99
	68/20	54.30	7.84	6.93	52.50	8.51	6.17	50.70	9.49	5.34	49.00	10.64	4.61	47.20	11.01	4.29	45.40	13.33	3.41
ERLQ048BAVJU	-4/-20	22.00	9.76	2.25	21.70	10.62	2.04												
	5/-15	24.90	9.95	2.50	24.30	10.84	2.24	23.80	11.86	2.01									
	19/-7.2	27.50	10.13	2.71	26.80	11.08	2.42	28.00	12.15	2.30	25.30	13.37	1.89						
	25/-3.9	31.50	9.64	3.27	30.70	10.53	2.92	30.50	11.55	2.64	29.50	12.44	2.37	28.60	13.73	2.08			
	36/2.2	34.20	9.90	3.45	33.10	10.82	3.06	32.90	11.92	2.76	31.80	12.83	2.48	30.50	14.18	2.15	29.80	15.67	1.90
	45/7.2	49.20	10.25	4.80	47.80	11.25	4.25	46.20	12.36	3.74	44.80	13.65	3.28	43.30	15.09	2.87	41.90	16.59	2.53
	54/12.2	55.80	10.25	5.44	54.10	11.26	4.80	52.40	12.40	4.23	50.70	13.71	3.70	49.10	15.17	3.24	47.50	16.78	2.83
	59/15	60.10	10.27	5.85	58.20	11.27	5.16	56.40	12.44	4.53	54.70	13.74	3.98	52.90	15.20	3.48	51.20	16.82	3.04
	68/20	67.80	10.30	6.58	65.80	11.32	5.81	63.80	12.48	5.11	61.80	13.79	4.48	59.90	15.28	3.92	57.90	16.89	3.43
ERLQ054BAVJU	-4/-20	25.40	11.55	2.20	25.20	12.54	2.01												
	5/-15	28.50	11.80	2.42	28.30	12.02	2.35	28.20	14.02	2.01									
	19/-7.2	30.40	11.82	2.57	29.90	12.05	2.48	29.40	14.08	2.09	29.00	15.48	1.87						
	25/-3.9	35.90	11.53	3.11	35.20	12.56	2.80	34.50	13.76	2.51	33.80	15.14	2.23	33.10	16.08	2.06			
	36/2.2	37.90	11.16	3.40	37.10	12.19	3.05	38.30	13.34	2.87	35.50	14.88	2.39	34.70	16.16	2.15	31.40	16.05	1.96
	45/7.2	55.80	12.43	4.49	54.50	13.55	4.02	53.10	14.87	3.57	51.80	16.35	3.17	50.50	18.02	2.80	45.70	18.85	2.42
	54/12.2	63.20	12.57	5.03	61.70	13.71	4.50	60.10	15.01	4.00	58.00	16.51	3.55	57.00	18.19	3.13	51.80	19.01	2.72
	59/15	68.10	12.58	5.41	68.40	13.82	4.95	64.70	15.12	4.28	63.00	16.61	3.79	61.30	18.29	3.35	56.50	20.12	2.81
	68/20	78.90	12.65	6.24	75.00	13.99	5.36	73.10	15.31	4.77	71.10	16.80	4.28	69.20	18.48	3.74	63.70	20.28	3.14

Integrated value takes into consideration the capacity drop during frosting and defrosting periods.

3.2 Cooling

MAXIMUM COOLING CAPACITY																			
MODEL	T _{amb} (°F/°C) LWE (°F/°C)	60/15.6			77/25			86/30			95/35			104/40			113/45		
		CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER
ERLQ036BAVJU	45/7.2	39.90	2.68	14.89	38.10	2.98	12.79	38.10	3.33	10.84	34.10	3.72	9.17	32.00	4.15	7.71	29.90	4.63	6.46
	50/10	43.90	2.70	16.26	41.90	3.01	13.92	39.70	3.37	11.78	37.00	3.77	9.81	35.30	4.21	8.38	32.90	4.70	7.00
	55/12.8	48.00	2.72	17.65	45.80	3.04	15.07	43.50	3.41	12.76	41.20	3.82	10.79	38.70	4.27	9.06	36.20	4.77	7.59
	59/15	50.90	2.73	18.64	48.60	3.06	15.88	46.20	3.44	13.43	43.70	3.85	11.35	41.10	4.32	9.51	36.50	4.82	7.57
	64/17.8	55.30	2.75	20.11	52.80	3.10	17.03	50.20	3.48	14.43	47.60	3.91	12.17	44.80	4.36	10.28	42.00	4.90	8.57
	72/22.2	61.50	2.79	22.04	55.70	3.15	17.68	55.00	3.55	15.49	53.00	3.99	13.28	50.00	4.48	11.16	45.40	4.05	11.13
ERLQ048BAVJU	45/7.2	49.60	3.98	12.46	47.50	4.40	10.80	45.20	4.87	9.28	42.70	5.41	7.89	39.90	6.02	6.63	37.80	6.04	6.26
	50/10	54.60	4.08	13.38	52.30	4.50	11.62	49.70	4.99	9.96	45.00	5.54	8.12	43.90	6.16	7.13	38.20	5.58	6.85
	55/12.8	59.90	4.18	14.33	57.20	4.82	11.87	54.40	5.12	10.63	51.30	5.65	9.08	48.00	6.31	7.61	40.70	5.16	7.89
	59/15	63.50	4.25	14.94	60.70	4.70	12.91	57.60	5.21	11.06	54.40	5.78	9.41	50.90	6.41	7.94	41.60	4.91	8.47
	64/17.8	69.10	4.37	15.81	65.90	4.93	13.64	62.60	5.38	11.64	59.10	5.94	9.95	55.40	6.59	8.42	44.00	4.54	9.69
	72/22.2	70.80	4.58	15.46	73.30	5.03	14.57	69.60	5.57	12.50	65.70	6.18	10.63	58.10	5.49	10.58	45.40	4.08	11.13
ERLQ054BAVJU	45/7.2	52.30	4.50	11.62	50.10	4.97	10.08	47.60	5.60	8.50	44.70	6.08	7.35	41.50	6.71	6.18	37.60	6.04	6.23
	50/10	57.70	4.63	12.46	55.10	5.11	10.78	52.20	5.65	9.24	49.00	6.23	7.87	45.50	6.87	6.62	38.20	5.58	6.85
	55/12.8	63.20	4.77	13.25	60.30	5.27	11.44	57.10	5.81	9.83	53.60	6.41	8.36	49.80	7.06	7.05	40.70	5.16	7.89
	59/15	67.00	4.87	13.76	63.90	5.37	11.90	60.50	5.92	10.22	55.80	6.52	8.53	52.70	7.18	7.34	41.80	4.91	8.51
	64/17.8	71.70	5.19	13.82	68.30	5.72	11.94	64.60	6.30	10.25	60.60	6.94	8.73	56.00	6.83	8.20	44.00	4.54	9.69
	72/22.2	79.70	5.60	14.49	75.80	6.06	12.53	71.70	6.65	10.78	67.30	7.30	9.22	58.10	5.49	10.58	45.40	4.06	11.18

Symbols:


- CC Cooling Capacity @ maximum operating frequency, BTU/h
- HC Heating Capacity @ maximum operating frequency, BTU/h
- PI Cooling Power Input (kW), Heating Power Input (kBTU/h measured according to Eurovent 6/C003-2006 (kW)/EN14511
- LWE Leaving Water evaporator temperature (Cooling)
- LWC Leaving Water condenser temperature (Heating)
- Tamb Outdoor Ambient temperature, RH = 85%

Conditions:

Cooling Capacity BTU/h and valid for chilled water range $\Delta T = 5-15^{\circ}F$ ($3-8^{\circ}C$)
 Heating Capacity is according to Eurovent 6/C/003-2006 (kW) and valid for heating water range $\Delta T = 5-15^{\circ}F$ ($3-8^{\circ}C$)
 Power Input is total of indoor and outdoor unit, except the circulation pump; (90W per EN14511)

3.3 Altitude Correction

Capacity Correction Factor- due to lower air density

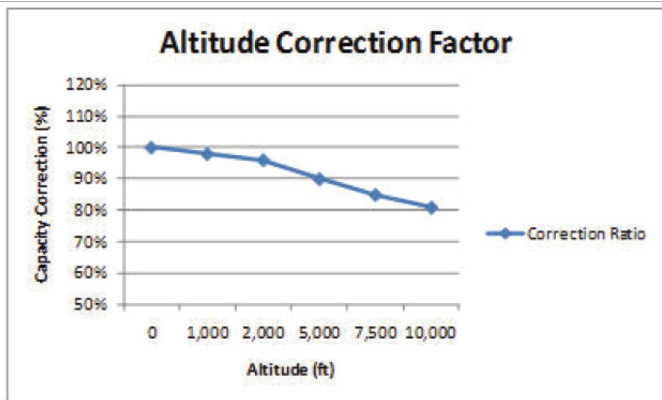

ALTITUDE		DENSITY		CAPACITY RATIO
(ft)	(m)	(lb/ft ³)	(kg/m ³)	(%)
0	0	0.0807	1.293	100
1,000	305	0.7785	1.247	98
2,000	610	0.075	1.202	96
5,000	1,524	0.0672	1.076	90
7,500	2,286	0.0611	0.979	85
10,000	3,048	0.0555	0.889	81

Altitude Influence on Daikin Altherma Operation Range

Altitude		Ambient Temperature		Absolute Atmospheric		Absolute Pressure		R410A Condition	
(ft)	(m)	(°F)	(°C)	(bar)	(psi)	40 bar (G)	580.15 psi	Temp (°F)	(psi)
0	0	59	15	1.013	14.7	38.99	565.45	143.87	62.15
1,000	305	59	15	0.977	14.17	39.02	565.98	143.94	62.19
2,000	610	59	15	0.942	13.66	39.06	566.49	144.01	62.23
5,000	1,524	59	15	0.843	12.23	39.16	567.92	144.21	62.34
7,500	2,286	59	15	0.767	11.13	39.23	568.99	144.37	62.43
10,000	3,048	59	15	0.697	10.11	39.3	570.04	144.52	62.51

Taking this influence into consideration, it is recommended to design your Daikin Altherma system, with a target leaving water temperature 2°F (1°C) below the maximum permitted set-point of 122°F (50°C).

Considerations for project designs in high altitude conditions

1. Determine the altitude at the location the Daikin Altherma system is being considered for.
2. Verify the altitude correction factor from the table enclosed in this bulletin.
3. If an altitude falls within specified values, use the correction graph to determine the applicable capacity correction factor.
4. Since the Daikin Altherma selection and simulator software does not correct for altitude, add the altitude correction factor to the load requirements before the initial selection is made.
5. Conduct the equipment selection based on these conditions as per normal procedures.


Example: -

A Daikin Altherma system is being considered for an application in Denver, CO.


Denver is located at an altitude of 5,000ft, thus the capacity correction factor would be 10%.

If the load calculations determined a 40,000 Btu/hr requirement, adding the correction factor for altitude would result in 40,000 Btu/hr + 10% (4,000 Btu/hr), thus the load required for the selection of Daikin Altherma would be 44,000 Btu/hr.


4. Dimensional Drawing - Split System

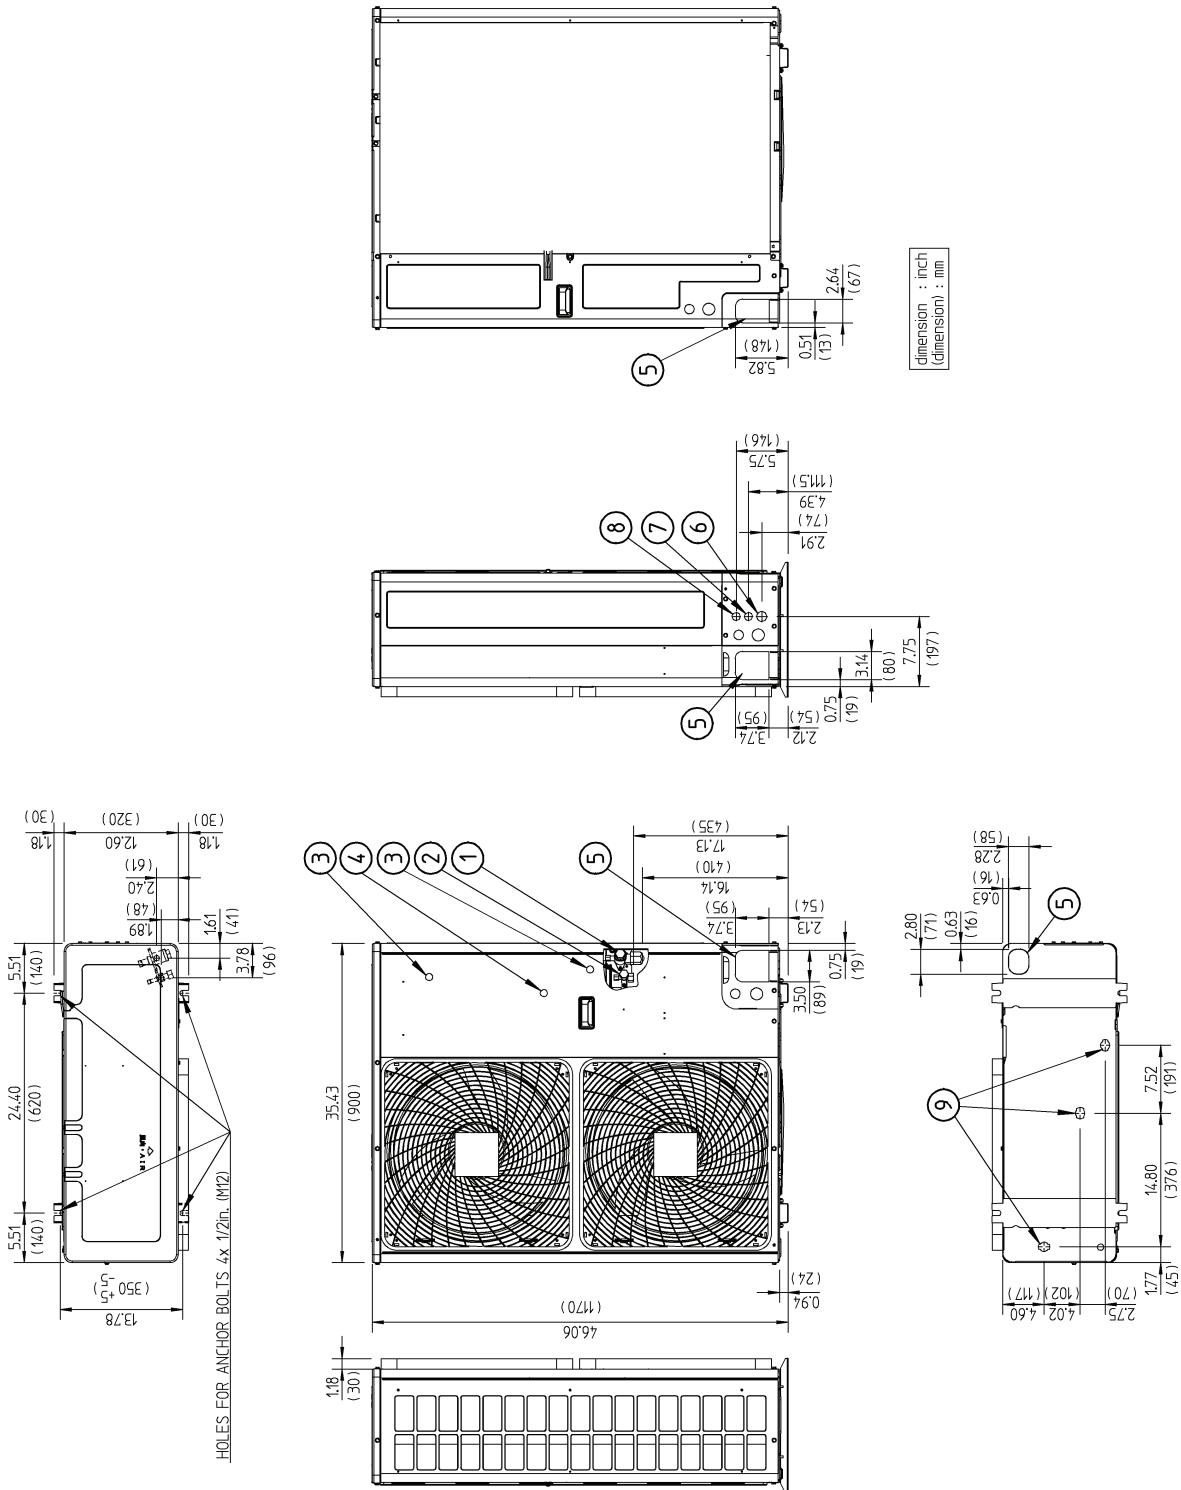

5. Center of Gravity – Split System

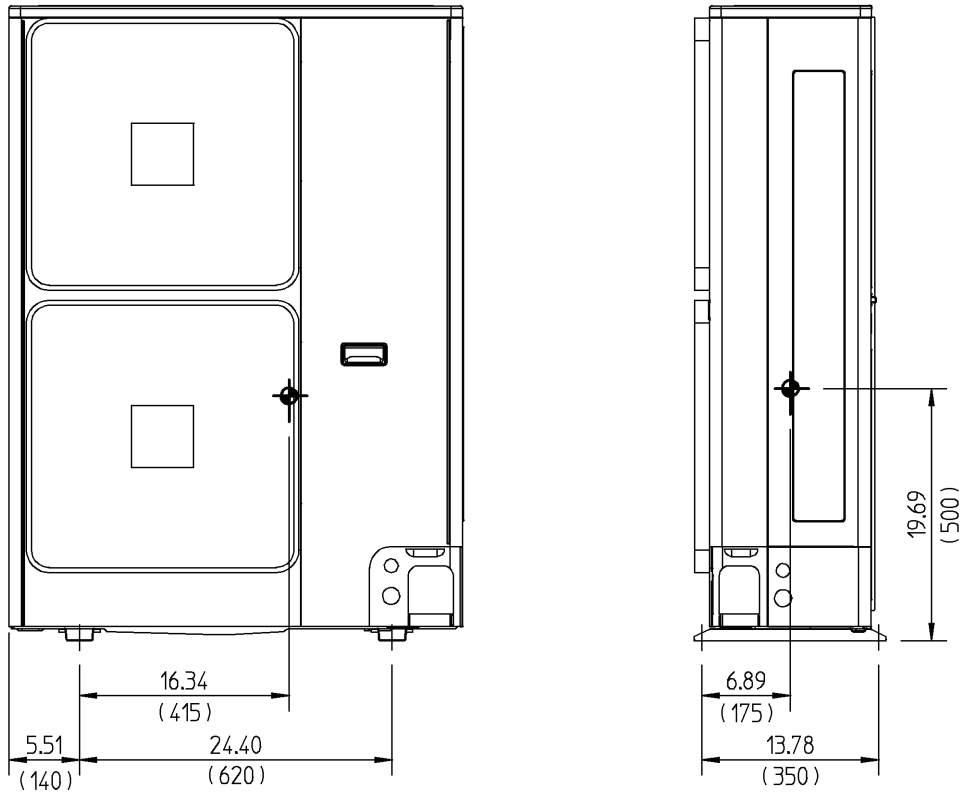


6. Piping Diagram - Split System

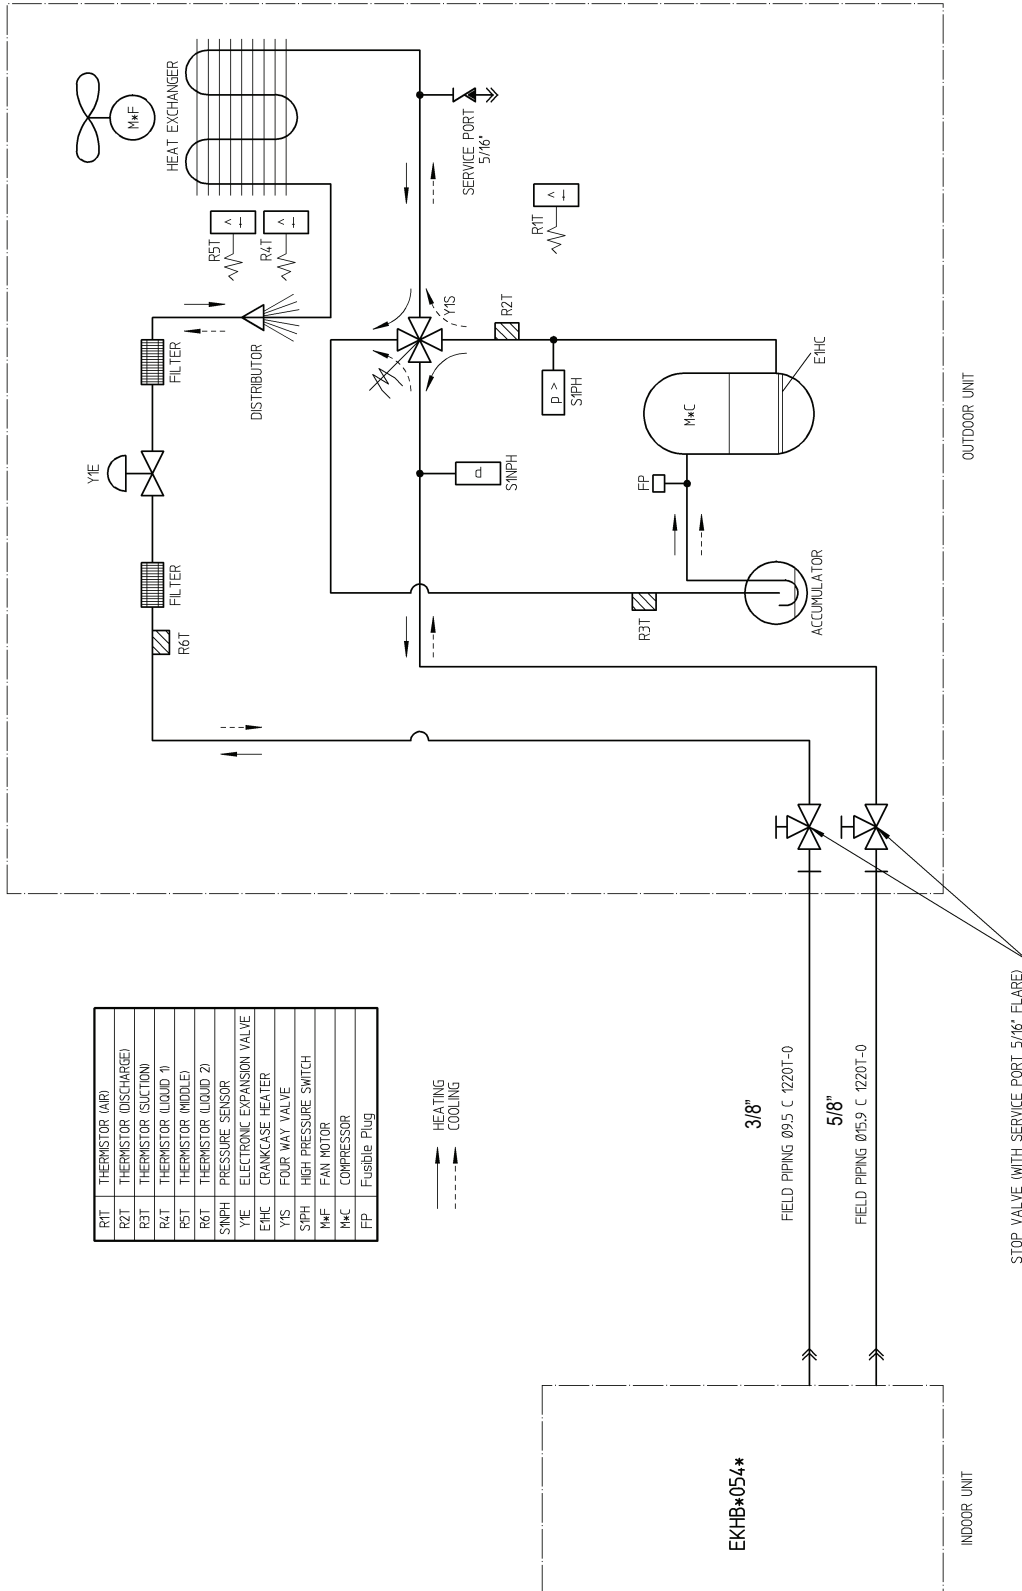

R1T	THERMISTOR (AIR)
R2T	THERMISTOR (DISCHARGE)
R3T	THERMISTOR (SUCTION)
R4T	THERMISTOR (LIQUID 1)
R5T	THERMISTOR (MIDDLE)
R6T	THERMISTOR (LIQUID 2)
SNPH	PRESSURE SENSOR
YIE	ELECTRONIC EXPANSION VALVE
E+HC	CRANKCASE HEATER
YIS	FOUR WAY VALVE
SPH	HIGH PRESSURE SWITCH
M+F	FAN MOTOR
M+C	COMPRESSOR
FP	Fusible Plug


——— HEATING
 - - - - - COOLING

7. Wiring Diagram - Split System

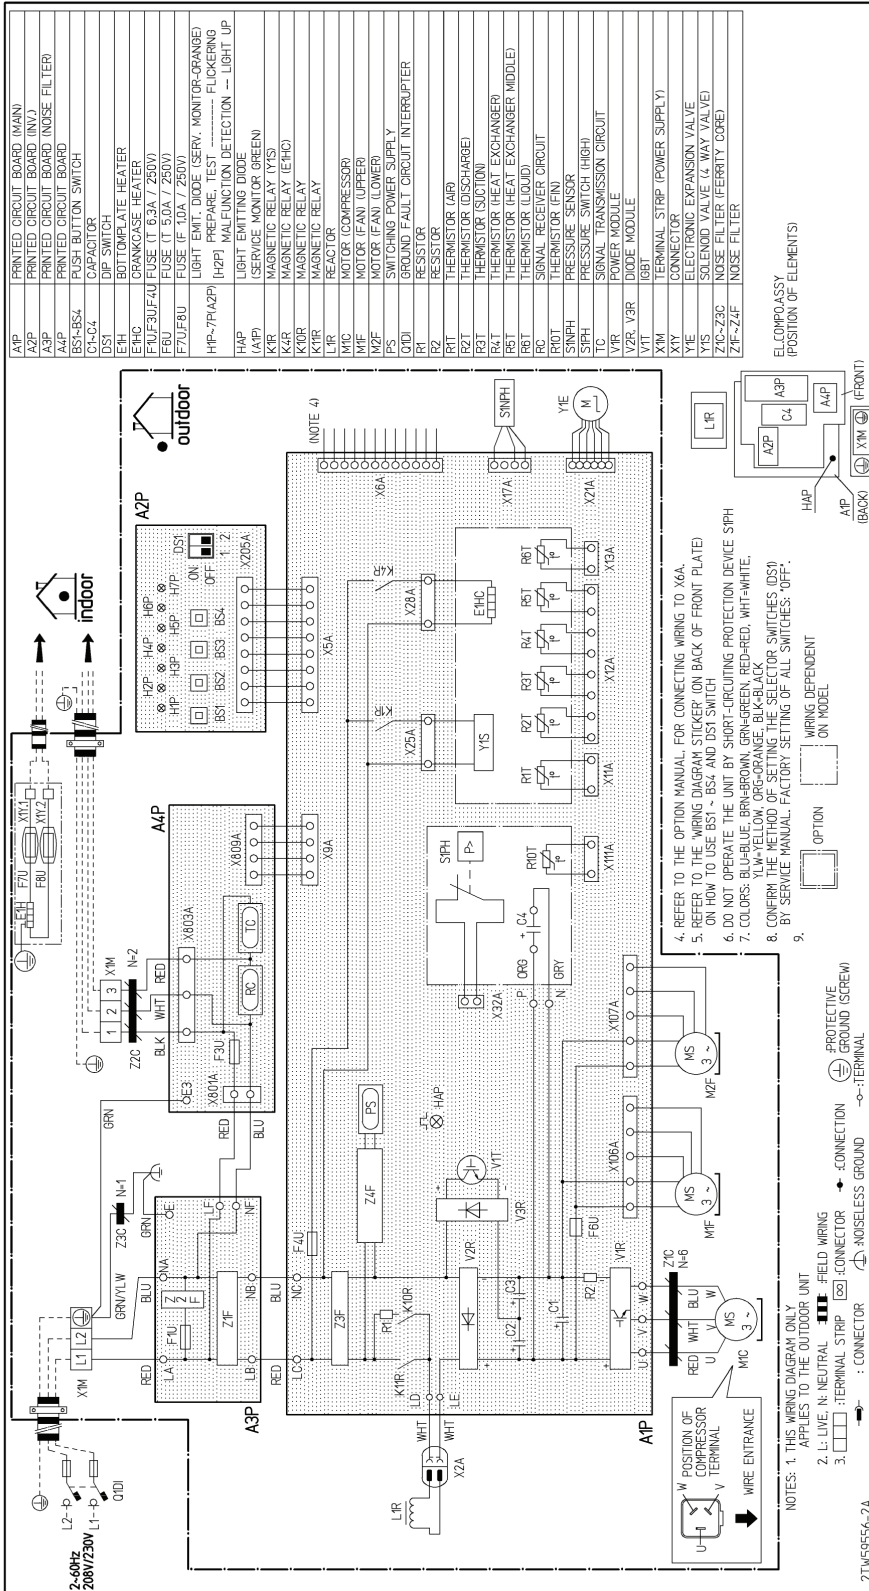


8. Sound Data - Split System

Normal Operation:

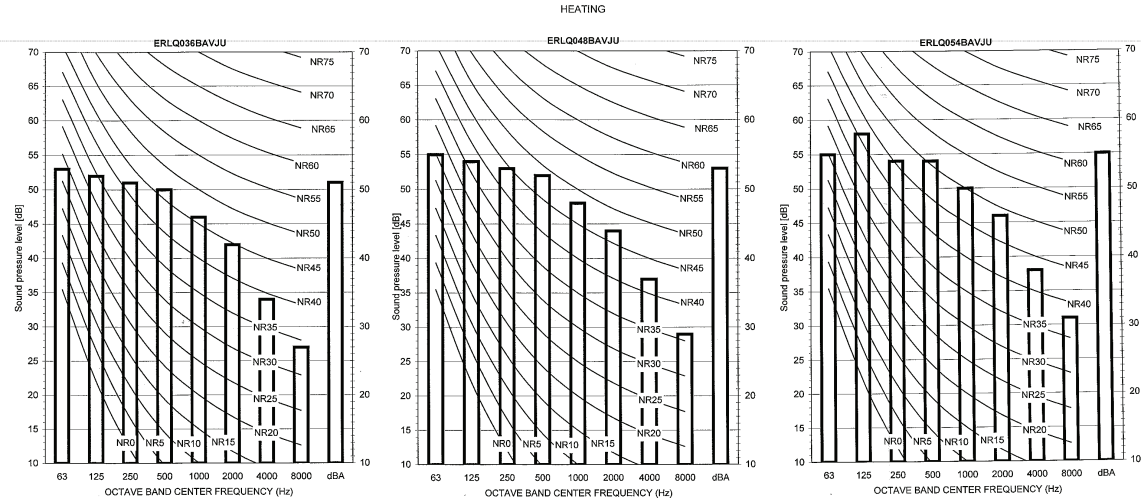

NOTES:
 - DATA IS VALID AT FREE FIELD CONDITION (MEASURED IN A SEMI-ANAOHC ROOM)
 - dBA = A-WEIGHTED SOUND PRESSURE LEVEL. (A-SCALE ACCORDING TO IEC)
 - REFERENCE ACOUSTIC PRESSURES 0dB = 20µPa
 - IF SOUND IS MEASURED UNDER ACTUAL INSTALLATION CONDITIONS, THE MEASURED VALUE WILL BE HIGHER DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTIONS

Night Quiet Operation:

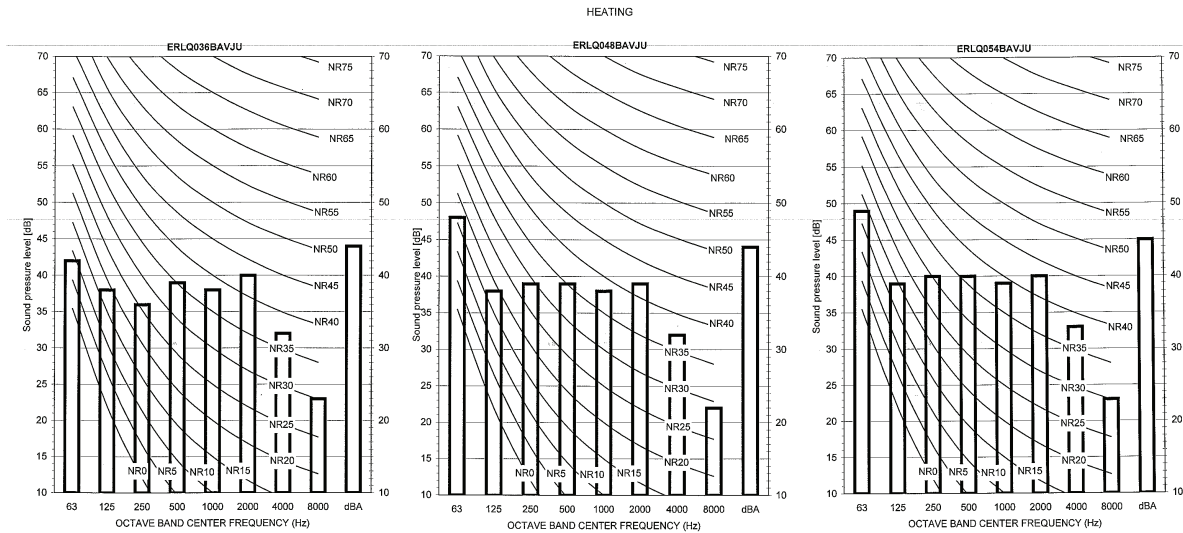

NOTES:
 - DATA IS VALID AT FREE FIELD CONDITION (MEASURED IN A SEMI-ANAOHC ROOM)
 - dBA = A-WEIGHTED SOUND PRESSURE LEVEL. (A-SCALE ACCORDING TO IEC)
 - REFERENCE ACOUSTIC PRESSURES 0dB = 20µPa
 - IF SOUND IS MEASURED UNDER ACTUAL INSTALLATION CONDITIONS, THE MEASURED VALUE WILL BE HIGHER DUE TO ENVIRONMENTAL NOISE AND SOUND REFLECTIONS

9. Installation - Split System

9.1 Installation Location

- The equipment is not is not intended for use in a potentially explosive atmosphere.
- Choose a place solid enough to bear the weight and vibration of the unit, where operation sounds will not be amplified.
- Locate the unit so that operation sounds and discharged hot/cold air will not bother neighbors.
- Avoid places such as bedrooms so that operation sounds are not a problem.
- Allow sufficient space for carrying the unit into and out of the site.
- Ensure there is sufficient space for air passage and a lack of obstructions around the air inlet and the air outlet.
- The site must be free from the possibility of flammable gas leakage in any nearby area.
- Install units, power cable, and inter-unit cables at least 10 feet (3 m) away from televisions and radios to prevent interference.
- Depending on radio wave conditions, electromagnetic interference may still occur even if installed more than 10 ft. (3 m) away.
- In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the outdoor unit.
- Since condensate flows out of the outdoor unit, do not place anything under the unit that must be kept from moisture.

IN COLD CLIMATES:

- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, install a baffle plate on the air discharge side of the outdoor unit.
- Unit should be installed with a minimum of 4" (10 cm) free space below the unit's bottom plate at all condition, e.g., heavy snowfall (construct a pedestal if necessary).
- In heavy snowfall areas, it is very important to select an installation site where the snow will not affect the unit. If lateral snowfall is possible, make sure the heat exchanger coil is not affected by the snow (construct a lateral canopy if necessary). See Figure 1:



Figure 1: construction of canopy and pedestal

9.2 Installation Space

A. NON STACKED INSTALLATION

LEGEND (Unit: inch [mm])

Suction side obstacle
 Discharge side obstacle
 Left side obstacle
 Right side obstacle
 Top side obstacle
 Obstacle is present


This situation is not allowed

Obstacle	A	B1	B2	C	D1	D2	E	L1/L2
None	≥4 [100]	≥4 [100]	≥4 [100]	≥4 [100]				
Top	≥4 [100]	≥4 [100]	≥4 [100]	≥6 [150]	≥20 [500]	≥20 [500]	≥40 [1000]	
Left	≥6 [150]	≥6 [150]	≥6 [150]	≥6 [150]	≥20 [500]	≥20 [500]	≥40 [1000]	
Right	≥6 [150]	≥6 [150]	≥6 [150]	≥6 [150]	≥20 [500]	≥20 [500]	≥40 [1000]	
Discharge	≥4 [100]	≥4 [100]	≥4 [100]	≥6 [150]	≥20 [500]	≥20 [500]	≥40 [1000]	
Suction	≥4 [100]	≥4 [100]	≥4 [100]	≥6 [150]	≥20 [500]	≥20 [500]	≥40 [1000]	
Top & Discharge	≥10 [250]	≥10 [250]	≥10 [250]	≥6 [150]	≥30 [750]	≥30 [750]	≥40 [1000]	1
Top & Suction	≥10 [250]	≥10 [250]	≥10 [250]	≥6 [150]	≥30 [750]	≥30 [750]	≥40 [1000]	1
Left & Discharge	≥8 [200]	≥8 [200]	≥8 [200]	≥6 [150]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Left & Suction	≥8 [200]	≥8 [200]	≥8 [200]	≥6 [150]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Right & Discharge	≥8 [200]	≥8 [200]	≥8 [200]	≥6 [150]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Right & Suction	≥8 [200]	≥8 [200]	≥8 [200]	≥6 [150]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Discharge & Suction	≥8 [200]	≥8 [200]	≥8 [200]	≥6 [150]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
None	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	
Top	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	
Left	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	
Right	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	
Discharge	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	
Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	
Top & Discharge	≥10 [250]	≥10 [250]	≥10 [250]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Top & Suction	≥10 [250]	≥10 [250]	≥10 [250]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Left & Discharge	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Left & Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Right & Discharge	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Right & Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
Discharge & Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	1
None	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Top	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Left	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Right	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Discharge	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Top & Discharge	≥10 [250]	≥10 [250]	≥10 [250]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Top & Suction	≥10 [250]	≥10 [250]	≥10 [250]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Left & Discharge	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Left & Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Right & Discharge	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Right & Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2
Discharge & Suction	≥8 [200]	≥12 [300]	≥8 [200]	≥8 [200]	≥40 [1000]	≥40 [1000]	≥40 [1000]	2


1 In these cases, close bottom of the installation frame to prevent discharged air from being bypassed
 2 In these cases, only 2 units can be installed

B. STACKED INSTALLATION

1. OBSTACLES EXIST IN FRONT OF THE OUTLET SIDE

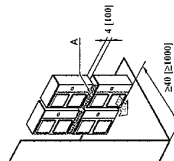

2. OBSTACLES EXIST IN FRONT OF THE AIR INLET

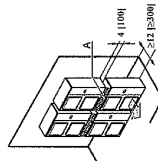


Do not stack more than one unit.


About 4 in. (100mm) is required as the dimension for laying the upper outdoor unit's drain pipe. Get the portion A sealed so that air from the outlet does not bypass

C. MULTIPLE-ROW INSTALLATION

1. INSTALLATION OF ONE UNIT PER ROW

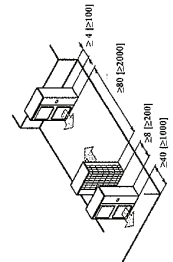


2. INSTALLING MULTIPLE UNITS (2 units or more) IN LATERAL CONNECTION PER ROW

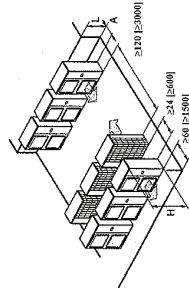

Relation of dimensions of H, A and L are shown in the table below.

L	A
0 < L ≤ 1/2H	10 [250]
1/2H < L	12 [300]
H < L	Installation not allowed

10. Operation Range - Split System

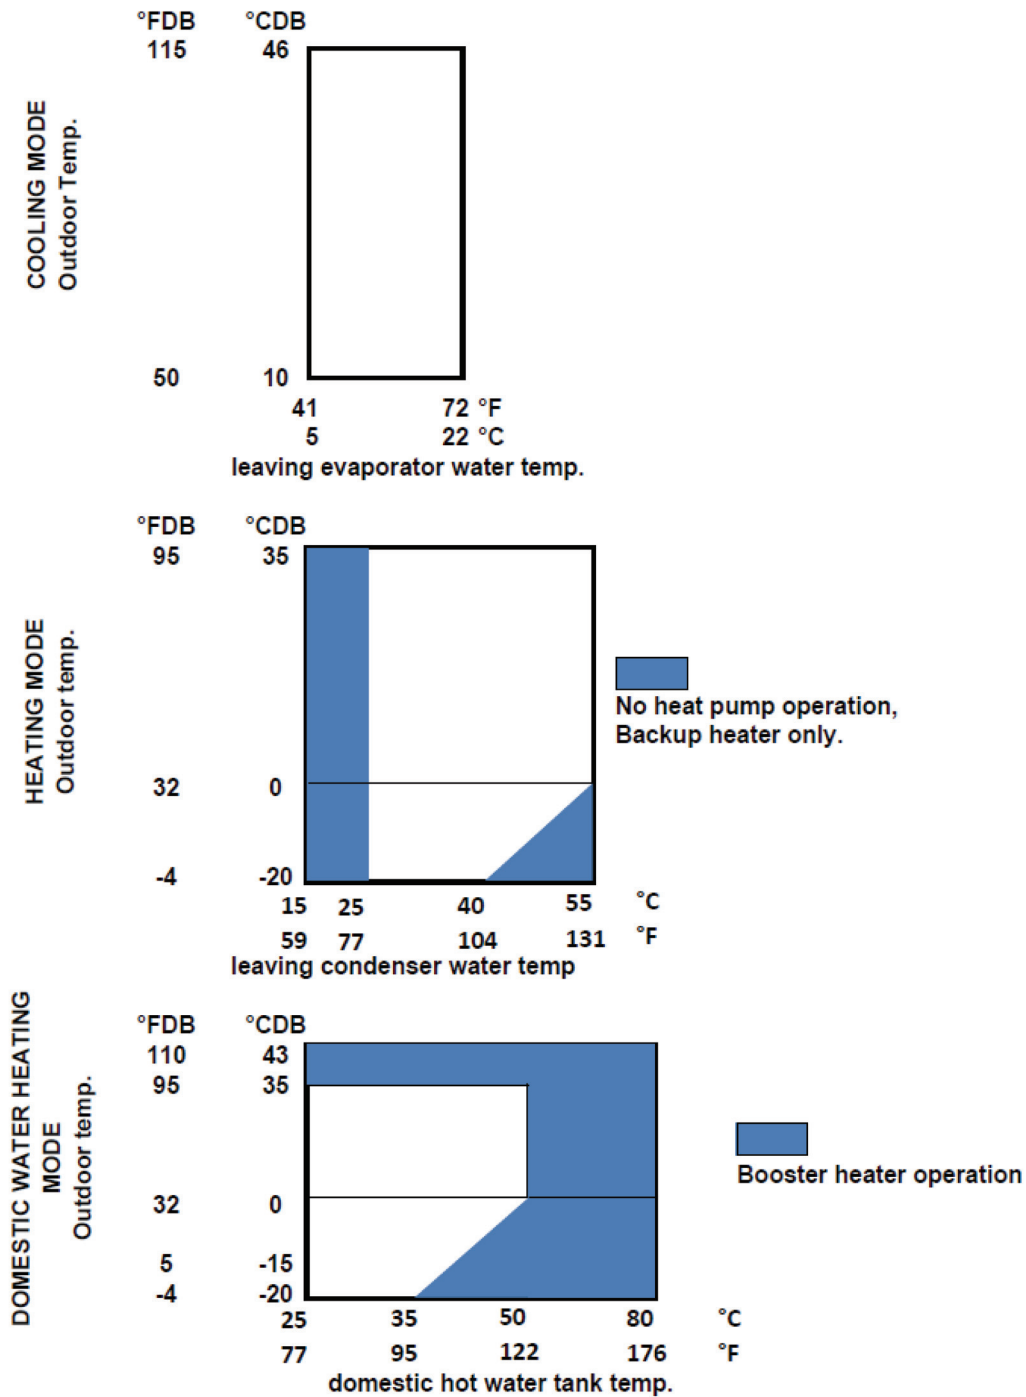

1. EKHB_054BA - Hydrobox

1.1 Features

- Heating only - **EKHBH054BA**
- Heat Pump (heating & cooling) - **EKHBX054BA**
- Large capacity indoor unit
- Cost effective alternative to a fossil fuel boiler
- Low energy bills and low CO₂ emissions
- Interface control with field selectable options that include dual set point (heating & cooling), Quiet Mode, DHW priority settings, schedule timer.
- Easy to install
- Total solution for year round comfort
- Apply with split system outdoor unit (ERLQ)
- Select from 2 sizes of integrated backup heat 3kW (single stage) or 6 kW (2-stage)



The hydrobox is the indoor part of the air-to-water ERLQ outdoor heat pump. These units are designed for wall-mounted indoor installation. The units can be combined with fan coil units, floor heating applications, low temperature radiators, optional Daikin Domestic Hot Water Tanks, and optional Daikin Solar Kits for domestic hot water applications.


The unit range consists of two main versions: a heating/cooling version (EKHBX) and a heating-only version (EKHBH). Both versions are delivered with an integrated backup heater for additional heating during cold outdoor temperatures. The backup heater also serves as a backup if malfunctioning of the outdoor unit should occur. The backup heater models are available for a heating capacity of 3kW and 6kW.

2. Specifications - Hydrobox


2-1 TECHNICAL SPECIFICATIONS											
				EKHBH*			EKHBX*				
				EKHBH054BA*			EKHBX054BA*				
Outdoor units				ERLQ036BAVJU	ERLQ048BAVJU	ERLQ054BAVJU	ERLQ036BAVJU	ERLQ048BAVJU	ERLQ054BAVJU		
Nominal input (Indoor only without electric heater)				208-230V / 1 ph / 60Hz							
Casing		Color	Neutral White RAL9010								
		Material	Epoxy polyester painted galvanized steel								
Dimensions	Packing	Height	in (mm)	49.23 (1225)							
		Width	in (mm)	25.98 (660)							
		Depth	in (mm)	24.02 (610)							
	Unit	Height	in (mm)	36.30 (922)							
		Width	in (mm)	19.76 (502)							
		Depth	in (mm)	14.21 (361)							
Weight of unit	Machine net weight		lbs (kg)	123 (55)							
	Packed machine weight		lbs (kg)	152 (69)							
Weight of packing materials	Material	EPS, Wood, Carton, PP (straps)									
	Weight	lbs (kg)	29 (14)								
Main Components	Pump	Type	water cooled								
		no. of speeds	3								
		Nominal ESP unit	Cooling	psi (kPa)	-	-	-	8.04 (55.4)	6.53 (45.0)	6.13 (42.3)	
			Heating	psi (kPa)	7.34 (50.7)	5.48 (37.8)	3.92 (27.1)	7.34 (50.7)	5.48 (37.8)	3.92 (27.1)	
		Power Input	W	210							
	Water Side Heat Exchanger	Type	Brazed Plate								
		Quantity	1								
		Water volume	gal/m (l/min)	0.27 (1.01)							
		Water flow rate Min.	gal/m (l/min)	4.23 (16)							
		Water flow rate Nom.	Cooling (2)	gal/m (l/min)	-	-	-	7.58 (28.7)	9.45 (35.8)	9.90 (37.5)	
			Heating (3)	gal/m (l/min)	8.47 (32.1)	10.59 (40.1)	12.12 (45.9)	8.47 (32.1)	10.59 (40.1)	12.12 (45.9)	
		Water flow rate Max.	Cooling	gal/min (l/min)	15.3 (58)						
			Heating	gal/min (l/min)	15.3 (58)						
		Insulation material	Polyurethane foam								
	Expansion vessel	Volume	gal/min (l/min)	2.64 (10)							
		Max. water pressure	psi (bar)	43.5 (3)							
		Pre pressure	psi (bar)	14.3 (1)							
	Water Filter	Diameter perforations	inch (mm)	0.039 (1)							
		Material	brass								

2-1 TECHNICAL SPECIFICATIONS						
Water Circuit	Piping Connections			G 1-1/4 (MALE) BSP		
	Piping		in (mm)	1-1/4 (31.8) BSP		
	Safety valve		psi (bar)	43.5 (3)		
	Manometer			Yes		
	Drain valve / Fill valve			Yes		
	Shut-off valve			Yes		
	Air Purge valve			Yes		
	Total water volume (6)		gal (l)	1.45 (5.5)		
Refrig. Circuit	Gas side		in (mm)	5/8 (15.9)		
	Liquid side		in (mm)	3/8 (9.52)		
Sound Level	Sound Pressure (4)	Heating	dBa	28		
	Sound power		dBa	-		
Operation range	Ambient	Cooling	°F (°C)	-	50 ~ 114.8 (10 ~ 46)	
		Heating	°F (°C)	-4 ~ 95 (-20 ~ 35)	-4 ~ 95 (-20 ~ 35)	
	Waterside	Heating	°F (°C)	-	41 ~ 76.6 (5 ~ 22)	
		Heating (5)	°F (°C)	59 ~ 131 (15 ~ 55)	59 ~ 131 (15 ~ 55)	
NOTES:		* (1) With option kit EKHBDP installed: Height = 36.85" (936 mm) * (2) Tamb 95°F (35°C) – LWE 44.6°F (7 C) (DT = 9°F (5°C)) * (3) DB/WB 44.6°F/42.8 F (7°C/6°C) – LWC 95°F (35°C) (DT = 9°F (5°C)) * (4) The sound pressure level is measured via a microphone at 3.23 ft (1 m) from the unit. It is a relative value, depending on the distance and acoustic environment. The sound pressure level mentioned is valid for pump medium speed. * (5) 59°F~77°F (15°C~25°C): BUH only, no heat pump operation = during commissioning * (6) Including piping + PHE + backup heater / excluding expansion vessel				
Electrical Specifications						
Electric heater (optional)	Type			3VJU	6VJU	
	Power supply (1),(2)	Phase		1~	1~	
		Frequency			60	60
		Voltage			V 208/230	208/230
	Current	Minimum Circuit Amps (MCA)		A	14.3	28.6
Maximum Overcurrent Protection (MOP)		A	20	30		
Voltage range	Minimum		V	187		
	Maximum		V	253		
Wiring connections	for power supply backup heater	quantity of wires		3G		
		type of wires		Note (3)		
	for power supply connection to optional domestic hot water tank + Q2L	quantity of wires		3G		
		type of wires		Note (3) & (4)		
	for connection with RST	quantity of wires		Note (7)		
		type of wires		Note (7)		
	for connection with A3P	quantity of wires		Note (6)		
		type of wires		Note (3) & (5)		
	for connection with M2S	quantity of wires		3G		
		type of wires		Note (3) & (5)		
for connection with M3S	quantity of wires		3G or 4G			
	type of wires		Note (3) & (5)			
for connection of bottom plate heater	quantity of wires		2			
	type of wires		Note (3)			
NOTES		* (1) Above mentioned power supply of hydrobox is fro backup heater only. The Switch box & pump of the hydrobox are supplied via the outdoor unit. The optional domestic hot water tank has a separate power supply. * (2) Optional electric heater has 2 capacity steps except for the 3VJU model which has only 1 capacity step. * (3) Select diameter and type according to local laws and regulations. * (4) For more details of the voltage range and current, refer to installation manual EKHBH/X054BA* * (5) Voltage: 24V / Maximum current: 100mA / Minimum AWG 18 (0.77MM ²) * (6) Depends on thermostat type; refer to Installation Manual for EKHBH/X054BA* * (7) Wire included in Option EKHWS*				

3. Dimensional Dwg. & Center of Gravity- Hydrobox

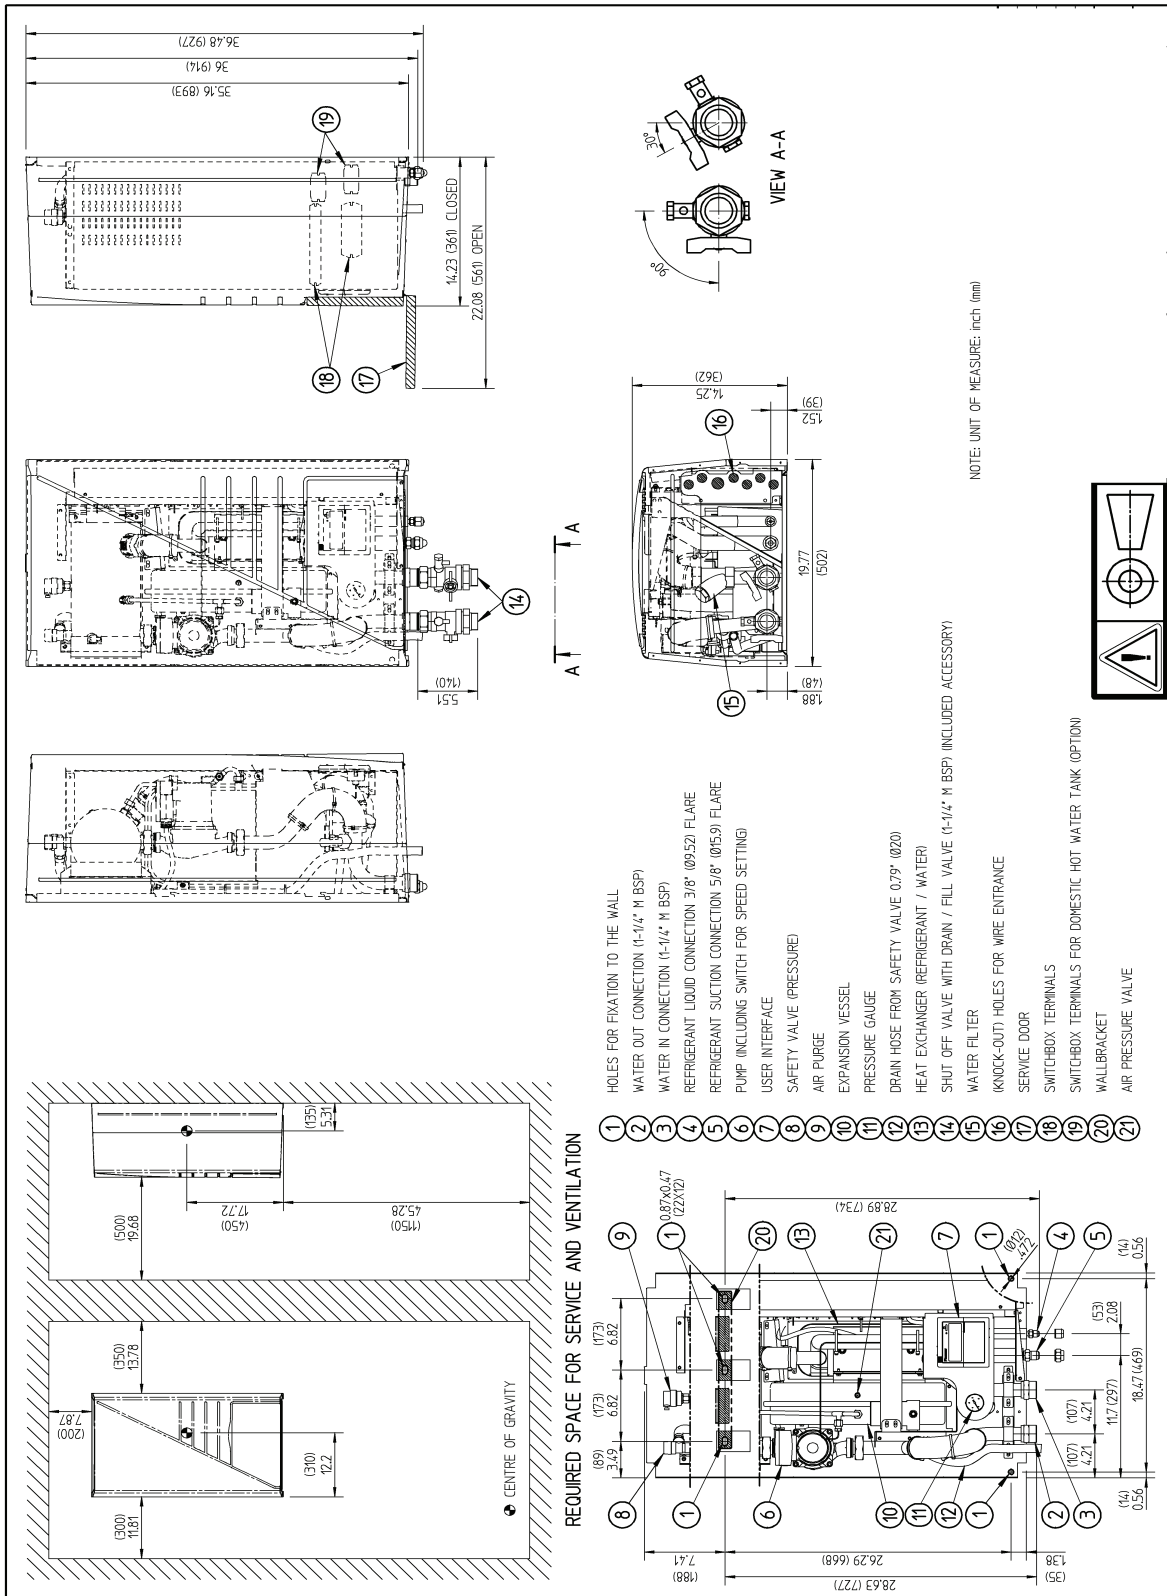


4. Piping Diagram - Hydrobox

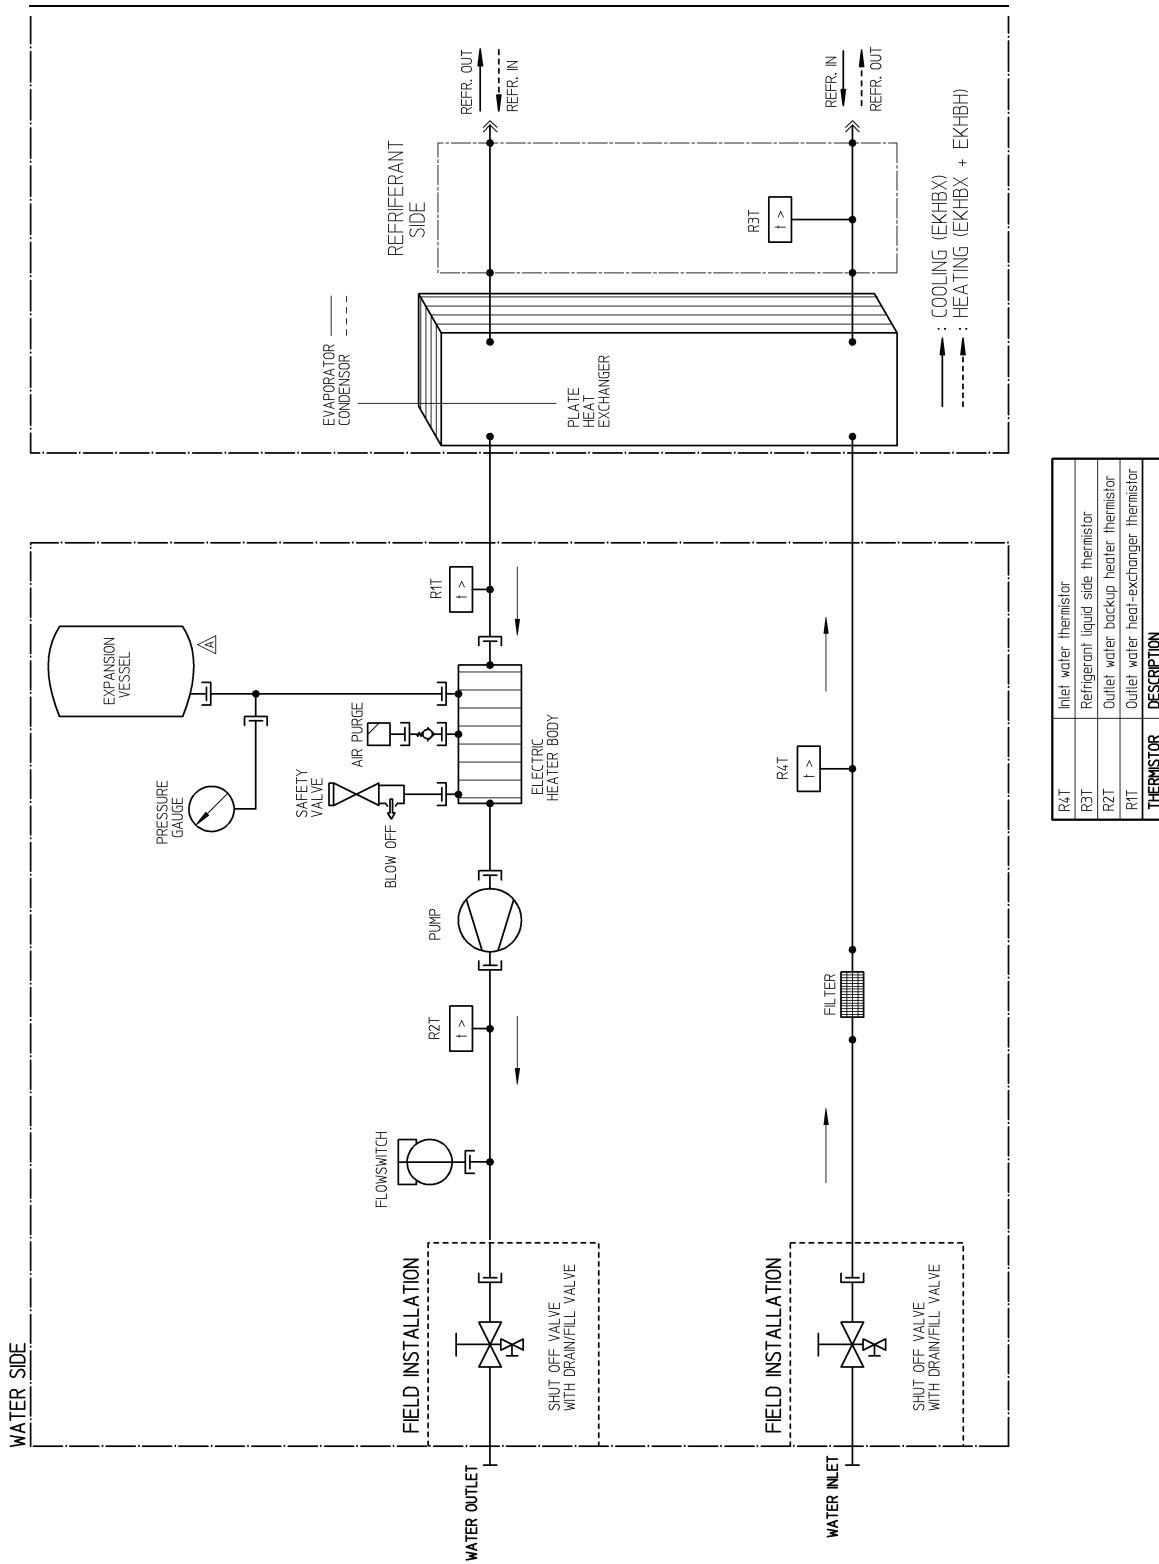

5. Wiring Diagram - Hydrobox

5.1 EKHB(H/X)054BA3VJU

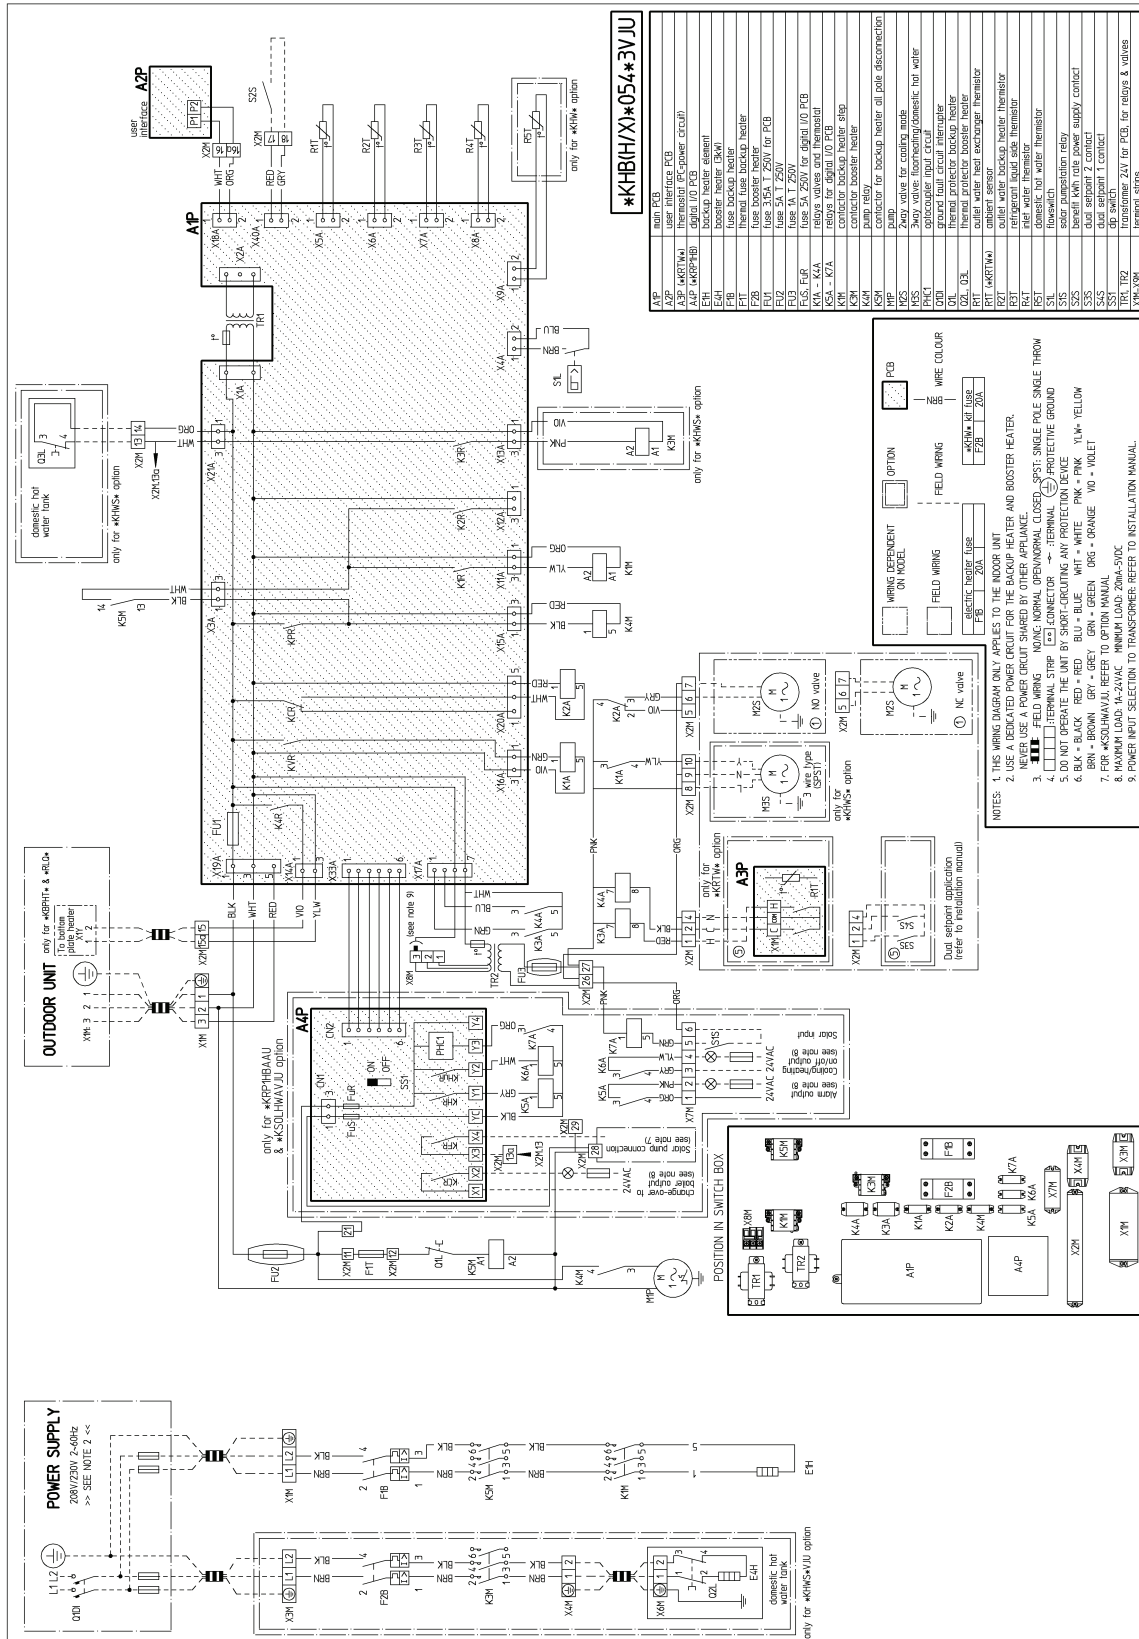

***KHB(H/X)054*3VJU**

A/P	main PCB
A/P	User Interface PCB
A/P	Thermostat PCB
A/P	Backup heater element
EHA	Backup heater element
EHB	Backup heater element
EHA	Backup heater element
EHB	Backup heater element
FU1	Fuse backup heater
FU2	Fuse backup heater
FU3	Fuse 3.5A T 250V for PCB
FU4	Fuse 3.5A T 250V for PCB
FU5	Fuse 3A T 250V
FU6	Fuse 3A T 250V
FU7	Fuse 3A T 250V
FU8	Fuse 3A T 250V
FU9	Fuse 3A T 250V
FU10	Fuse 3A T 250V
FU11	Fuse 3A T 250V
FU12	Fuse 3A T 250V
FU13	Fuse 3A T 250V
FU14	Fuse 3A T 250V
FU15	Fuse 3A T 250V
FU16	Fuse 3A T 250V
FU17	Fuse 3A T 250V
FU18	Fuse 3A T 250V
FU19	Fuse 3A T 250V
FU20	Fuse 3A T 250V
FU21	Fuse 3A T 250V
FU22	Fuse 3A T 250V
FU23	Fuse 3A T 250V
FU24	Fuse 3A T 250V
FU25	Fuse 3A T 250V
FU26	Fuse 3A T 250V
FU27	Fuse 3A T 250V
FU28	Fuse 3A T 250V
FU29	Fuse 3A T 250V
FU30	Fuse 3A T 250V
FU31	Fuse 3A T 250V
FU32	Fuse 3A T 250V
FU33	Fuse 3A T 250V
FU34	Fuse 3A T 250V
FU35	Fuse 3A T 250V
FU36	Fuse 3A T 250V
FU37	Fuse 3A T 250V
FU38	Fuse 3A T 250V
FU39	Fuse 3A T 250V
FU40	Fuse 3A T 250V
FU41	Fuse 3A T 250V
FU42	Fuse 3A T 250V
FU43	Fuse 3A T 250V
FU44	Fuse 3A T 250V
FU45	Fuse 3A T 250V
FU46	Fuse 3A T 250V
FU47	Fuse 3A T 250V
FU48	Fuse 3A T 250V
FU49	Fuse 3A T 250V
FU50	Fuse 3A T 250V
FU51	Fuse 3A T 250V
FU52	Fuse 3A T 250V
FU53	Fuse 3A T 250V
FU54	Fuse 3A T 250V
FU55	Fuse 3A T 250V
FU56	Fuse 3A T 250V
FU57	Fuse 3A T 250V
FU58	Fuse 3A T 250V
FU59	Fuse 3A T 250V
FU60	Fuse 3A T 250V
FU61	Fuse 3A T 250V
FU62	Fuse 3A T 250V
FU63	Fuse 3A T 250V
FU64	Fuse 3A T 250V
FU65	Fuse 3A T 250V
FU66	Fuse 3A T 250V
FU67	Fuse 3A T 250V
FU68	Fuse 3A T 250V
FU69	Fuse 3A T 250V
FU70	Fuse 3A T 250V
FU71	Fuse 3A T 250V
FU72	Fuse 3A T 250V
FU73	Fuse 3A T 250V
FU74	Fuse 3A T 250V
FU75	Fuse 3A T 250V
FU76	Fuse 3A T 250V
FU77	Fuse 3A T 250V
FU78	Fuse 3A T 250V
FU79	Fuse 3A T 250V
FU80	Fuse 3A T 250V
FU81	Fuse 3A T 250V
FU82	Fuse 3A T 250V
FU83	Fuse 3A T 250V
FU84	Fuse 3A T 250V
FU85	Fuse 3A T 250V
FU86	Fuse 3A T 250V
FU87	Fuse 3A T 250V
FU88	Fuse 3A T 250V
FU89	Fuse 3A T 250V
FU90	Fuse 3A T 250V
FU91	Fuse 3A T 250V
FU92	Fuse 3A T 250V
FU93	Fuse 3A T 250V
FU94	Fuse 3A T 250V
FU95	Fuse 3A T 250V
FU96	Fuse 3A T 250V
FU97	Fuse 3A T 250V
FU98	Fuse 3A T 250V
FU99	Fuse 3A T 250V
FU100	Fuse 3A T 250V


NOTES:

1. THIS WIRING DIAGRAM ONLY APPLIES TO THE INDOOR UNIT.
2. USE A DEDICATED POWER CIRCUIT FOR THE BACKUP HEATER AND BOOSTER HEATER.
3. NEVER USE A POWER CIRCUIT SHARED BY OTHER APPLIANCE.
4. FIELD WIRING IN THIS DIAGRAM IS INDICATED BY A DOTTED LINE.
5. DO NOT OPERATE THE UNIT BY SHORT-CIRCUITING ANY PROTECTION DEVICE.
6. WIRE COLOURS: BRN - BROWN, GRN - GREEN, ORG - ORANGE, WHT - WHITE, YEL - YELLOW.
7. FOR KSOJHVAVALI, REFER TO OPTION MANUAL.
8. MAXIMUM LOAD: 1A-2AVAC. MINIMUM LOAD: 20mA-5VDC.
9. POWER INPUT SELECTION TO TRANSFORMER: REFER TO INSTALLATION MANUAL.

6. External Connection Diagram - Hydrobox


Electrical connection diagram Altherma

For more details please check unit wiring diagram

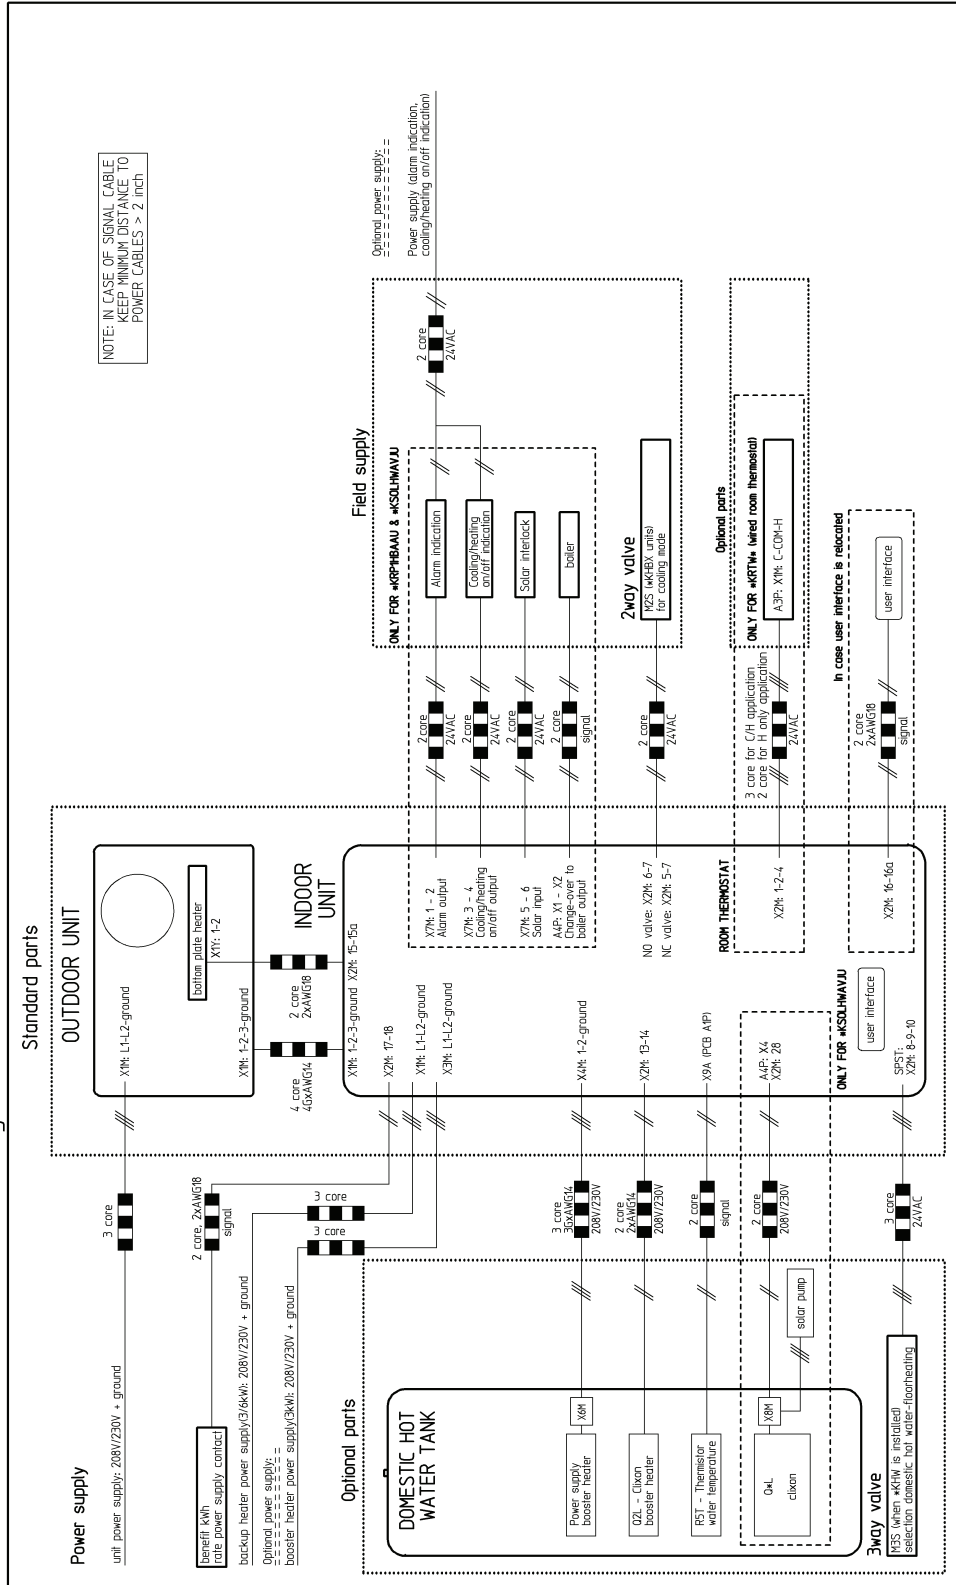

7. Condensate Instructions - Hydrobox

Leaving water temperature limit to prevent condensation

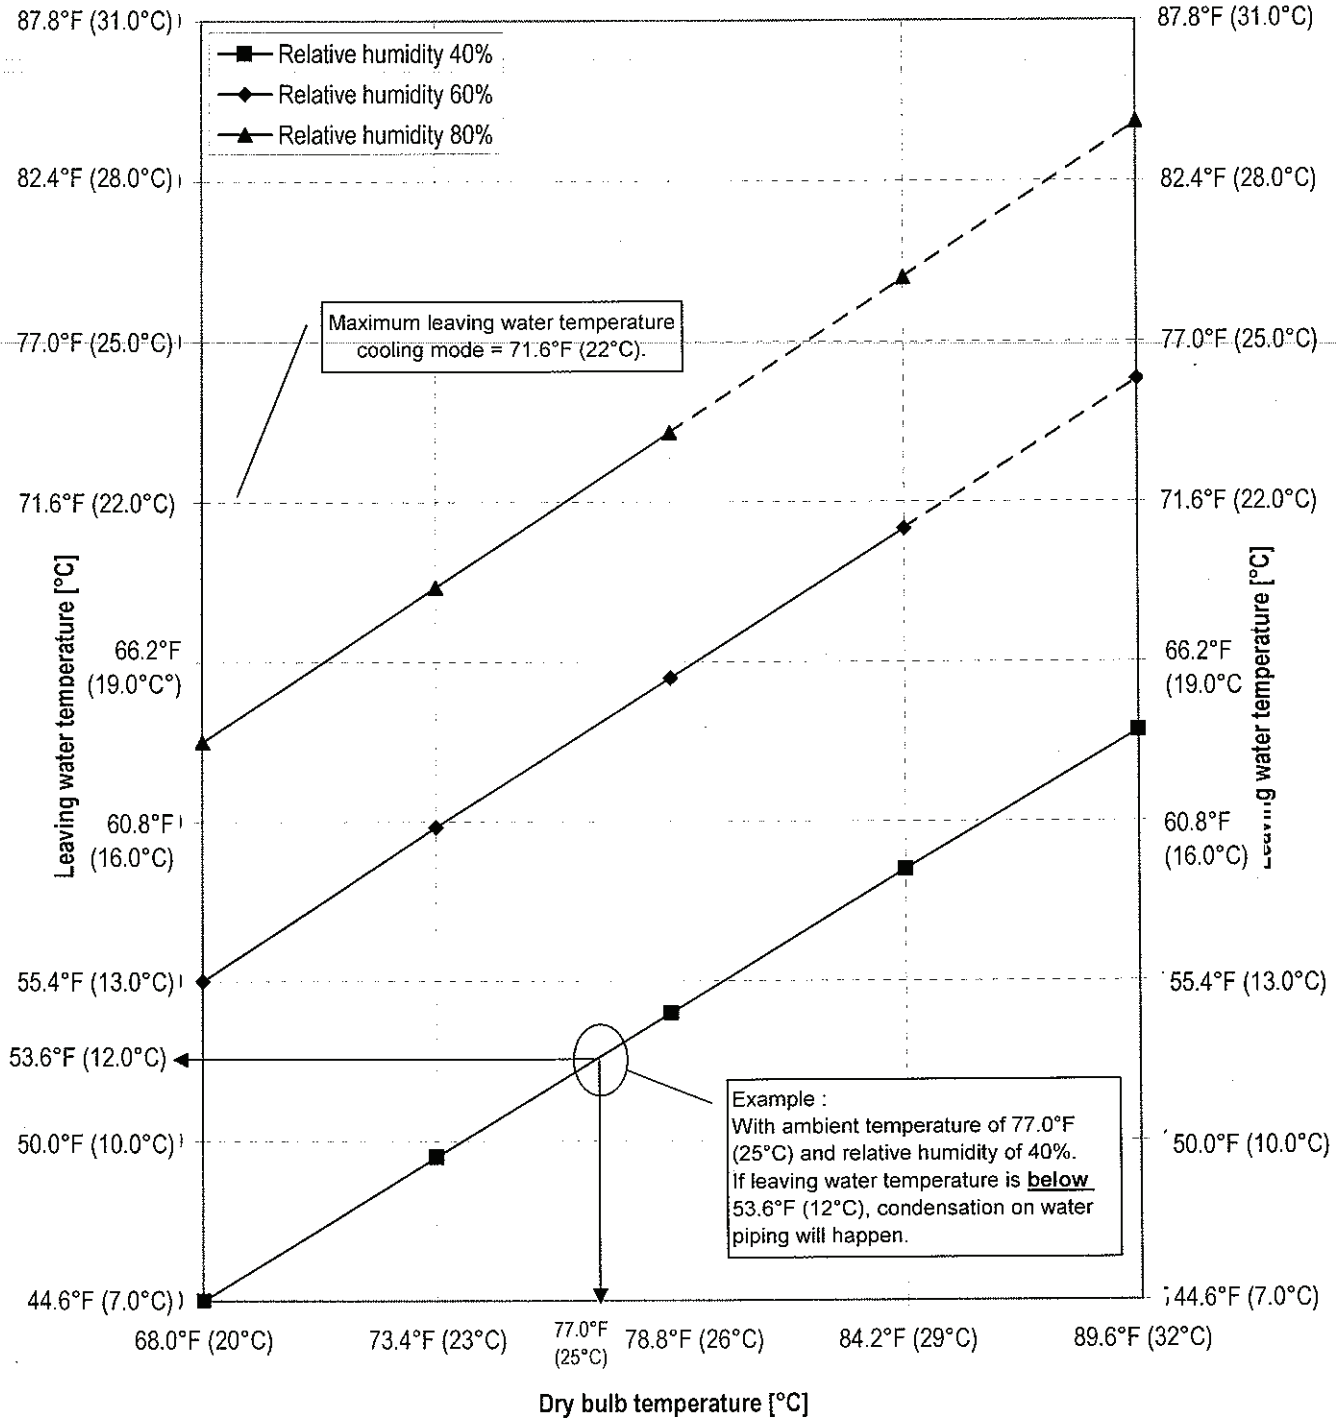


1. Refer to psychometric chart for more information.
2. If condensation is expected, installation of EKHB DP - drainpan kit must be considered.

8. Hydrobox Installation Precautions

MINIMUM WATER VOLUME:

Assure that the total water volume within the installation, excluding the internal water volume of the indoor unit, is enough :

- minimum 2.64 gallon for GBS (*RLQ030*)
- minimum 5.28 gallon for GQI (*RLQ054*)

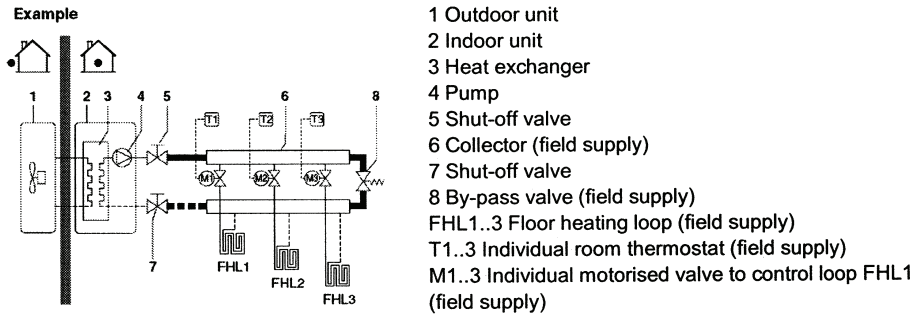

FIELD PIPING DIAMETERS

■ Select the field piping diameters in relation to the required water flow and available ESP of the indoor unit pump (See "Hydraulic performance").

INSTALLATION LOCATION

■ During normal operation the hydrobox unit will produce sound which could be observed as noise. The sound origin can be water pump operation and/or contactor activation. Therefore it is advisable to install the hydrobox unit on a firm wall and not in nor close to a sound sensitive environment (example bedroom).

- The unit is to be wall mounted in an indoor location that meets the following requirements:
 - The installation location is frost-free.
 - The space around the unit is adequate for servicing. (See "Dimensional drawing").
 - The space around the unit allows for sufficient air circulation.
 - There is a provision for condensate drain (only for EKHBX models with drain pan kit EKHBDP) and pressure relief valve blow-off.
 - The installation surface is a flat and vertical non-combustible wall, capable of supporting the operation weight of the unit (See "Technical specifications").
 - There is no danger of fire due to leakage of inflammable gas.
 - All piping lengths and distances have been taken into consideration (See "Technical specifications").
- Do not install the unit in places with high humidity (e.g. bathroom)


9. Application Examples - Hydrobox

TYPICAL APPLICATION EXAMPLES

The application examples given below are for illustration purposes only.

Application 1

Space heating only application with the room thermostat connected to the indoor unit.

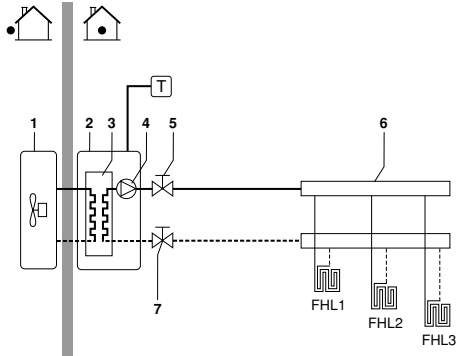

- | | |
|------------------|------------------------------|
| 1 Outdoor unit | 6 Collector (field supply) |
| 2 Indoor unit | 7 Shut-off valve |
| 3 Heat exchanger | FHL1..3 Floor heating loop |
| 4 Pump | T Room thermostat (optional) |
| 5 Shut-off valve | |

Pump operation and space heating

When the room thermostat (T) is connected to the indoor unit, the pump (4) will operate when there is a heating request from the room thermostat, and the outdoor unit will start operating to achieve the target leaving water temperature as set on the user interface.


When the room temperature is above the thermostat set point, the outdoor unit and pump will stop operating.



Make sure to connect the thermostat wires to the correct terminals (see "Connection of the thermostat cable" on page 18) and to configure the DIP switch toggle switches correctly (see "Room thermostat installation configuration" on page 22).

Application 2

Space heating only application without room thermostat connected to the indoor unit. The temperature in each room is controlled by a valve on each water circuit. Domestic hot water is provided through the domestic hot water tank which is connected to the indoor unit.

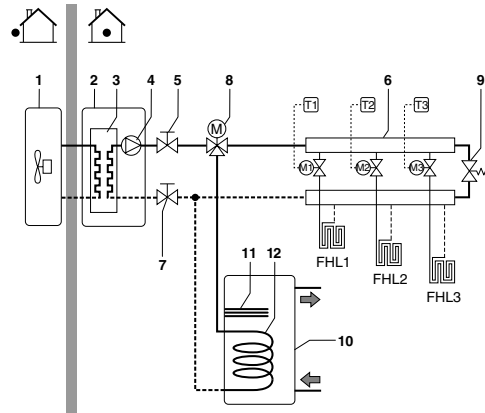

- | | |
|--|--|
| 1 Outdoor unit | 9 By-pass valve (field supply) |
| 2 Indoor unit | 10 Domestic hot water tank (optional) |
| 3 Heat exchanger | 11 Booster heater |
| 4 Pump | 12 Heat exchanger coil |
| 5 Shut-off valve | FHL1..3 Floor heating loop |
| 6 Collector (field supply) | T1..3 Individual room thermostat (optional) |
| 7 Shut-off valve | M1..3 Individual motorised valve to control loop FHL1 (field supply) |
| 8 Motorised 3-way valve (delivered with domestic hot water tank) | |

Pump operation

With no thermostat connected to the indoor unit (2), the pump (4) can be configured to operate either as long as the indoor unit is on, or until the required water temperature is reached.

NOTE



Details on pump configuration can be found under "Pump operation configuration" on page 23.

Space heating

The outdoor unit (1) will operate to achieve the target leaving water temperature as set on the user interface.

NOTE




When circulation in each space heating loop (FHL1..3) is controlled by remotely controlled valves (M1..3), it is important to provide a by-pass valve (9) to avoid the flow switch safety device from being activated.

The by-pass valve should be selected as such that at all time the minimum water flow as mentioned under "Water pipework" on page 14 is guaranteed.


It is recommended to select a pressure difference controlled by-pass valve.

Field wiring configuration A

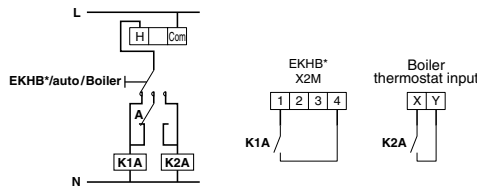

- Boiler thermostat input** Boiler thermostat input
- A** Auxiliary contact (normal closed)
- H** Heating demand room thermostat (optional)
- K1A** Auxiliary relay for activation of EKHB* unit (field supply)
- K2A** Auxiliary relay for activation of boiler (field supply)

Field wiring configuration B

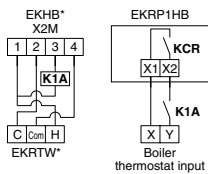

- Boiler thermostat input** Boiler thermostat input
- C** Cooling demand room thermostat (optional)
- H** Heating demand room thermostat (optional)
- Com** Common room thermostat (optional)
- K1A** Auxiliary relay for activation of boiler unit (field supply)
- KCR** Permission signal for the auxiliary boiler

Operation

- Configuration A**

When the room thermostat requests heating, either the EKHB* unit or the boiler starts operating, depending on the position of the auxiliary contact (A).
- Configuration B**

When the room thermostat requests heating, either the EKHB* unit or the boiler starts operating, depending on the outdoor temperature (status of "permission signal for the auxiliary boiler").

When the permission is given towards the boiler, the space heating operation by the EKHB* unit will be automatically switched off.

For more details see field setting [C-02~C-04].

NOTE



Configuration A
Make sure that auxiliary contact (A) has sufficient differential or time delay so as to avoid frequent changeover between the EKHB* unit and the boiler. If the auxiliary contact (A) is an outdoor temperature thermostat, make sure to install the thermostat in the shade, so that it is not influenced or turned ON/OFF by the sun.

Configuration B
Make sure that the bivalent hysteresis [C-04] has sufficient differential to avoid frequent changeover between the EKHB* unit and the boiler. As the outdoor temperature is measured via the outdoor unit, air thermistor make sure to install the outdoor unit in the shade, so that it is not influenced by the sun.

Frequent switching may cause corrosion of the boiler in an early stage. Contact the manufacturer of the boiler.

- During heating operation of the EKHB* unit, the unit will operate so as to achieve the target leaving water temperature as set on the user interface. When weather dependent operation is active, the water temperature is determined automatically depending on the outdoor temperature.

During heating operation of the boiler, the boiler will operate so as to achieve the target leaving water temperature as set on the boiler controller. Never set the target leaving water temperature set point on the boiler controller above 131°F (55°C).

- Make sure to only have 1 expansion vessel in the water circuit. An expansion vessel is already premounted in the Daikin indoor unit.

NOTE



Make sure to configure the DIP switch SS2-3 on the PCB of the EKHB* switchbox correctly. Refer to "Room thermostat installation configuration" on page 22.

For configuration B: Make sure to configure the field settings [C-02, C-03 and C-04] correctly. Refer to "Bivalent operation" on page 32.



CAUTION

Make sure that return water to the EKHB* heat exchanger never exceeds 131°F (55°C).

For this reason, never put the target leaving water temperature set point on the boiler controller above 131°F (55°C) and install an aquastat^(a) valve in the return water flow of the EKHB* unit.

Make sure that the non-return valves (field supply) are correctly installed in the system.

Make sure that the room thermostat (th) is not frequently turned ON/OFF.

Daikin shall not be held liable for any damage resulting from failure to observe this rule.

(a) The aquastat valve must be set for 131°F (55°C) and must operate to close the return water flow to the unit when the measured temperature exceeds 131°F (55°C). When the temperature drops to a lower level, the aquastat valve must operate to open the return water flow to the EKHB* unit again.



Manual permission towards the EKHB* unit on the boiler.
In case only the EKHB* unit should operate in space heating mode, disable the bivalent operation via setting [C-02].
In case only the boiler should operate in space heating mode, increase the bivalent ON temperature [C-03] to 77°F (25°C).

1	Outdoor unit	14	Motorised 2-way valve for activation of the room thermostat (field supply)
2	Indoor unit		
3	Heat exchanger		
4	Pump	FCU1...3	Fan coil unit with thermostat (optional)
5	Shut-off valve		
6	Collector (field supply)	FHL1...3	Floor heating loop
7	Shut-off valve	T	Heating only room thermostat (optional)
9	By-pass valve (field supply)		
13	Motorised 2-way valve to shut off the floor heating loops during cooling operation (field supply)	T4.6	Individual room thermostat for fan coil heated/cooled room (optional)

Pump operation

With no thermostat connected to the indoor unit (2), the pump (4) can be configured to operate either as long as the indoor unit is on, or until the required water temperature is reached.

NOTE Details on pump configuration can be found under "Pump operation configuration" on page 23.

Space heating and cooling

According to the season, the customer will select heating or cooling through the user interface on the indoor unit.

The outdoor unit (1) will operate in heating mode or cooling mode to achieve the target leaving water temperature.

With the unit in heating mode, the 2-way valve (13) is open. Hot water is provided to both the fan coil units and the floor heating loops.

With the unit in cooling mode, the 2-way valve (13) is closed to prevent cold water running through the floor heating loops (FHL).

! When closing several loops in the system by remotely controlled valves, it might be required to install a by-pass valve (9) to avoid the flow switch safety device from being activated. See also "Application 2" on page 4.

! Wiring of the 2-way valve (13) is different for a NC (normal closed) valve and a NO (normal open) valve! Make sure to connect to the correct terminal numbers as detailed on the wiring diagram.

The ON/OFF setting of the heating/cooling operation is done by the user interface on the indoor unit.

Application 5

Space heating with an auxiliary boiler (alternating operation)

Space heating application by either the Daikin indoor unit or by an auxiliary boiler connected in the system. The decision whether either the EKHB* indoor unit or the boiler will operate can be achieved by an auxiliary contact or an EKHB* indoor controlled contact.

The auxiliary contact can e.g. be an outdoor temperature thermostat, an electricity tariff contact, a manually operated contact, etc. See "Field wiring configuration A" on page 7.

The EKHB* indoor unit controlled contact (also called 'permission signal for the auxiliary boiler') is determined by the outdoor temperature (thermistor located at the outdoor unit). See "Field wiring configuration B" on page 7.


Bivalent operation is only possible for space heating operation, **not** for the domestic water heating operation. Domestic hot water in such an application is always provided by the domestic hot water tank which is connected to the Daikin indoor unit.

The auxiliary boiler must be integrated in the piping work and in the field wiring according to the illustrations below.



CAUTION

- Be sure that the boiler and the integration of the boiler in the system is in accordance with relevant local laws and regulations.
- Daikin can not be put responsible for incorrect or unsafe situations in the boiler system.

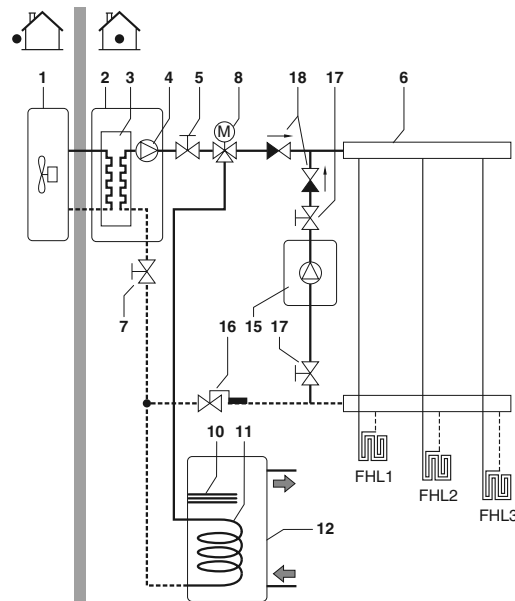

1	Outdoor unit	11	Heat exchanger coil
2	Indoor unit	12	Domestic hot water tank (optional)
3	Heat exchanger		
4	Pump	15	Boiler (field supply)
5	Shut-off valve	16	Aquastat valve (field supply)
6	Collector (field supply)	17	Shut-off valve (field supply)
7	Shut-off valve	18	Non-return valve (field supply)
8	Motorised 3-way valve (delivered with the domestic hot water tank)	FHL1...3	Floor heating loop (field supply)
10	Booster heater		


Application 6

Space heating with room thermostat application through floor heating loops and fan coil units. The floor heating loops and fan coil units require different operating water temperatures.

The floor heating loops require a lower water temperature in heating mode compared to fan coil units. To achieve these two set points, a mixing station is used to adapt the water temperature according to requirements of the floor heating loops. The fan coil units are directly connected to the indoor unit water circuit and the floor heating loops after the mixing station. The control of this mixing station is not done by the indoor unit.

The operation and configuration of the field water circuit is the responsibility of the installer.

Daikin only offers a dual set point control function. By this function two set points can be generated. Depending on the required water temperature (floor heating loops and/or fan coil units are required) first set point or second set point can be activated.

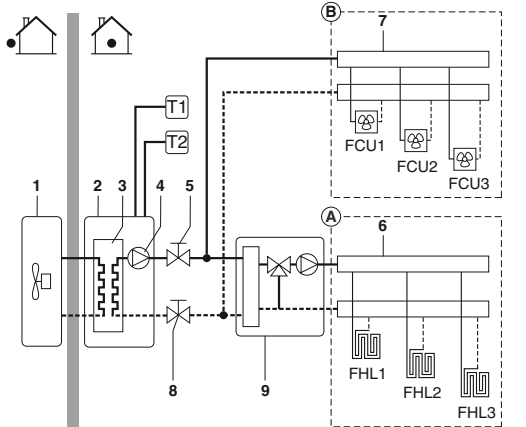

- | | | | |
|---|---------------------------------|----------|---------------------------------------|
| 1 | Outdoor unit | 8 | Shut-off valve |
| 2 | Indoor unit | 9 | Mixing station (field supply) |
| 3 | Heat exchanger | T1 | Room thermostat for zone A (optional) |
| 4 | Pump | T2 | Room thermostat for zone B (optional) |
| 5 | Shut-off valve | FCU1...3 | Fan coil unit (optional) |
| 6 | Collector zone A (field supply) | FHL1...3 | Floor heating loop (field supply) |
| 7 | Collector zone B (field supply) | | |

! The advantage of the dual set point control is that the heat pump will/can operate at the lowest required leaving water temperature when only floor heating is required. Higher leaving water temperatures are only required in case fan coil units are operating. This results in a better performance of the heat pump.

Pump operation and space heating

When the room thermostat for the floor heating loop (T1) and the fan coil units (T2) are connected to the indoor unit, the pump (4) will operate when there is a request for heating from T1 and/or T2. The outdoor unit will start operating to achieve the target leaving water temperature. The target leaving water temperature depends on which room thermostat is requesting heating.

	Set point		Thermo status			
	First	Field setting	ON	OFF	ON	OFF
Zone A	First	UI	ON	OFF	ON	OFF
Zone B	Second	[7-03]	OFF	ON	ON	OFF
Resulting water temperature		UI	[7-03]	[7-03]	—	
Result pump operation			ON	ON	ON	OFF

When the room temperature of both zones is above the thermostat set point, the outdoor unit and pump will stop operating.

NOTE



- Make sure to connect the thermostat wires to the correct terminals (see "Overview of the indoor unit" on page 9).
- Make sure to configure the field settings [7-02], [7-03] and [7-04] correctly. Refer to "Dual set point control" on page 29.
- Make sure to configure the DIP switch SS2-3 on the PCB of the EKHBH switch box correctly. Refer to "Room thermostat installation configuration" on page 22.

NOTE




- The request signals for space heating can be implemented in two different ways (installer choice).
 - Thermo ON/OFF signal from room thermostat
 - Status signal (active/not active) from the mixing station
- It is the installers responsibility to make sure no unwanted situations can occur (e.g. too high water temperatures towards floor heating loops, etc.)
- Daikin does not offer any type of mixing station. Dual set point control only provides the possibility to use two set points.
- When only zone A request heating, zone B will be fed with water at a temperature equal to the first set point. This can lead to unwanted heating of zone B.
- When only zone B request heating, the mixing station will be fed with water at a temperature equal to the second set point. Depending on the control of the mixing station, the floor heating loop can still receive water at a temperature equal to set point of the mixing station.



Be aware that the actual water temperature through the floor heating loops depends on the control and setting of the mixing station.

10. Hydronic Performance - Hydrobox



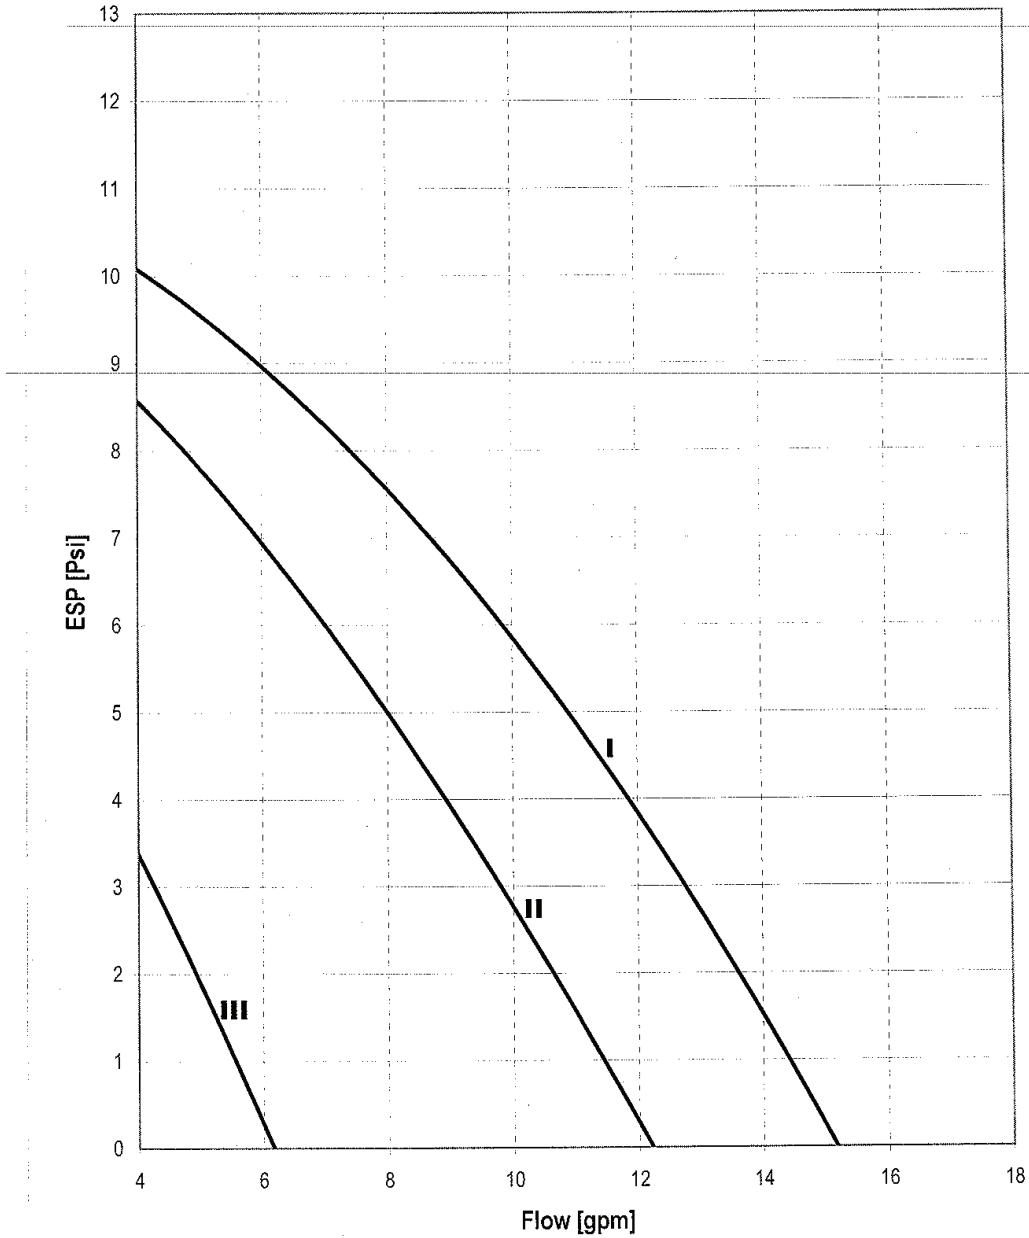


I high speed
 II medium speed
 III low speed
 ESP : external static pressure
 Flow : waterflow through the unit

IMPERIAL UNITS OF MEASURE

Caution :
 Selecting a flow outside the curves can cause damage to or malfunction of the unit. See also minimum and maximum allowed water flowrange in the technical specifications.

11. Operation Range - Hydrobox

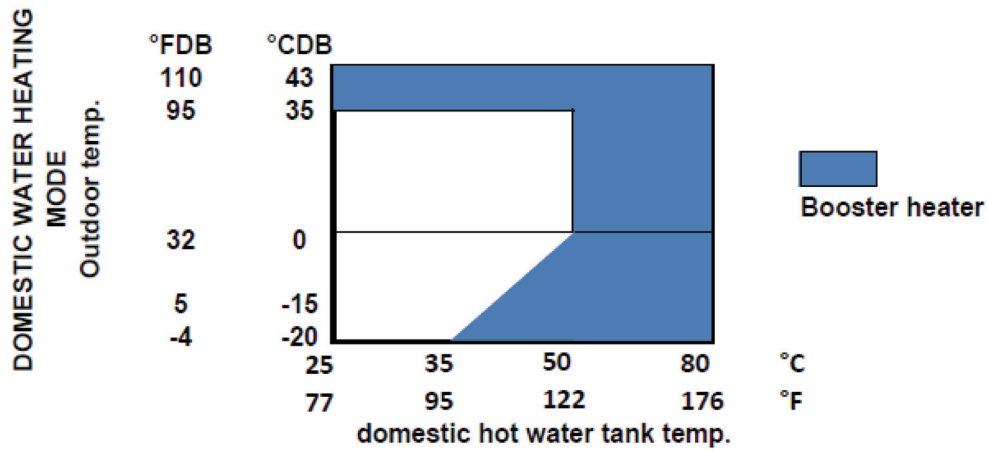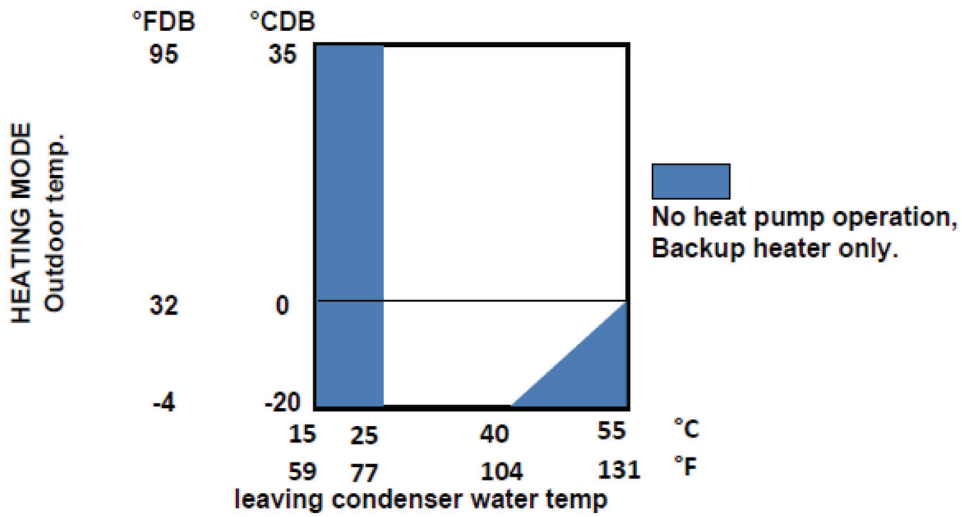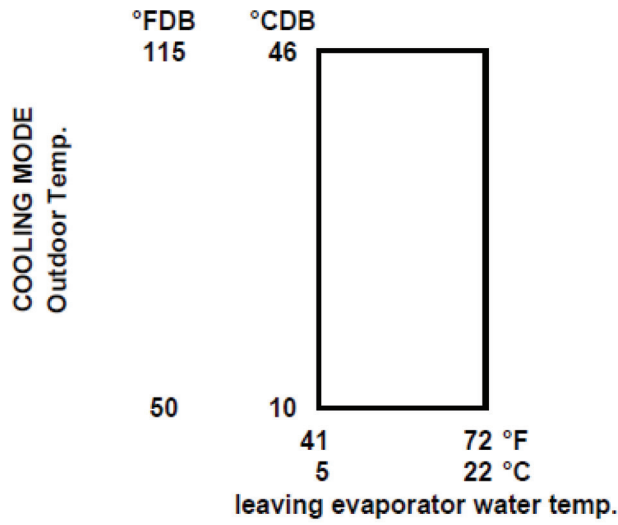

1. Monobloc - EDLQ / EBLQ

1.1 Features

- Heating only (EDLQ) and reversible (EBLQ) monobloc with base pan heater
- Inverter operated compressor
- H2O piping between outdoor unit and indoor heating appliances
- Freeze protection of hydronic parts
- Cost effective alternative to a fossil fuel boiler
- Interface control with field selectable options that include dual setpoint (heating & cooling), quiet mode, DHW priority settings, and schedule timer.
- Low energy bills and low CO2 emissions
- Easy to install
- Total solution for year round comfort
- Anti-corrosion treatment on outdoor coil



Monobloc

The monobloc unit is designed for outdoor installations. These units are used for both heating and cooling applications and can be combined with fan coil units, floor heating applications, low temperature radiators, optional Daikin domestic hot water tank, and optional Daikin solar kit.

The unit range consists of two main versions: a heating only version (EDLQ) and a heating/cooling version (EBLQ). Both versions are delivered with an integrated backup heater for additional heating capacity during cold outdoor temperatures. The backup heater also serves as a backup in the event malfunctioning of the unit occurs, along with freeze protection of the outside water piping during winter climates.

2. Specifications – EDLQ – Heat Only

2-1 NOMINAL CAPACITY AND NOMINAL INPUT				EDLQ036BA6VJU	EDLQ048BA6VJU	EDLQ054BA6VJU
Condition 1 (Floor heating)	Heating capacity	Nominal	kBTU/hr	38.21	47.77	54.59
	Heating PI	Nominal	kW	2.53	3.33	3.93
	COP	Nominal		4.42	4.2	4.07
Condition 2 (Fan Coil)	Heating capacity	Nominal	kBTU/hr	37.07	44.17	51.39
	Heating PI	Nominal	kW	3.43	3.98	4.75
	COP	Nominal		3.25	3.25	3.17
Notes				Condition 1: heating Ta DB/WB 44.6 / 42.8°F (7°C/6°C) - LWC 95°F (35°C) ΔT=9°F (5°C)		
				Condition 2: heating Ta DB/WB 44.6 / 42.8°F (7°C/6°C) - LWC 113°F (45°C) (ΔT=9°F (5°C))		

2-2 TECHNICAL SPECIFICATIONS				EDLQ036BA6VJU	EDLQ048BA6VJU	EDLQ054BA6VJU
Casing	Colour			Ivory white		
	Material			Painted galvanised steel		
Dimensions	Unit	Height	in (mm)	55-7/8 (1,418)		
		Width	in (mm)	56-1/2 (1,435)		
		Depth	in (mm)	15-1/32 (382)	15-1/32 (382)	15-1/32 (382)
	Packing	Height	in (mm)	61-1/4 (1,557)		
		Width	in (mm)	59-1/16 (1,500)		
		Depth	in (mm)	16-7/8 (430)	16-7/8 (430)	16-7/8 (430)
Weight	Unit		lb (kg)	397 (180)	397 (180)	397b (180)
	Packed unit		lb (kg)	441 (200)	441 (200)	441 (200)
Packing	Material			Wood		
				Carton		
				Plastic foil		
	Weight		lb (kg)	44 lb (20)	44 lb (20)	44 lb (20)
Operation Range (2, 4)	Heating - Ambient	Min	°F (°C)	-4 (-20)	-4 (-20)	-4 (-20)
		Max	°F (°C)	95 (35)	95 (35)	95 (35)
	Heating - Waterside	Min	°F (°C)	59 (15)	59 (15)	59 (15)
		Max	°F (°C)	131 (55)	131 (55)	131 (55)
	Domestic hot water -Ambient	Min	°F (°C)	-4 (-20)	-4 (-20)	-4 (-20)
		Max	°F (°C)	109.4 (43)	109.4 (43)	109.4 (43)
Domestic hot water - Waterside	Min	°F (°C)	77 (25)	77 (25)	77 (25)	
	Max	°F (°C)	176 (80)	176 (80)	176 (80)	
Sound Level (1) (nominal)	Heating	Sound Power	dBA	64	64	66
		Sound Pressure	dBA	51	51	52
Sound Level (Night quiet)	Heating	Sound Pressure	dBA	42	42	43
Refrigerant	Type			R-410A		
	Charge		lb (kg)	6.5 (2.95)	6.5 (2.95)	6.5 (2.95)
	Control			Electronic expansion valve		
	Nr of Circuits			1	1	1
Refrigerant Oil	Type			Daphne FVC68D		
	Charged Volume		oz (l)	34 (1.0 l)	34 (1.0 l)	34 (1.0 l)
Defrost Method				Pressure equalising		
Defrost Control				Sensor for outdoor heat exchanger temperature		
Capacity Control Method				Inverter controlled		
Safety Devices				High pressure switch		
				Fan motor thermal protector		
				Fuse		

2-2 TECHNICAL SPECIFICATIONS	EDLQ036BA6VJU	EDLQ048BA6VJU	EDLQ054BA6VJU
Notes			
(1) The sound pressure level is measured via a microphone at a certain distance from the unit. It is a relative value depending on the distance and acoustic environment. Refer to sound spectrum drawing for more information.			
(2) 59°–77°F (15°–25°C): BUH only, no heat pump operation = during commissioning			
(5) including piping + PHE + back-up heater / excluding expansion vessel			
(4) E(D)(B)L* model can reach -4°F (-20°C)			

2-3 MAIN COMPONENTS				EDLQ036BA6VJU	EDLQ048BA6VJU	EDLQ054BA6VJU
Air heat exchanger	Specifications	Length	in (mm)	33-3/4 (857)	33-3/4 (857)	33-3/4 (857)
		Nr of Rows		2	2	2
		Fin pitch	in (mm)	1/16 (1.4)	1/16 (1.4)	1/16 (1.4)
		Nr of Passes		5	5	5
		Face area	ft² (m²)	12.17 (1.131)	12.17 (1.131)	12.17 (1.131)
		Nr of Stages		60	60	60
	Tube type		Hi-XSS			
Fin	Type	WF fin				
	Treatment	Anti-corrosion treatment (PE)				
Fan	Type	Propeller				
	Quantity	2	2	2		
Air Flow Rate (nominal at 230V)	Heating	High	cfm (m³/min)	3178 (90)	3178 (90)	3178 (90)
Fan	Discharge direction		Horizontal			
	Motor	Quantity	2	2	2	
		Model	Brushless DC			
Motor	Speed (nominal)	Steps	8	8	8	
		Heating	rpm	760	760	760
Fan	Motor	Output	W	70	70	70
		Drive	Direct drive			
Compressor	Quantity		1	1	1	
	Motor	Model	JT100G-VD			
		Type	Hermetically sealed scroll compressor			
		Motor Output	W	2,200		
Starting Method		Inverter driven				
Motor	Crankcase Heater	Output	W	33	33	33
Pump	Type		Water cooled			
	Nr. of speed		2	2	2	
	Nominal ESP unit	Heating	PSI (kPa)	7.61 (52.5)	6.31 (43.5)	5 (35)
	Power input		W	210	210	210
Water side Heat exchanger	Type		Brazed plate			
	Quantity		1	1	1	
	Water volume		gal (l)	0.27 (1.01)	0.27 (1.01)	0.27 (1.01)
	Water flow rate Min.		gpm (l/min)	4.23 (16)	4.23 (16)	4.23 (16)
	Water flow rate Nom.	Heating	gpm (l/min)	8.48 (32.1)	10.59 (40.1)	12.13 (45.9)
	Water flow rate Max.		gpm (l/min)	15.3 (58)	15.3 (58)	15.3 (58)
	Insulation material		Foamed synthetic elastomer			
Expansion vessel	Volume		gal (l)	2.64 (10)	2.64 (10)	2.64 (10)
	Maximum water pressure		PSI (bar)	43.5 (3)	43.5 (3)	43.5 (3)
	Pre pressure		PSI (bar)	14.5 (1.0)	14.5 (1.0)	14.5 (1.0)
Water filter	Diameter perforations		in (mm)	1/32 (1)	1/32 (1)	1/32 (1)
	Material		Brass			

2-3 MAIN COMPONENTS			EDLQ036BA6VJU	EDLQ048BA6VJU	EDLQ054BA6VJU
Water circuit	Piping connections	inch	1-1/4 BSPP female		
	Piping	inch	1-1/4		
	Safety valve	PSI (bar)	43.5 (3)	43.5 (3)	43.5 (3)
	Manometer (Pressure Gauge)		Yes		
	Drain valve / Fill valve		yes		
	Shut off valve		yes		
	Air purge valve		yes		
	Total water volume (3)	gal (l)	1.45 (5.5)	1.45 (5.5)	1.45 (5.5)

2-4 ELECTRICAL SPECIFICATIONS					EDLQ036BA6VJU	EDLQ048BA6VJU	EDLQ054BA6VJU
Power supply compressor component	Main Power	Name			VJ		
		Phase			1	1	1
		Frequency		Hz	60	60	60
		Voltage		V	208/230	208/230	208/230
Voltage Range		Minimum		V	-10%		
		Maximum		V	+10%		
Current		Compressor	Rated Load Amps (RLA)	A	23.4	23.4	23.4
			Total	Full Load Amps (FLA)	A	26.5	26.5
			MCA	A	26.5	26.5	26.5
			MOP	A	30	30	30
	Wiring connections	For power supply compressor component			Installation Instruction		
Power supply hydronic component	Current back-up heater	Type	Electric 6kW				
Current back-up heater	Power Supply	Phase	1~				
		Frequency		Hz	60	60	60
		Voltage		V	208/230	208/230	208/230
	Current	Minimum Circuit Amps (MCA)		A	28.6	28.6	28.6
		Maximum Overcurrent Protection (MOP)		A	30	30	30

2-4 ELECTRICAL SPECIFICATIONS				EDLQ036BA6VJU	EDLQ048BA6VJU	EDLQ054BA6VJU	
Power supply hydronic component	Voltage range	Minimum		V	-10%		
		Maximum		V	+10%		
	Wiring connections	Connection type		for power supply hydraulic compartment			
		Quantity of wires		2G			
		Type of wires		Select diameter and type according to national and local regulations			
		Connection type		for power supply connection to optional sanitary tank + Q2L			
		Quantity of wires		3G			
		Type of wires		Select diameter and type according to national and local regulations			
		Type of wires		For more details on voltage range and current refer to installation manual.			
		Connection type		for connection with R5T			
		Quantity of wires		Wire included in option EKHWS*			
		Type of wires		Wire included in option EKHWS*			
		Connection type		for connection with A3P			
		Quantity of wires		Depends on thermostat type, refer to installation manual			
		Type of wires		Select diameter and type according to national and local regulations			
		Type of wires		For more details on voltage range and current refer to installation manual.			
		Connection type		for connection with M2S			
		Quantity of wires		3G			
		Type of wires		Select diameter and type according to national and local regulations			
		Type of wires		For more details on voltage range and current refer to installation manual.			
		Connection type		for connection with M3S			
		Quantity of wires		3G or 4G			
	Type of wires		Select diameter and type according to national and local regulations				
	Type of wires		For more details on voltage range and current refer to installation manual.				
	Notes				Power supply compressor compartment is for compressor, fan, pump and controller		
					Power supply hydraulic compartment is for the electric heater. The optional domestic warm water tank has a separate power supply.		
					Installer can reduce capacity of the heater from 20,491 to 10,245 BTU/hr (6 to 3kW). The current is then reduced from 26 to 13A. Instructions see installation manual.		
				Installer can reduce capacity of the heater from 20,491 to 11,953 BTU/hr (6 to 3kW). The current is then reduced from 8.7 to 5A. Instructions see installation manual.			
				Standard for safety heating and cooling equipment: UL1995/CSA (U&C) C22.2 #236			

3. Capacity Tables – EDLQ – Heat Only

MAXIMUM HEATING CAPACITY - PEAK VALUE																				
MODEL	LWC (°F/C) T _{amb} (°F/C)	88/30			95/35			104/40			113/45			122/50			131/55			
		HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	
E(D)BLQ036BA6VJU	-4/-20	20.00	7.93	2.52	18.81	8.63	2.18													
	5/-15	22.61	8.04	2.81	21.25	8.76	2.43													
	19/-7.2	27.75	8.12	3.42	26.15	8.68	3.01	25.02	9.77	2.56	24.96	11.34	2.20							
	25/-3.9	31.66	8.12	3.90	29.90	8.90	3.36	29.38	9.81	2.99	28.70	11.41	2.52	27.66	12.65	2.19				
	36/2.2	35.22	8.08	4.36	33.34	8.89	3.75	32.83	9.82	3.34	32.15	11.43	2.81	31.06	12.69	2.45	29.02	14.10	2.06	
	45/7.2	40.25	8.02	5.02	39.21	8.84	4.44	37.74	9.79	3.85	37.07	11.42	3.25	35.94	12.71	2.83	33.71	14.13	2.39	
	54/12.2	43.65	7.80	5.60	41.57	8.62	4.82	41.17	9.58	4.30	40.57	11.21	3.62	39.47	12.50	3.16	37.16	13.92	2.67	
	59/15	47.22	7.72	6.12	45.03	8.55	5.27	44.69	9.52	4.69	44.11	11.16	3.95	43.00	12.46	3.45	40.57	13.89	2.92	
68/20	53.68	7.58	7.08	51.33	8.41	6.10	51.07	9.40	5.43	50.57	11.06	4.57	45.01	12.36	3.64	45.45	13.81	3.29		
E(D)BLQ048BA6VJU	-4/-20	25.32	9.95	2.54	24.58	10.82	2.27													
	5/-15	28.29	10.15	2.79	27.29	11.03	2.47	26.34	12.07	2.18										
	19/-7.2	34.37	10.35	3.32	33.00	11.28	2.93	31.66	12.36	2.56	30.96	13.42	2.31							
	25/-3.9	39.11	10.44	3.75	37.52	11.39	3.29	35.95	12.49	2.88	35.11	13.58	2.59	34.57	14.97	2.31				
	36/2.2	43.50	10.48	4.15	41.72	11.45	3.64	39.98	12.57	3.18	39.02	13.67	2.85	38.40	15.08	2.55	36.62	16.64	2.20	
	45/7.2	49.77	10.52	4.73	47.77	11.37	4.20	45.79	12.55	3.65	44.70	13.77	3.25	43.99	15.20	2.89	41.96	16.75	2.51	
	54/12.2	52.69	10.21	5.16	50.62	11.18	4.53	48.57	12.31	3.95	47.45	13.42	3.54	46.73	14.83	3.15	44.60	16.38	2.72	
	59/15	57.09	10.21	5.59	54.90	11.19	4.91	52.71	12.32	4.28	51.53	13.44	3.83	50.78	14.86	3.42	48.50	16.42	2.95	
68/20	65.14	10.22	6.37	62.72	11.20	5.60	60.30	12.34	4.89	59.03	13.47	4.38	50.58	14.89	3.40	54.08	16.46	3.29		
E(D)BLQ054BA6VJU	-4/-20	28.90	11.60	2.49	28.45	12.59	2.26													
	5/-15	32.20	11.83	2.72	31.42	12.86	2.44	30.68	14.05	2.18										
	19/-7.2	39.03	12.12	3.22	37.80	13.19	2.87	36.60	14.44	2.53	35.94	15.69	2.29							
	25/-3.9	44.41	12.27	3.62	42.91	13.36	3.21	41.43	14.83	2.79	40.58	15.91	2.55	39.07	17.52	2.23				
	36/2.2	49.40	12.37	3.99	47.69	13.48	3.54	45.99	14.77	3.11	44.96	16.05	2.80	43.24	17.68	2.45	41.51	19.49	2.13	
	45/7.2	56.57	12.49	4.53	54.59	13.42	4.07	52.61	14.92	3.53	51.39	16.22	3.17	49.37	17.86	2.76	47.34	19.69	2.40	
	54/12.2	58.99	12.18	4.84	56.94	13.28	4.29	54.88	14.57	3.77	53.60	15.85	3.38	51.48	17.46	2.95	49.35	19.25	2.56	
	59/15	63.98	12.24	5.23	61.77	13.35	4.63	59.55	14.63	4.07	58.18	15.92	3.65	55.09	17.54	3.14	53.59	19.33	2.77	
68/20	73.10	12.37	5.91	70.64	13.47	5.24	68.16	14.76	4.62	66.63	16.06	4.15	64.05	17.68	3.62	61.45	19.47	3.16		

Peak value does not include capacity drop during frosting and defrosting periods.

MAXIMUM HEATING CAPACITY - INTEGRATED VALUE																				
MODEL	LWC (°F/C) T _{amb} (°F/C)	88/30			95/35			104/40			113/45			122/50			131/55			
		HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	HC kBTU/h	PI (kBTU/h)	COP	
E(D)BLQ036BA6VJU	-4/-20	16.93	7.81	2.17	15.92	8.49	1.88													
	5/-15	19.14	7.91	2.42	17.99	8.62	2.09	17.59	9.45	1.86										
	19/-7.2	23.49	7.99	2.94	22.14	8.74	2.53	21.69	9.81	2.21	21.13	11.14	1.90							
	25/-3.9	26.27	7.84	3.35	24.82	8.60	2.89	24.38	9.47	2.57	23.82	11.00	2.17	22.95	12.20	1.88				
	36/2.2	29.23	7.81	3.74	27.67	8.58	3.22	27.25	9.47	2.88	26.88	11.02	2.44	25.78	12.23	2.11	24.09	13.59	1.77	
	45/7.2	40.25	8.02	5.02	38.21	8.64	4.42	37.74	9.79	3.85	37.07	11.42	3.25	35.94	12.71	2.83	33.71	14.13	2.39	
	54/12.2	43.66	7.80	5.60	41.57	8.62	4.82	41.17	9.58	4.30	40.57	11.21	3.62	39.47	12.50	3.16	37.16	13.92	2.67	
	59/15	47.22	7.72	6.12	45.03	8.55	5.27	44.59	9.52	4.68	44.11	11.16	3.95	43.00	12.46	3.45	40.57	13.80	2.94	
68/20	53.68	7.58	7.08	51.33	8.41	6.10	51.07	9.40	5.43	50.57	11.06	4.57	48.01	12.36	3.88	45.45	13.81	3.29		
E(D)BLQ048BA6VJU	-4/-20	21.54	9.89	2.22	20.91	10.52	1.99													
	5/-15	24.07	9.87	2.44	23.21	10.73	2.16	22.40	11.73	1.91										
	19/-7.2	29.24	10.06	2.91	28.07	10.96	2.56	26.93	12.01	2.24	26.34	13.04	2.02							
	25/-3.9	31.09	9.51	3.27	29.83	10.37	2.88	28.58	11.30	2.53	27.91	12.36	2.26	27.48	13.62	2.02				
	36/2.2	34.58	9.53	3.63	33.17	10.42	3.18	31.78	11.44	2.78	31.02	12.44	2.49	30.52	13.71	2.23	29.12	15.13	1.92	
	45/7.2	49.77	10.52	4.73	47.77	11.37	4.20	45.79	12.65	3.62	44.70	13.77	3.25	43.99	15.20	2.89	41.96	16.78	2.50	
	54/12.2	52.69	10.21	5.16	50.62	11.18	4.47	48.57	12.31	3.95	47.45	13.42	3.54	46.73	14.83	3.15	44.60	16.38	2.72	
	59/15	57.09	10.21	5.59	54.90	11.19	4.91	52.71	12.32	4.28	51.53	13.44	3.83	50.78	14.86	3.42	48.50	16.42	2.95	
68/20	65.14	10.22	6.37	62.72	11.20	5.60	60.30	12.34	4.89	59.03	13.47	4.38	56.58	14.89	3.80	54.08	16.46	3.29		
E(D)BLQ054BA6VJU	-4/-20	23.88	11.30	2.11	23.50	12.26	1.92													
	5/-15	26.60	11.52	2.31	25.96	12.52	2.07	25.35	13.69	1.85										
	19/-7.2	32.25	11.79	2.74	31.23	12.83	2.43	30.24	14.05	2.15	29.69	15.26	1.95							
	25/-3.9	33.97	10.97	3.10	32.63	11.95	2.73	31.70	13.09	2.42	31.03	14.23	2.18	29.89	15.67	1.91				
	36/2.2	37.79	11.04	3.42	36.48	12.03	3.03	35.19	13.19	2.67	34.40	14.34	2.40	33.08	15.80	2.09	31.75	17.42	1.82	
	45/7.2	56.57	12.49	4.53	54.59	13.02	4.07	52.61	14.92	3.53	51.39	16.22	3.17	49.37	17.86	2.76	47.34	19.59	2.42	
	54/12.2	58.99	12.18	4.84	56.94	13.26	4.44	54.88	14.67	3.77	53.60	15.85	3.38	51.46	17.46	2.95	49.35	19.25	2.56	
	59/15	63.98	12.24	5.23	61.77	13.35	4.63	59.55	14.63	4.07	58.18	15.92	3.65	55.89	17.54	3.19	53.59	19.33	2.77	
68/20	73.10	12.37	5.91	70.64	13.47	5.24	68.15	14.76	4.62	66.63	16.06	4.15	64.05	17.68	3.62	61.45	19.47	3.16		

Integrated value takes into consideration the capacity drop during frosting and defrosting periods.

4. Specifications – EBLQ Heat Pump

4-1 NOMINAL CAPACITY AND NOMINAL INPUT				EBLQ036BA6VJU	EBLQ048BA6VJU	EBLQ054BA6VJU
Condition 1 (Floor Heating)	Heating capacity	Nominal	kBTU/hr	38.21	47.77	54.59
	Cooling capacity	Nominal	kBTU/hr	43.83	54.57	57.07
	Heating PI	Nominal	kW	2.53	3.33	3.93
	Cooling PI	Nominal	kW	3.91	5.79	6.43
	COP	Nominal		4.54	4.37	4.22
	EER	Nominal		11.21	9.42	8.88
Condition 2 (Fan Coil)	Heating capacity	Nominal	kBTU/hr	37.07	44.17	51.39
	Cooling capacity	Nominal	kBTU/hr	34.17	42.69	44.74
	Heating PI	Nominal	kW	3.43	3.98	4.75
	Cooling PI	Nominal	kW	3.72	5.42	5.97
	COP	Nominal		3.37	3.35	3.26
	EER	Nominal		9.17	7.87	7.49
Notes				Condition 1: cooling Ta 95°F (35°C) - LWE 64.4°F (18°C) (ΔT=41°F (5°C)); heating Ta DB/WB 44.6 / 42.8°F (7°C/6°C) - LWC 95°F (35°C) ΔT=41°F (5°C)		
				Condition 2: cooling Ta 95°F (35°C) - LWE 7°C (ΔT=5°C); heating Ta DB/WB 44.6 / 42.8°F (7°C/6°C) - LWC 113°F (45°C) (ΔT=41°F (5°C))		

4-2 TECHNICAL SPECIFICATIONS				EBLQ036BA6VJU	EBLQ048BA6VJU	EBLQ054BA6VJU
Casing	Colour			Ivory white		
	Material			Painted galvanised steel		
Dimensions	Unit	Height	in (mm)	55-7/8 (1,418)		
		Width	in (mm)	56-1/2 (mm)		
		Depth	in (mm)	15-1/32 (382)	15-1/32 (382)	15-1/32 (382)
	Packing	Height	in (mm)	61-1/4 (1,557)		
		Width	in (mm)	59-1/16 (1,500)		
		Depth	in (mm)	16-7/8 (430)	16-7/8 (430)	16-7/8 (430)
Weight	Unit		lb (kg)	397 (180)	397 (180)	397 (180)
	Packed unit		lb (kg)	441 (200)	441 (200)	441 (200)
Packing	Material			Wood		
				Carton		
				Plastic foil		
Weight			lb (kg)	44 (20)	44 (20)	44 (20)
Operation Range (2,4)	Heating - Ambient	Min	°F (°C)	-4 (-20)	-4 (-20)	-4 (-20)
		Max	°F (°C)	95 (35)	95 (35)	95 (35)
	Heating - Waterside	Min	°F (°C)	59 (15)	59 (15)	59 (15)
		Max	°F (°C)	131 (55)	131 (55)	131 (55)
	Cooling - Ambient	Min	°F (°C)	50 (10)	50 (10)	50 (10)
		Max	°F (°C)	114.8 (46)	114.8 (46)	114.8 (46)
	Cooling - Waterside	Min	°F (°C)	-4 (-20)	-4 (-20)	-4 (-20)
		Max	°F (°C)	71.6 (22)	71.6 (22)	71.6 (22)
	Domestic hot water - Ambient	Min	°F (°C)	-4 (-20)	-4 (-20)	-4 (-20)
		Max	°F (°C)	109.4 (43)	109.4 (43)	109.4 (43)
	Domestic hot water - Waterside	Min	°F (°C)	77 (25)	77 (25)	77 (25)
		Max	°F (°C)	176 (80)	176 (80)	176 (80)
Sound Level (nominal) (1)	Heating	Sound Power	dBA	64	64	66
		Sound Pressure	dBA	51	51	52
	Cooling	Sound Power	dBA	65	66	69
		Sound Pressure	dBA	50	52	54

4-2 TECHNICAL SPECIFICATIONS				EBLQ036BA6VJU	EBLQ048BA6VJU	EBLQ054BA6VJU
Sound Level (Night quiet)	Heating	Sound Pressure	dBA	42	42	43
	Cooling	Sound Pressure	dBA	45	45	46
Refrigerant	Type			R-410A		
	Charge		lb (kg)	6.5 (2.95)	6.5 (2.95)	6.5 (2.95)
	Control			Electronic expansion valve		
	Nr of Circuits			1	1	1
Refrigerant Oil	Type			Daphne FVC68D		
	Charged Volume		oz (l)	34 oz (1.0 l)	34 oz (1.0 l)	34 oz (1.0 l)
Defrost Method				Pressure equalising		
Defrost Control				Sensor for outdoor heat exchanger temperature		
Capacity Control Method				Inverter controlled		
Safety Devices				High pressure switch		
				Fan motor thermal protector		
				Fuse		
Notes						
(1) The sound pressure level is measured via a microphone at a certain distance from the unit. It is a relative value depending on the distance and acoustic environment. Refer to sound spectrum drawing for more information.						
(2) 15°-25°C: BUH only, no heat pump operation = during commissioning						
(3) Including piping + PHE + back-up heater / excluding expansion vessel						
(4) E(D)(B)L* model can reach -4°F (-20°C)						

4-3 MAIN COMPONENTS				EBLQ036BA6VJU	EBLQ048BA6VJU	EBLQ054BA6VJU	
Air heat exchanger	Specifications	Length	in (mm)	33-3/4 (857)	33-3/4 (857)	33-3/4 (857)	
		Nr of Rows		2	2	2	
		Fin pitch	in (mm)	1/16 (1.4)	1/16 (1.4)	1/16 (1.4)	
		Nr of Passes		5	5	5	
		Face area	ft² (m²)	12.17 (1.131)	12.17 (1.131)	12.17 (1.131)	
		Nr of Stages		60	60	60	
	Tube type		Hi-XSS				
	Fin	Type		WF fin			
Treatment		Anti-corrosion treatment (PE)					
Fan	Type			Propeller			
	Quantity			2	2	2	
Air Flow Rate (nominal at 230V)	Heating	High	cfm (m³/min)	3178 (90)	3178 (90)	3178 (90)	
	Cooling	High	cfm (m³/min)	3390 (96)	3531 (100)	3426 (97)	
Fan	Discharge direction			Horizontal			
	Motor	Quantity		2	2	2	
		Model		Brushless DC			
Motor	Speed (nominal)		Steps	8	8	8	
	Heating		rpm	760	760	760	
	Cooling		rpm	780	780	780	
Fan	Motor	Output	W	70	70	70	
		Drive			Direct drive		
Compressor	Quantity			1	1	1	
	Motor	Model		JT100G-VD			
		Type		Hermetically sealed scroll compressor			
		Motor Output	W	2,200			
Starting Method			Inverter driven				
Motor	Crankcase Heater	Output	W	33	33	33	

4-3 MAIN COMPONENTS				EBLQ036BA6VJU	EBLQ048BA6VJU	EBLQ054BA6VJU
Pump	Type		Water cooled			
	Nr. of speed		2	2	2	
	Nominal ESP unit	Heating	PSI (kPa)	7.61 (52.5)	6.31 (43.5)	5 (35)
		Cooling	PSI (kPa)	8.11 (55.9)	7.12 (49.1)	6.79 (46.8)
	Power input		W	210	210	210
Water side Heat exchanger	Type		Brazed plate			
	Quantity		1	1	1	
	Water volume (3)		gal (l)	0.27 (1.01)	0.27 (1.01)	0.27 (1.01)
	Water flow rate Min.		gpm/min (l/min)	4.23 (16)	4.23 (16)	4.23 (16)
	Water flow rate Nom.	Heating	gpm/min (l/min)	8.48 (32.1)	10.59 (40.1)	12.13 (45.9)
		Cooling	gpm/min (l/min)	9.72 (36.8)	12.13 (45.9)	12.68 (48)
	Water flow rate Max.		gpm/min (l/min)	15.32 (58)	15.32 (58)	15.32 (58)
	Insulation material		Foamed synthetic elastomer			
Expansion vessel	Volume		gal (l)	2.64 (10)	2.64 (10)	2.64 (10)
	Maximum water pressure		PSI (bar)	43.5 (3)	43.5 (3)	43.5 (3)
	Pre pressure		PSI (bar)	14.5 (1.0)	14.5 (1.0)	14.5 (1.0)
Water filter	Diameter perforations		in (mm)	1/32 (1)	1/32 (1)	1/32 (1)
	Material		Brass			
Water circuit	Piping connections		inch	1-1/4 (FEMALE) BSP		
	Piping		inch	1-1/4		
	Safety valve		PSI (bar)	43.5 (3)	43.5 (3)	43.5 (3)
	Manometer		Yes			
	Drain valve / Fill valve		yes			
	Shut off valve		yes			
	Air purge valve		yes			
	Total water volume (3)		gal (l)	1.45 (5.5)	1.45 (5.5)	1.45 (5.5)

4-4 ELECTRICAL SPECIFICATIONS				EBLQ036BA6VJU	EBLQ048BA6VJU	EBLQ054BA6VJU	
Power supply compressor component	Main Power	Name		VJ			
		Phase		1	1	1	
		Frequency	Hz	60	60	60	
		Voltage	V	208/230	208/230	208/230	
	Voltage range	Minimum	V	-10%			
		Maximum	V	+10%			
	Current	Rated Load Amps (RLA)		A	23.4	23.4	23.4
		Full Load Amps (FLA)		A	26.5	26.5	26.5
		MCA		A	26.5	26.5	26.5
		MOP		A	30	30	30
Wiring connections		For power supply compressor component		Installation Instruction			
Power supply hydraulic component	Current back-up heater	Type		Electric 6kW			
Current back-up heater	Power Supply	Phase		1~			
		Frequency	Hz	60	60	60	
		Voltage	V	208/230	208/230	208/230	
	Current	Minimum Circuit Amps (MCA)		A	28.6	28.6	28.6
		Maximum Overcurrent Protection (MOP)		A	30	30	30

4-4 ELECTRICAL SPECIFICATIONS				EBLQ036BA6VJU	EBLQ048BA6VJU	EBLQ054BA6VJU	
Power supply hydronic component	Voltage range	Minimum	V	-10%			
		Maximum	V	+10%			
	Wiring connections	Connection type		for power supply hydraulic compartment			
		Quantity of wires		3G			
		Type of wires		Select diameter and type according to national and local regulations			
		Connection type		for power supply connection to optional sanitary tank + Q2L			
		Quantity of wires		3G			
		Type of wires		Select diameter and type according to national and local regulations			
		Type of wires		For more details on voltage range and current refer to installation manual			
		Connection type		for connection with R5T			
		Quantity of wires		Wire included in option EKHWS*			
		Type of wires		Wire included in option EKHWS*			
		Connection type		for connection with A3P			
		Quantity of wires		Depends on thermostat type, refer to installation manual			
		Type of wires		Select diameter and type according to national and local regulations			
		Type of wires		For more details on voltage range and current refer to installation manual.			
		Connection type		for connection with M2S			
		Quantity of wires		3G			
		Type of wires		Select diameter and type according to national and local regulations			
		Type of wires		For more details on voltage range and current refer to installation manual.			
		Connection type		for connection with M3S			
		Quantity of wires		3G or 4G			
	Type of wires		Select diameter and type according to national and local regulations				
	Type of wires		For more details on voltage range and current refer to installation manual.				
	Notes			Power supply compressor compartment is for compressor, fan, pump and controller			
				Installer can reduce capacity of the heater from 20,491 to 10,245 BTU/hr (6 to 3kW). The current is then reduced from 26 to 13A. Instructions see installation manual.			
				Installer can reduce capacity of the heater from 6 to 3.5kW. The current is then reduced from 8.7 to 5A. Instructions see installation manual.			
			Power supply hydraulic compartment is for the electric heater. The optional domestic warm water tank has a separate power supply.				
			Standard for safety heating & cooling equipment; UL1995 / CSA (U&C) C22.2 #236				

5. Capacity Tables – EBLQ – Heating

MAXIMUM HEATING CAPACITY - PEAK VALUE																			
MODEL	LWC (°F/°C) T _{amb} (°F/°C)	86/30			95/35			104/40			113/45			122/50			131/55		
		HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP
E(D)B LQ06BA6VJU	-4/-20	20.00	7.93	2.52	18.81	8.63	2.18												
	5/-15	22.61	8.04	2.81	21.25	8.76	2.43												
	19/-7.2	27.76	8.12	3.42	26.15	8.68	3.01	25.02	9.77	2.56	24.96	11.34	2.20						
	25/-3.9	31.66	8.12	3.90	29.90	8.90	3.36	29.38	9.81	2.99	28.70	11.41	2.52	27.66	12.65	2.19			
	36/2.2	35.22	8.08	4.36	33.34	8.89	3.75	32.83	9.82	3.34	32.15	11.43	2.81	31.06	12.69	2.45	29.02	14.10	2.06
	45/7.2	40.25	8.02	5.02	39.21	8.84	4.44	37.74	9.79	3.85	37.07	11.42	3.25	35.94	12.71	2.83	33.71	14.13	2.39
	54/12.2	43.65	7.80	5.60	41.57	8.62	4.82	41.17	9.58	4.30	40.57	11.21	3.62	39.47	12.50	3.16	37.16	13.92	2.67
	59/15	47.22	7.72	6.12	45.03	8.55	5.27	44.69	9.52	4.69	44.11	11.16	3.95	43.00	12.46	3.45	40.57	13.89	2.92
	68/20	53.68	7.58	7.08	51.33	8.41	6.10	51.07	9.40	5.43	50.57	11.06	4.57	45.01	12.36	3.64	45.45	13.81	3.29
E(D)B LQ048BA6VJU	-4/-20	25.32	9.95	2.54	24.68	10.82	2.27												
	5/-15	28.29	10.15	2.79	27.29	11.03	2.47	26.34	12.07	2.18									
	19/-7.2	34.37	10.35	3.32	33.00	11.28	2.93	31.66	12.36	2.56	30.96	13.42	2.31						
	25/-3.9	39.11	10.44	3.75	37.52	11.39	3.29	35.95	12.49	2.88	35.11	13.58	2.59	34.57	14.97	2.31			
	36/2.2	43.50	10.48	4.15	41.72	11.45	3.64	39.98	12.57	3.18	39.02	13.67	2.85	38.40	15.08	2.55	36.62	16.64	2.20
	45/7.2	49.77	10.52	4.73	47.77	11.37	4.20	45.79	12.55	3.65	44.70	13.77	3.25	43.99	15.20	2.89	41.96	16.75	2.51
	54/12.2	52.69	10.21	5.16	50.62	11.18	4.53	48.57	12.31	3.95	47.45	13.42	3.54	46.73	14.83	3.15	44.60	16.38	2.72
	59/15	57.09	10.21	5.59	54.90	11.19	4.91	52.71	12.32	4.28	51.53	13.44	3.83	50.78	14.86	3.42	48.50	16.42	2.95
	68/20	65.14	10.22	6.37	62.72	11.20	5.60	60.30	12.34	4.89	59.03	13.47	4.38	58.68	14.89	3.40	54.08	16.46	3.29
E(D)B LQ054BA6VJU	-4/-20	28.90	11.60	2.49	28.45	12.59	2.26												
	5/-15	32.20	11.83	2.72	31.42	12.86	2.44	30.68	14.05	2.18									
	19/-7.2	39.03	12.12	3.22	37.80	13.19	2.87	36.60	14.44	2.53	35.94	15.69	2.29						
	25/-3.9	44.41	12.27	3.62	42.91	13.36	3.21	41.43	14.83	2.79	40.58	15.91	2.55	39.07	17.52	2.23			
	36/2.2	49.40	12.37	3.99	47.69	13.48	3.54	45.99	14.77	3.11	44.98	16.05	2.80	43.24	17.68	2.45	41.51	19.49	2.13
	45/7.2	56.57	12.49	4.53	54.59	13.42	4.07	52.61	14.92	3.53	51.39	16.22	3.17	49.37	17.86	2.76	47.34	19.69	2.40
	54/12.2	58.99	12.18	4.84	56.94	13.28	4.29	54.88	14.57	3.77	53.60	15.85	3.38	51.48	17.46	2.95	49.35	19.25	2.56
	59/15	63.98	12.24	5.23	61.77	13.35	4.63	59.55	14.63	4.07	58.18	15.92	3.65	55.09	17.54	3.14	53.59	19.33	2.77
	68/20	73.10	12.37	5.91	70.64	13.47	5.24	68.16	14.76	4.62	66.63	16.06	4.15	64.05	17.68	3.62	61.45	19.47	3.16

Peak value does not include capacity drop during frosting and defrosting periods.

MAXIMUM HEATING CAPACITY - INTEGRATED VALUE																			
MODEL	LWC (°F/°C) T _{amb} (°F/°C)	86/30			95/35			104/40			113/45			122/50			131/55		
		HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP	HC (kBTU/h)	PI (kBTU/h)	COP
E(D)B LQ038BA6VJU	-4/-20	16.93	7.81	2.17	15.92	8.49	1.88												
	5/-15	19.14	7.91	2.42	17.99	8.62	2.09	17.59	9.45	1.86									
	19/-7.2	23.49	7.99	2.94	22.14	8.74	2.53	21.69	9.81	2.21	21.13	11.14	1.90						
	25/-3.9	26.27	7.84	3.35	24.82	8.60	2.89	24.38	9.47	2.57	23.82	11.00	2.17	22.95	12.20	1.88			
	36/2.2	29.23	7.81	3.74	27.67	8.58	3.22	27.25	9.47	2.88	26.88	11.02	2.44	25.78	12.23	2.11	24.09	13.59	1.77
	45/7.2	40.25	8.02	5.02	38.21	8.64	4.42	37.74	9.79	3.85	37.07	11.42	3.25	35.94	12.71	2.83	33.71	14.13	2.39
	54/12.2	43.66	7.80	5.60	41.57	8.62	4.82	41.17	9.58	4.30	40.57	11.21	3.62	39.47	12.50	3.16	37.16	13.92	2.67
	59/15	47.22	7.72	6.12	45.03	8.55	5.27	44.69	9.52	4.68	44.11	11.16	3.95	43.00	12.46	3.45	40.57	13.80	2.94
	68/20	53.68	7.58	7.08	51.33	8.41	6.10	51.07	9.40	5.43	50.57	11.06	4.57	48.01	12.36	3.88	45.45	13.81	3.29
E(D)B LQ048BA6VJU	-4/-20	21.54	9.69	2.22	20.91	10.52	1.99												
	5/-15	24.07	9.87	2.44	23.21	10.73	2.16	22.40	11.73	1.91									
	19/-7.2	29.24	10.06	2.91	28.07	10.96	2.56	26.93	12.01	2.24	26.34	13.04	2.02						
	25/-3.9	31.09	9.51	3.27	29.83	10.37	2.88	28.58	11.30	2.53	27.91	12.36	2.26	27.48	13.62	2.02			
	36/2.2	34.58	9.53	3.63	33.17	10.42	3.18	31.78	11.44	2.78	31.02	12.44	2.49	30.52	13.71	2.23	29.12	15.13	1.92
	45/7.2	49.77	10.52	4.73	47.77	11.37	4.20	45.79	12.65	3.62	44.70	13.77	3.25	43.99	15.20	2.89	41.96	16.78	2.50
	54/12.2	52.69	10.21	5.16	50.62	11.18	4.47	48.57	12.31	3.95	47.45	13.42	3.54	46.73	14.83	3.15	44.60	16.38	2.72
	59/15	57.09	10.21	5.59	54.90	11.19	4.91	52.71	12.32	4.28	51.53	13.44	3.83	50.78	14.86	3.42	48.50	16.42	2.95
	68/20	65.14	10.22	6.37	62.72	11.20	5.60	60.30	12.34	4.89	59.03	13.47	4.38	56.58	14.89	3.80	54.08	16.46	3.29
E(D)B LQ054BA6VJU	-4/-20	23.88	11.30	2.11	23.50	12.26	1.92												
	5/-15	26.60	11.52	2.31	25.96	12.52	2.07	25.35	13.69	1.85									
	19/-7.2	32.25	11.79	2.74	31.23	12.83	2.43	30.24	14.05	2.15	29.69	15.26	1.95						
	25/-3.9	33.97	10.97	3.10	32.63	11.95	2.73	31.70	13.09	2.42	31.03	14.23	2.18	29.89	15.67	1.91			
	36/2.2	37.79	11.04	3.42	36.48	12.03	3.03	35.19	13.19	2.67	34.40	14.34	2.40	33.08	15.80	2.09	31.75	17.42	1.82
	45/7.2	56.57	12.49	4.53	54.59	13.42	4.07	52.61	14.92	3.53	51.39	16.22	3.17	49.37	17.86	2.76	47.34	19.59	2.42
	54/12.2	58.99	12.18	4.84	56.94	13.26	4.44	54.88	14.57	3.77	53.60	15.85	3.38	51.46	17.46	2.95	49.35	19.25	2.56
	59/15	63.98	12.24	5.23	61.77	13.35	4.63	59.55	14.63	4.07	58.18	15.92	3.65	55.89	17.54	3.19	53.59	19.33	2.77
	68/20	73.10	12.37	5.91	70.64	13.47	5.24	68.16	14.76	4.62	66.63	16.06	4.15	64.05	17.68	3.62	61.45	19.47	3.16

Integrated value takes into consideration the capacity drop during frosting and defrosting periods.

6. Capacity Tables – EBLQ – Cooling

MAXIMUM COOLING CAPACITY																			
MODEL	T _{amb} (°F/°C)	60/15.6			77/25			86/30			95/35			104/40			113/45		
	LWE (°F/°C)	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER	CC kBTU/h	PI (kW)	EER
EBLQ036A6VJU	45/7.2	37.81	2.83	13.36	37.49	3.09	12.13	36.23	3.39	10.69	34.12	3.72	9.17	31.27	4.10	7.63	27.79	4.51	6.16
	50/10	40.16	2.86	14.04	39.80	3.13	12.72	38.45	3.43	11.21	38.21	3.77	10.14	33.19	4.15	8.00	29.52	4.57	6.46
	55/12.8	44.13	2.88	15.32	43.72	3.16	13.84	42.24	3.47	12.17	39.79	3.82	10.42	36.50	4.21	8.67	32.03	4.78	6.70
	59/15	46.87	2.91	16.11	46.44	3.19	14.56	44.87	3.51	12.78	42.28	3.86	10.95	38.80	4.24	9.15	33.19	4.65	7.14
	64/17.8	51.75	2.94	17.60	50.01	3.23	15.48	47.33	3.55	13.33	43.83	3.91	11.21	39.61	4.30	9.21	33.60	4.31	7.80
EBLQ048A6VJU	72/22.2	57.72	3.00	19.24	55.81	3.29	16.96	52.86	3.62	14.60	49.00	3.98	12.31	44.36	4.38	10.13	35.22	3.86	9.12
	45/7.2	47.31	4.14	11.43	46.93	4.51	10.41	45.34	4.94	9.18	42.65	5.42	7.87	37.82	5.20	7.27	33.48	5.73	5.84
	50/10	50.90	4.22	12.06	50.46	4.60	10.97	48.73	5.03	9.69	45.84	5.52	8.30	40.68	5.29	7.69	36.03	5.82	6.19
	55/12.8	55.89	4.30	13.00	55.39	4.69	11.81	53.49	5.13	10.43	50.32	5.62	8.95	44.68	5.38	8.30	37.38	5.90	6.34
	59/15	59.32	4.35	13.64	58.78	4.75	12.37	56.77	5.20	10.92	53.44	5.69	9.39	47.47	5.45	8.71	38.74	5.76	6.73
EBLQ054A6VJU	64/17.8	64.55	4.45	14.51	62.37	4.85	12.86	59.01	5.29	11.16	54.57	5.79	9.42	47.75	5.54	8.62	39.21	5.33	7.36
	72/22.2	71.89	4.59	15.66	69.50	5.00	13.90	65.80	5.45	12.07	60.92	5.95	10.24	53.38	5.68	9.40	41.10	4.76	8.63
	45/7.2	49.55	4.58	10.82	49.27	5.00	9.85	47.61	5.46	8.72	44.70	5.97	7.49	39.46	5.70	6.92	33.57	5.60	5.99
	50/10	53.38	4.68	11.41	52.99	5.11	10.37	51.15	5.58	9.17	48.01	6.09	7.88	42.40	5.81	7.30	36.12	5.69	6.35
	55/12.8	58.66	4.79	12.25	58.17	5.23	11.12	56.13	5.70	9.85	52.68	6.22	8.47	46.56	5.92	7.86	37.47	5.77	6.49
EBLQ066A6VJU	59/15	62.29	4.87	12.79	61.74	5.31	11.63	59.56	5.78	10.30	55.91	6.30	8.87	49.45	5.99	8.26	38.83	5.63	6.90
	64/17.8	67.80	5.00	13.56	65.51	5.43	12.06	61.83	5.91	10.46	57.07	6.43	8.88	49.72	6.10	8.15	39.30	5.21	7.54
	72/22.2	75.53	5.19	14.55	72.97	5.63	12.96	68.95	6.10	11.30	63.66	6.62	9.62	55.55	6.28	8.65	41.20	4.60	8.96

Symbols:


- CC Cooling Capacity @ maximum operating frequency, BTU/h
- HC Heating Capacity @ maximum operating frequency, BTU/h
- PI Cooling Power Input (kW), Heating Power Input (kBTU/h measured according to Eurovent 6/C003-2006 (kW)/EN14511
- LWE Leaving Water evaporator temperature (Cooling)
- LWC Leaving Water condenser temperature (Heating)
- Tamb Outdoor Ambient temperature, RH = 85%

Conditions:

Cooling Capacity BTU/h and valid for chilled water range $\Delta T = 5-15^{\circ}F$ ($3-8^{\circ}C$)
 Heating Capacity is according to Eurovent 6/C/003-2006 (kW) and valid for heating water range $\Delta T = 5-15^{\circ}F$ ($3-8^{\circ}C$)
 Power Input is total of indoor and outdoor unit, except the circulation pump; (90W per EN14511)

6.1 Altitude Correction

capacity Correction Factor- due to lower air densit

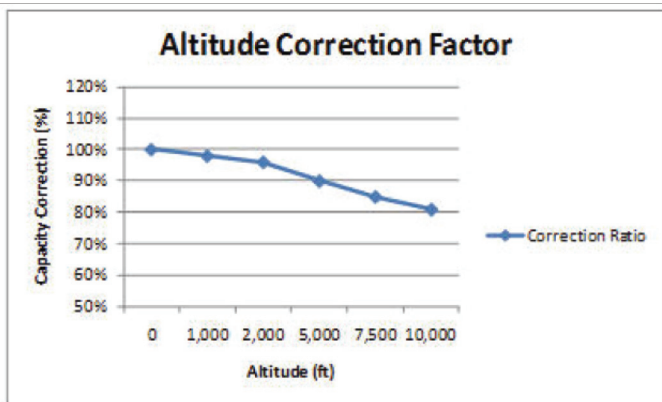

ALTITUDE		DENSITY		CAPACITY RATIO
(ft)	(m)	(lb/ft ³)	(kg/m ³)	(%)
0	0	0.0807	1.293	100
1,000	305	0.7785	1.247	98
2,000	610	0.075	1.202	96
5,000	1,524	0.0672	1.076	90
7,500	2,286	0.0611	0.979	85
10,000	3,048	0.0555	0.889	81

Altitude Influence on Daikin Altherma Operation Range

Altitude		Ambient Temperature		Absolute Atmospheric		Absolute Pressure		R410A Condition	
(ft)	(m)	(°F)	(°C)	(bar)	(psi)	40 bar (G)	580.15 psi	Temp (°F)	(psi)
0	0	59	15	1.013	14.7	38.99	565.45	143.87	62.15
1,000	305	59	15	0.977	14.17	39.02	565.98	143.94	62.19
2,000	610	59	15	0.942	13.66	39.06	566.49	144.01	62.23
5,000	1,524	59	15	0.843	12.23	39.16	567.92	144.21	62.34
7,500	2,286	59	15	0.767	11.13	39.23	568.99	144.37	62.43
10,000	3,048	59	15	0.697	10.11	39.3	570.04	144.52	62.51

Taking this influence into consideration, it is recommended to design your Daikin Altherma system, with a target leaving water temperature 2°F (1°C) below the maximum permitted set-point of 122°F (50°C).

Considerations for project designs in high altitude conditions

1. Determine the altitude at the location the Daikin Altherma system is being considered for.
2. Verify the altitude correction factor from the table enclosed in this bulletin.
3. If an altitude falls within specified values, use the correction graph to determine the applicable capacity correction factor.
4. Since the Daikin Altherma selection and simulator software does not correct for altitude, add the altitude correction factor to the load requirements before the initial selection is made.
5. Conduct the equipment selection based on these conditions as per normal procedures.


Example: -

A Daikin Altherma system is being considered for an application in Denver, CO.


Denver is located at an altitude of 5,000ft, thus the capacity correction factor would be 10%.

If the load calculations determined a 40,000 Btu/hr requirement, adding the correction factor for altitude would result in 40,000 Btu/hr + 10% (4,000 Btu/hr), thus the load required for the selection of Daikin Altherma would be 44,000 Btu/hr.

7. Dimensional Drwg. & Center of Gravity - Monobloc

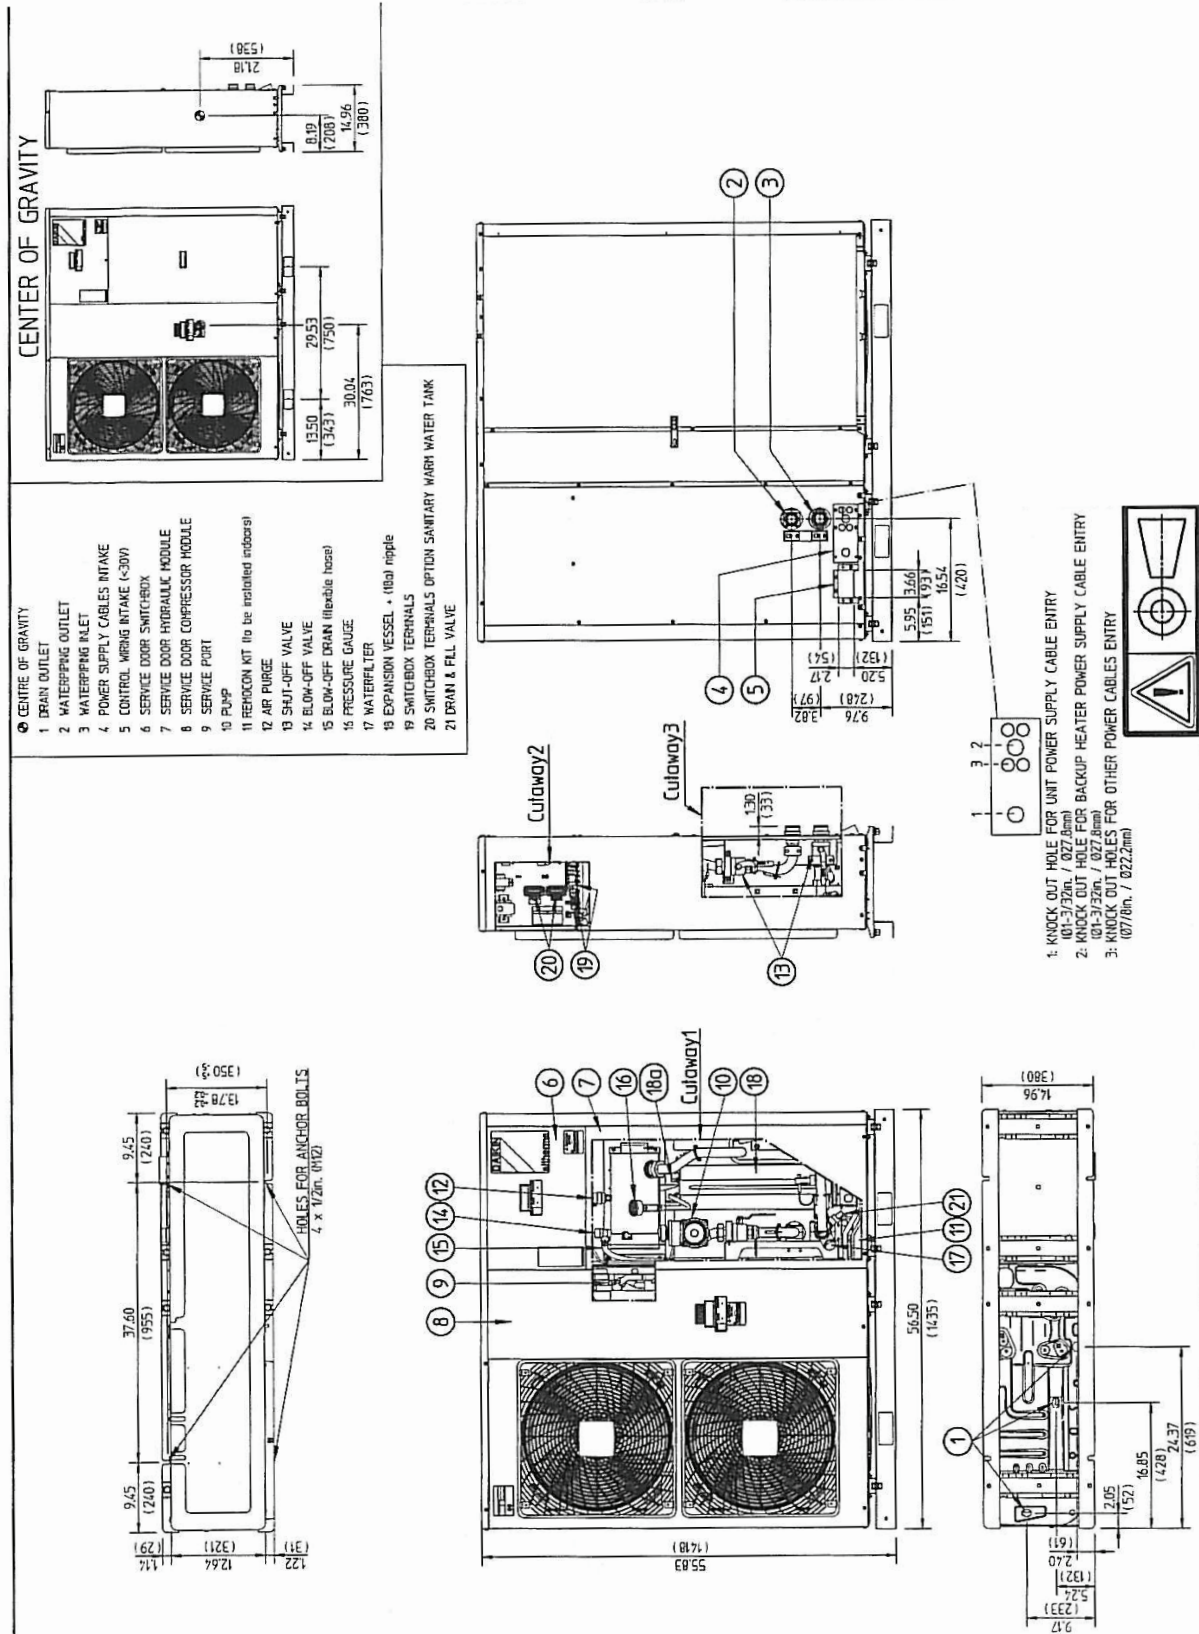

8. Piping Diagram - Monobloc

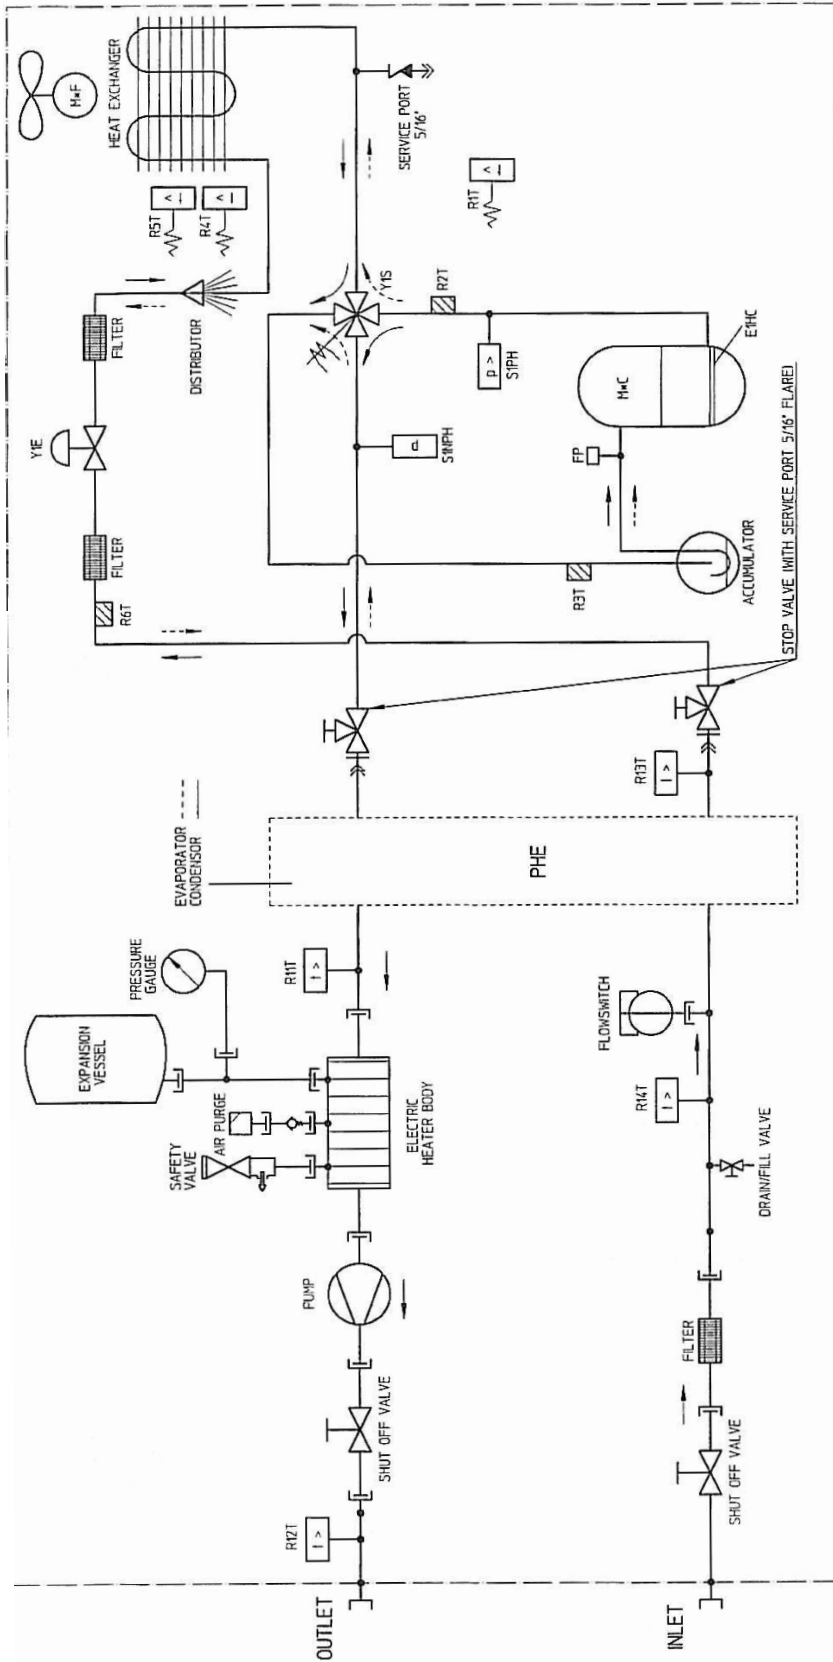


R11T	Outlet water head-exchanger thermistor
R12T	Outlet water backup heater thermistor
R13T	Refrigerant Liquid side thermistor
R14T	Inlet water thermistor
FP	Fusible Plug


R1T	THERMISTOR (ARD)
R2T	THERMISTOR (DISCHARGED)
R3T	THERMISTOR (SOLUTION)
R4T	THERMISTOR (LIQUID 0)
R5T	THERMISTOR (MIDDLE)
R6T	THERMISTOR (LIQUID 2)
SAPH	PRESSURE SENSOR
YIE	ELECTRIC EXPANSION VALVE
EHC	GRANULAGE HEATER
Y3S	FOUR WAY VALVE
Y3S	INJECTION VALVE
SAPH	HIGH PRESSURE SWITCH
IMF	FAN MOTOR
HC	COMPRESSOR

HEATING
COOLING


9. Wiring Diagram - Monobloc

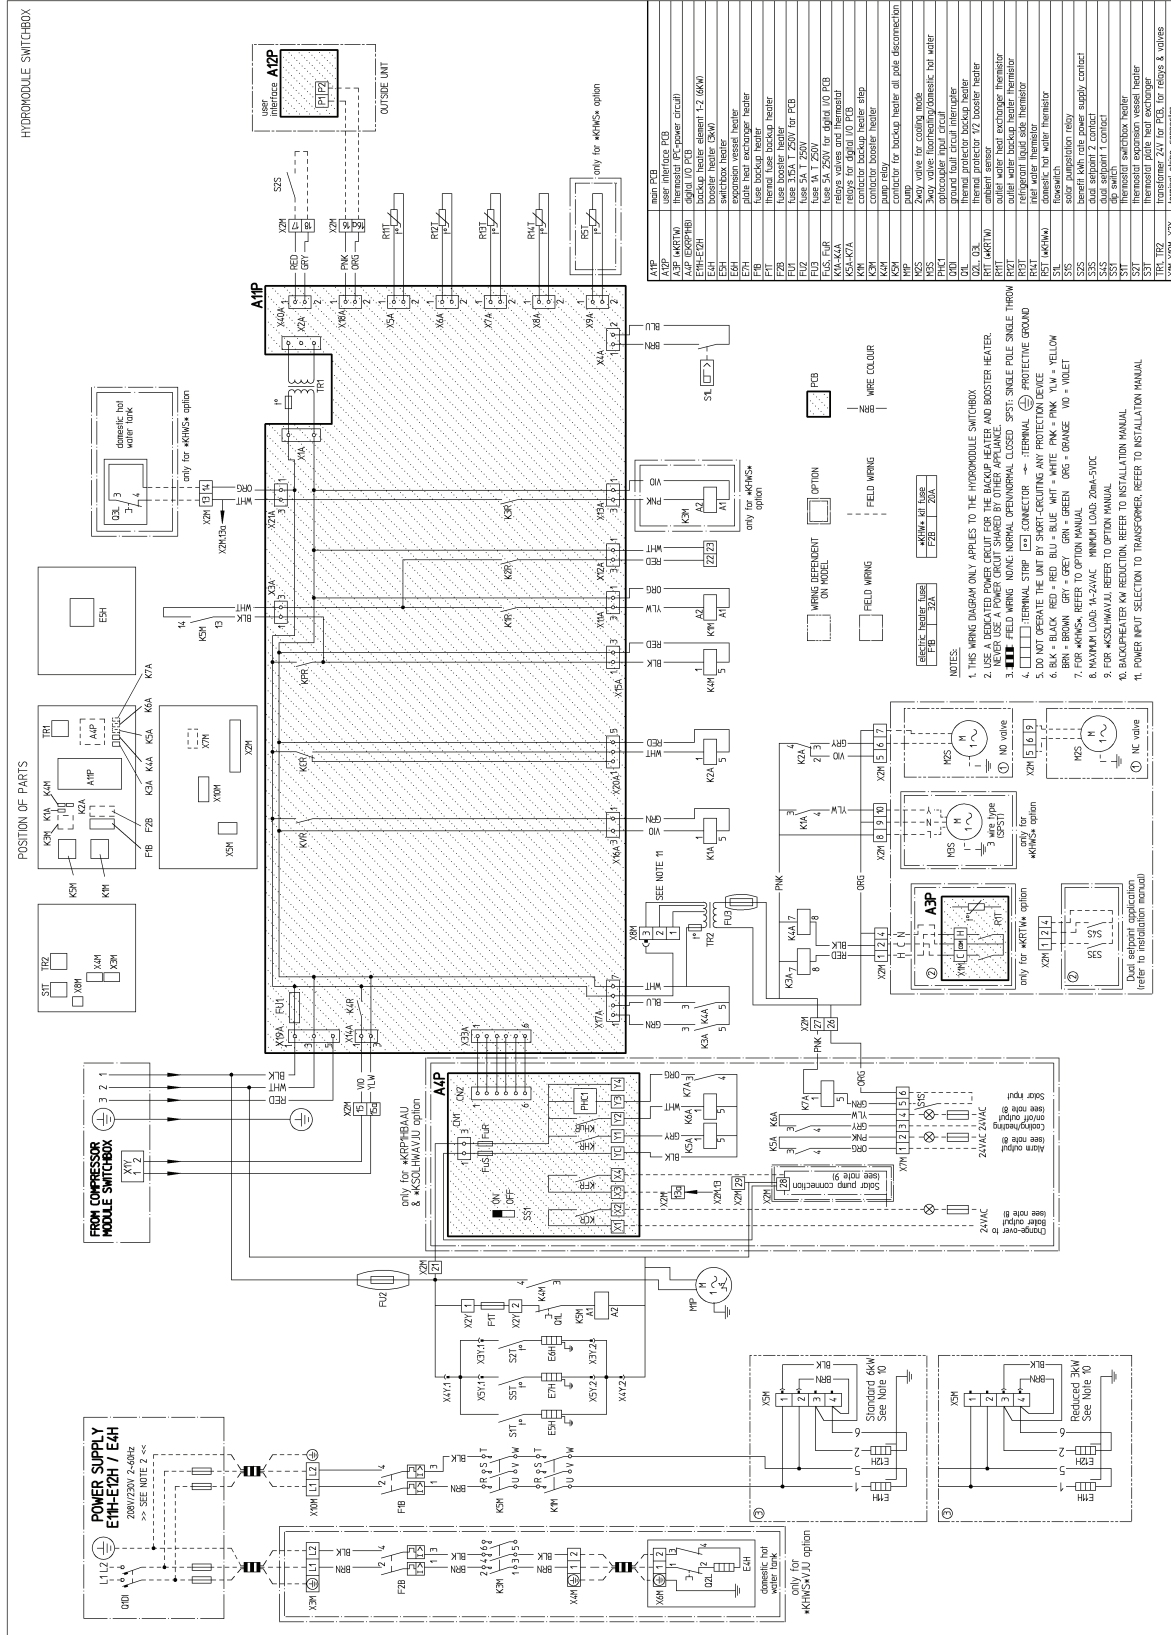

9.1 Wiring Diagram

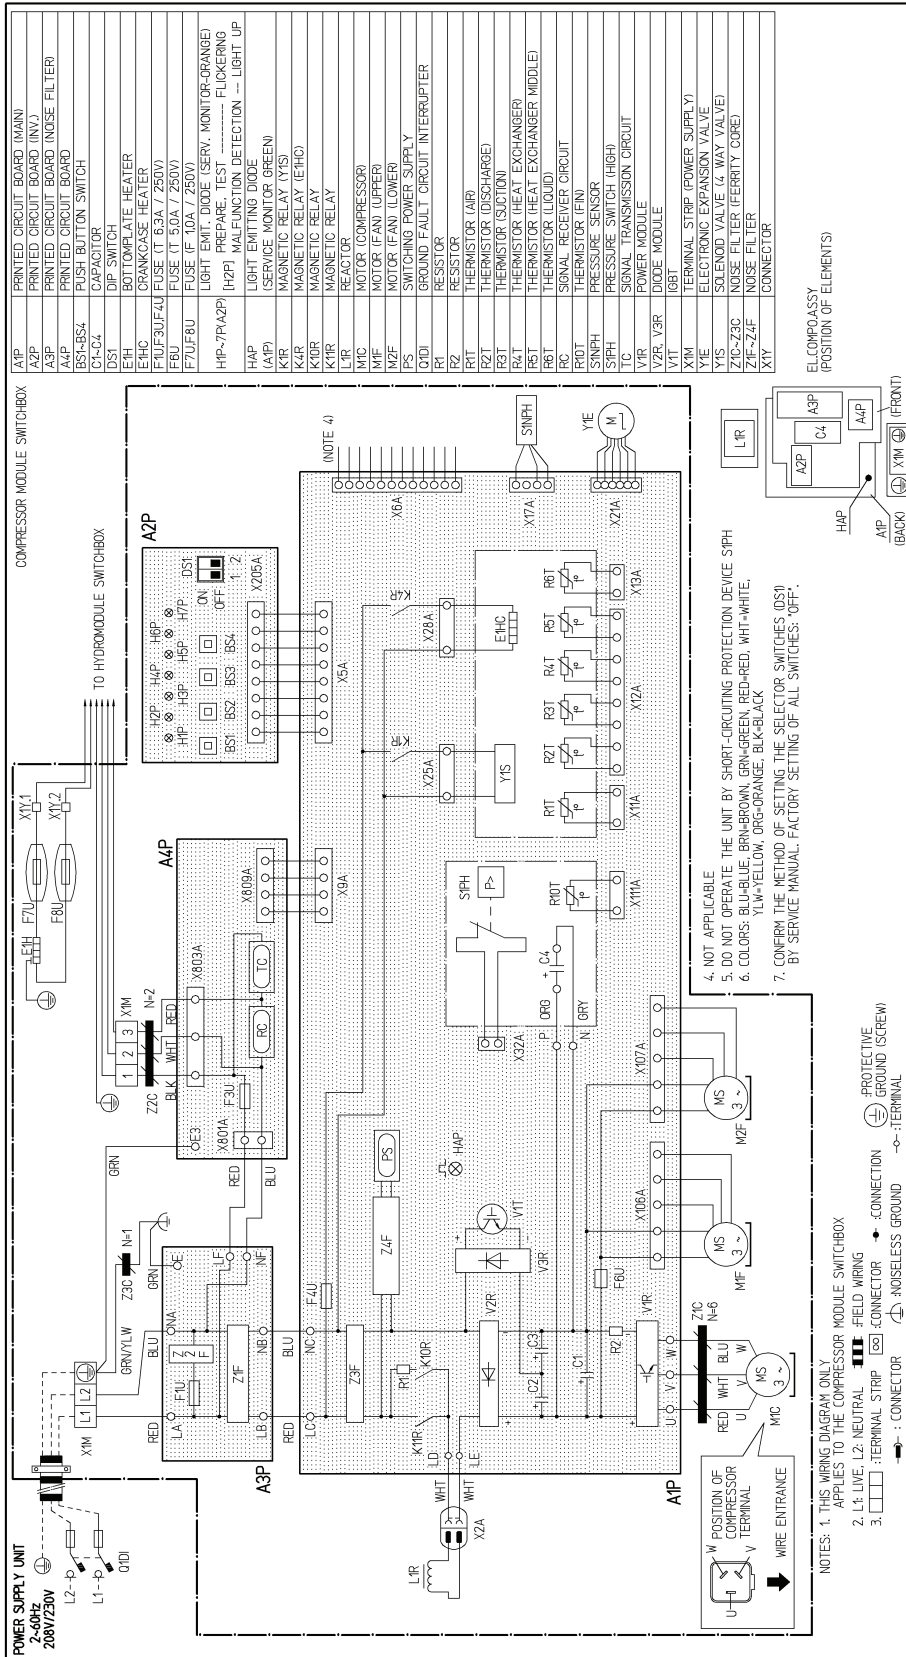


9.2 External Connection Diagram - Monobloc

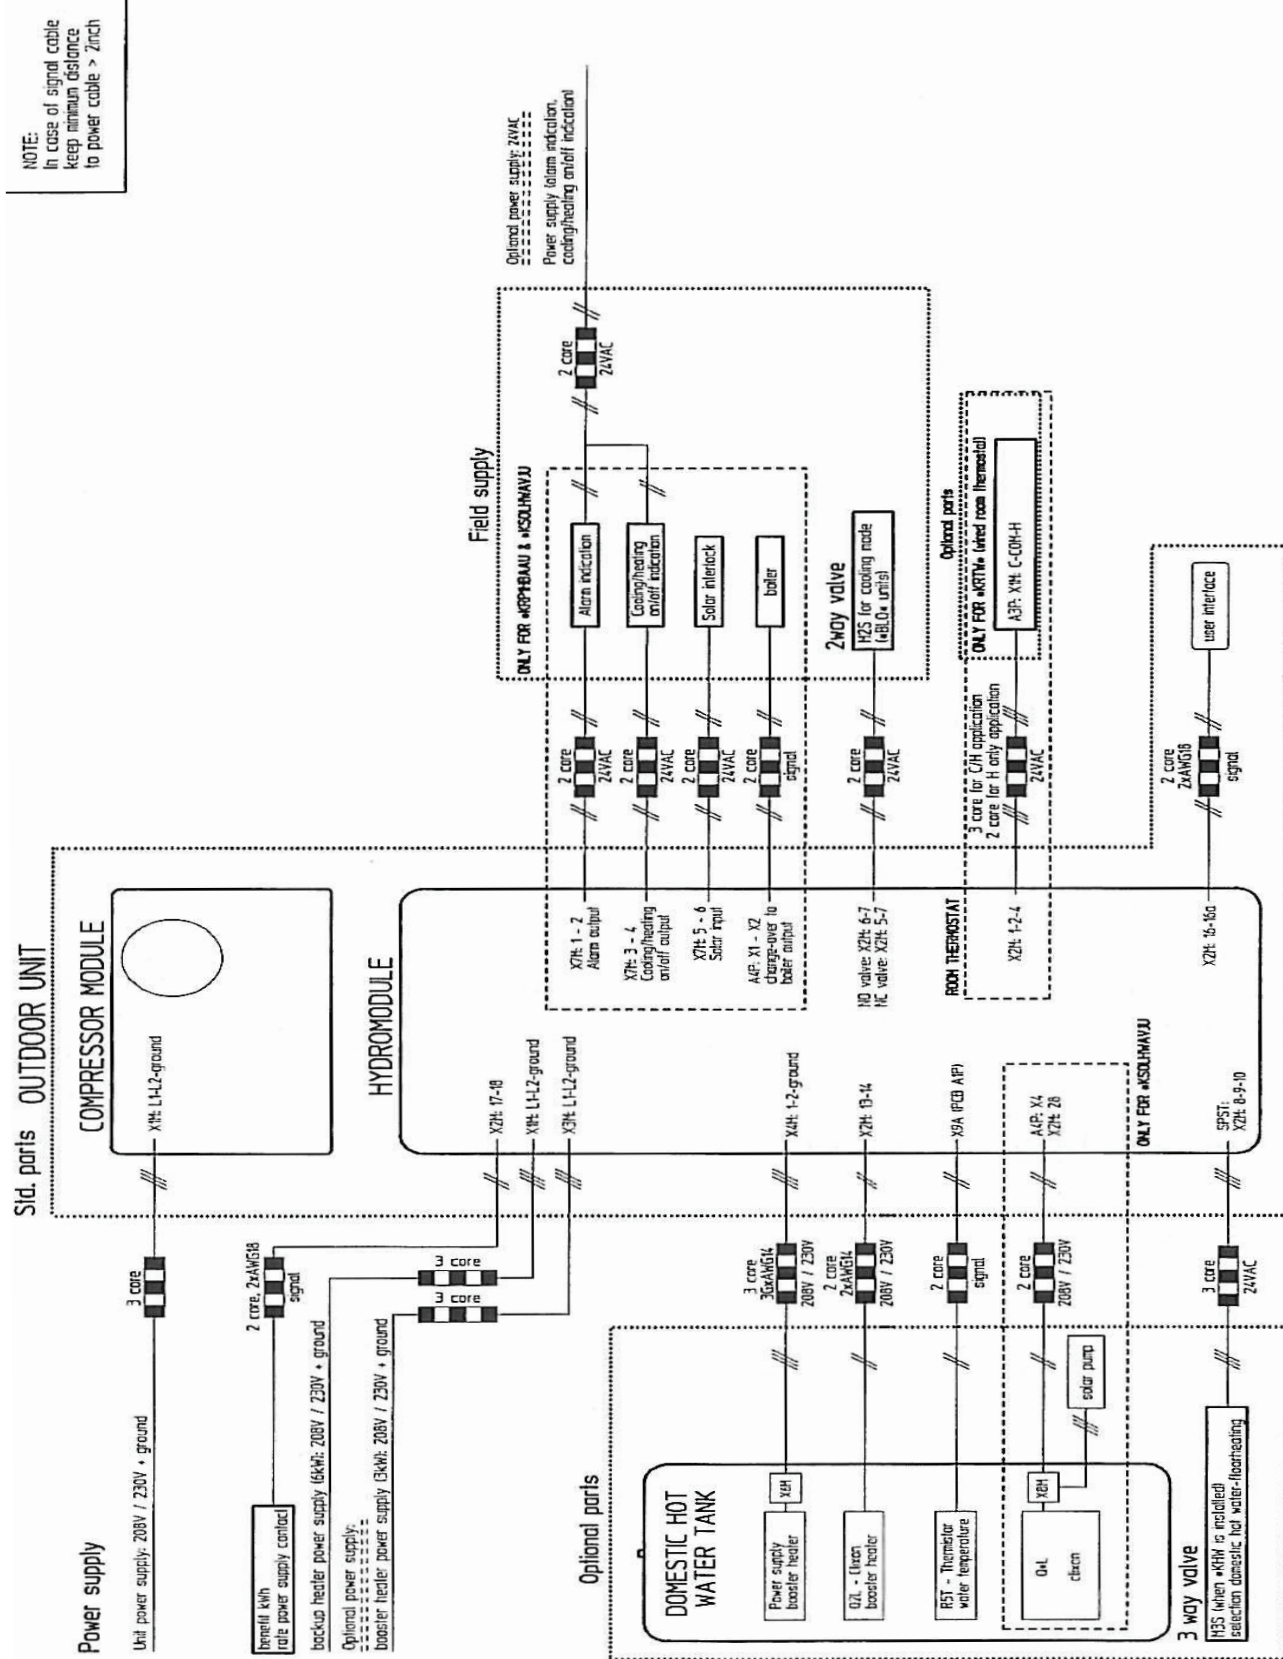


10. Sound Data - Monobloc

10.1 Sound Pressure Spectrum - Normal Operation

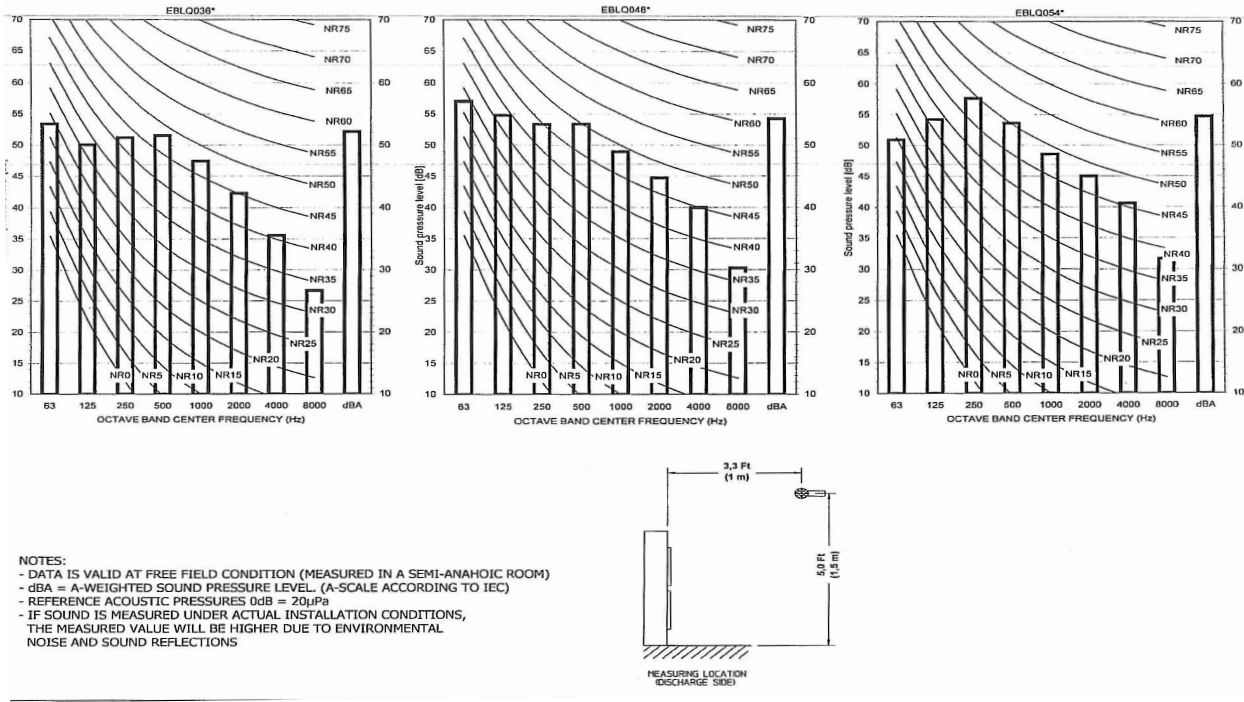

10.2 Sound Pressure Night Quiet Mode

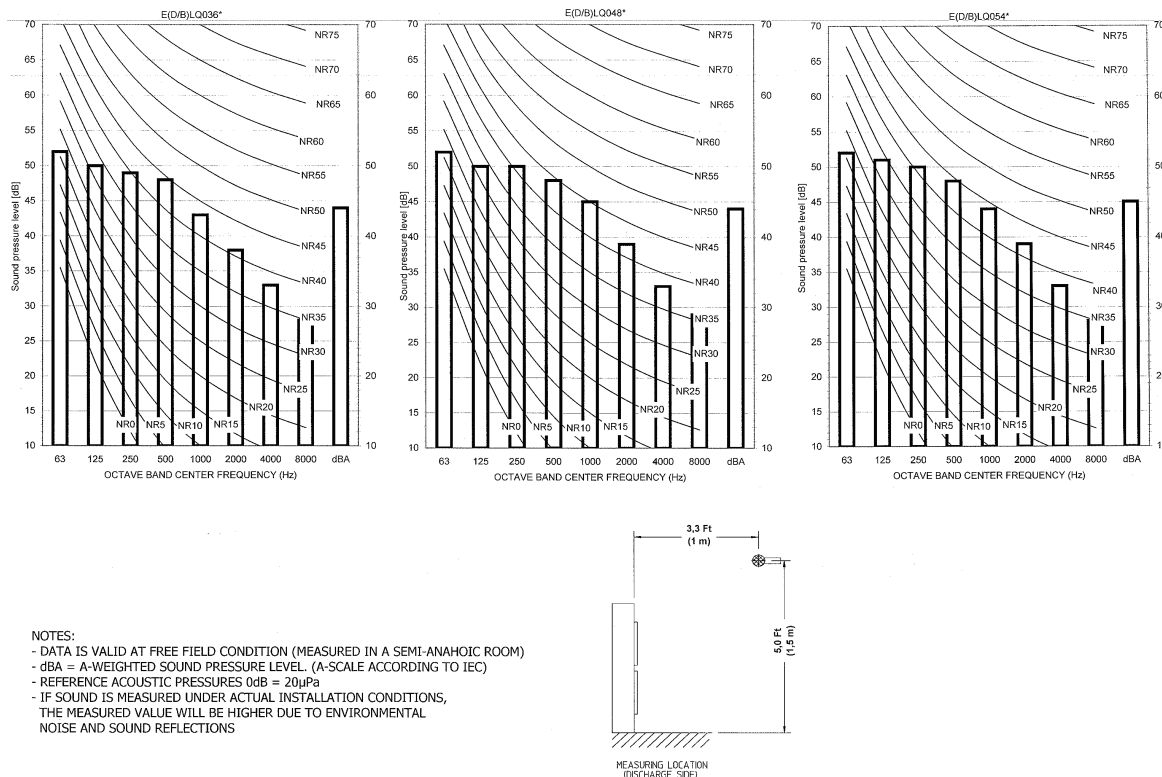


11. Application Examples - Monobloc

TYPICAL APPLICATION EXAMPLES

The application examples given below are for illustration purposes only.

Application 1

Space heating only application with a room thermostat connected to the unit.

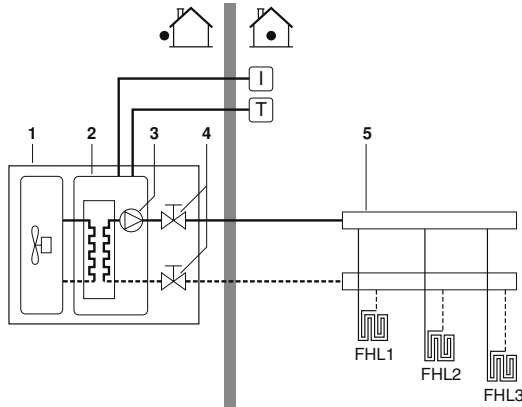

- | | | | |
|---|--------------------------|---------|-----------------------------------|
| 1 | Unit | FHL1..3 | Floor heating loop (field supply) |
| 2 | Heat exchanger | T | Room thermostat (optional) |
| 3 | Pump | I | User interface |
| 4 | Shut-off valve | | |
| 5 | Collector (field supply) | | |

Unit operation and space heating

When a room thermostat (T) is connected to the unit and when there is a heating request from the room thermostat, the unit will start operating to achieve the target leaving water temperature as set on the user interface.


When the room temperature is above the thermostat set point, the unit will stop operating.



Make sure to connect the thermostat wires to the correct terminals (see "Connection of the thermostat cable" on page 20) and to configure the DIP switch toggle switches correctly (see "Room thermostat installation configuration" on page 23).

Application 2

Space heating only application without room thermostat connected to the unit. The temperature in each room is controlled by a valve on each water circuit. Domestic hot water is provided through the domestic hot water tank which is connected to the unit.

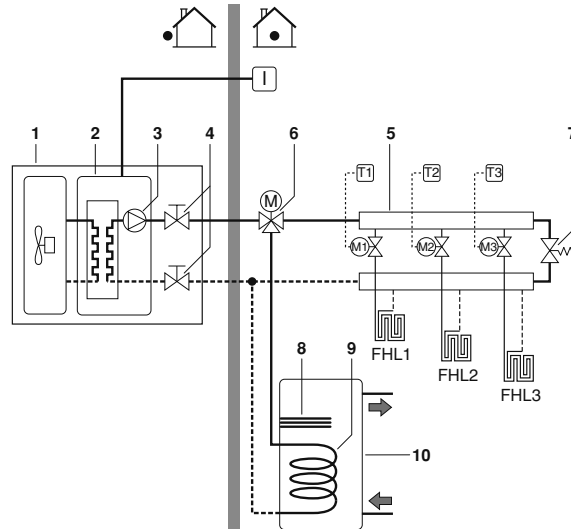

- | | | | |
|---|----------------------------------|---------|--|
| 1 | Unit | 9 | Heat exchanger coil |
| 2 | Heat exchanger | 10 | Domestic hot water tank (optional) |
| 3 | Pump | FHL1..3 | Floor heating loop (field supply) |
| 4 | Shut-off valve | T1..3 | Individual room thermostat (field supply) |
| 5 | Collector (field supply) | M1..3 | Individual motorised valve to control loop FHL1 (field supply) |
| 6 | Motorised 3-way valve (optional) | I | User interface |
| 7 | By-pass valve (field supply) | | |
| 8 | Booster heater | | |

Pump operation

With no thermostat connected to the unit (1), the pump (3) can be configured to operate either as long as the unit is on, or until the required water temperature is reached.



NOTE Details on pump configuration can be found under "Pump operation configuration" on page 23.

Space heating

The unit (1) will operate to achieve the target leaving water temperature as set on the user interface.



When circulation in each space heating loop (FHL1..3) is controlled by remotely controlled valves (M1..3), it is important to provide a by-pass valve (7) to avoid the flow switch safety device from being activated.

The by-pass valve should be selected as such that at all time the minimum water flow as mentioned under "Water pipework" on page 13 is guaranteed.

Domestic water heating

When domestic water heating mode is enabled (either manually by the user, or automatically through a schedule timer) the target domestic hot water temperature will be achieved by a combination of the heat exchanger coil and the electrical booster heater.

When the domestic hot water temperature is below the user configured set point, the 3-way valve will be activated to heat the domestic water by means of the heat pump. In case of large domestic hot water demand or a high domestic hot water temperature setting, the booster heater (8) can provide auxiliary heating.


! It is possible to connect either a 2-wire or a 3-wire 3-way valve (6). Make sure to fit the 3-way valve correctly. For more details, refer to "Wiring the 3-way valve" on page 20.

NOTE The unit can be configured so that at low outdoor temperatures the domestic water is exclusively heated by the booster heater. This assures that the full capacity of the heat pump is available for space heating.

Details on domestic hot water tank configuration for low outdoor temperatures can be found under "Field settings" on page 25, field settings [5-02] to [5-04].

Application 3

Space cooling and heating application with a **room thermostat suitable for heating/cooling changeover** connected to the unit. Heating is provided through floor heating loops and fan coil units. Cooling is provided through the fan coil units only. Domestic hot water is provided through the domestic hot water tank which is connected to the unit.

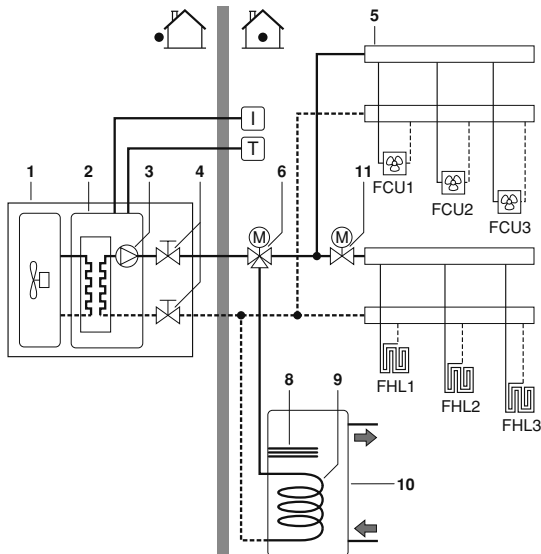

- | | | | |
|---|----------------------------------|----------|--|
| 1 | Unit | 10 | Domestic hot water tank |
| 2 | Heat exchanger | 11 | Motorised 2-way valve (field supply) |
| 3 | Pump | FCU1...3 | Fan coil unit (field supply) |
| 4 | Shut-off valve | FHL1...3 | Floor heating loop (field supply) |
| 5 | Collector (field supply) | T | Room thermostat with heating/cooling switch (optional) |
| 6 | Motorised 3-way valve (optional) | I | User interface |
| 8 | Booster heater | | |
| 9 | Heat exchanger coil | | |

Pump operation and space heating and cooling

According to the season, the customer will select cooling or heating on the room thermostat (T). This selection is not possible by operating the user interface.

When space heating/cooling is requested by the room thermostat (T), the pump will start operating and the unit (1) will switch to "heating mode"/"cooling mode". The unit (1) will start operating to achieve the target leaving cold/hot water temperature.

In case of cooling mode, the motorised 2-way valve (11) will close as to prevent cold water running through the floor heating loops (FHL).

! Make sure to connect the thermostat wires to the correct terminals (see "Connection of the thermostat cable" on page 20) and to configure the DIP switch toggle switches correctly (see "Room thermostat installation configuration" on page 23).

! Wiring of the 2-way valve (11) is different for a NC (normal closed) valve and a NO (normal open) valve! Make sure to connect to the correct terminal numbers as detailed on the wiring diagram.


The ON/OFF setting of the heating/cooling operation is done by the room thermostat and cannot be done by the user interface.

Domestic water heating

Domestic water heating is as described under "Application 2" on page 7.

Application 4

Space cooling and heating application **without a room thermostat connected to the unit**, but with a heating only room thermostat controlling the floor heating and a heating/cooling thermostat controlling the fan coil units. Heating is provided through floor heating loops and fan coil units. Cooling is provided through the fan coil units only.

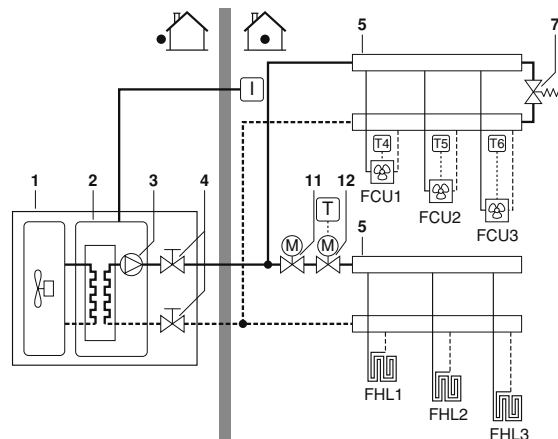

- | | | | |
|----|---|----------|--|
| 1 | Unit | 12 | Motorised 2-way valve for activation of the room thermostat (field supply) |
| 2 | Heat exchanger | FCU1...3 | Fan coil unit with thermostat (field supply) |
| 3 | Pump | FHL1...3 | Floor heating loop (field supply) |
| 4 | Shut-off valve | T | Heating only room thermostat (optional) |
| 5 | Collector (field supply) | T4..6 | Individual room thermostat for fan coil heated/cooled room (optional) |
| 7 | By-pass valve (field supply) | | |
| 11 | Motorised 2-way valve to shut off the floor heating loops during cooling operation (field supply) | | |

With no thermostat connected to the unit (1), the pump (3) can be configured to operate either as long as the unit is on, or until the required water temperature is reached.

NOTE Details on pump configuration can be found under "Pump operation configuration" on page 23.

Space heating and cooling

According to the season, the customer will select cooling or heating through the user interface.

The unit (1) will operate in cooling mode or heating mode to achieve the target leaving water temperature.

With the unit in heating mode, the 2-way valve (11) is open. Hot water is provided to both the fan coil units and the floor heating loops.

With the unit in cooling mode, the motorised 2-way valve (11) is closed to prevent cold water running through the floor heating loops (FHL).

! When closing several loops in the system by remotely controlled valves, it might be required to install a by-pass valve (7) to avoid the flow switch safety device from being activated. See also "Application 2" on page 7.

! Wiring of the 2-way valve (11) is different for a NC (normal closed) valve and a NO (normal open) valve! Make sure to connect to the correct terminal numbers as detailed on the wiring diagram.

The ON/OFF setting of the heating/cooling operation is done by the user interface.

Application 5

Space heating with an auxiliary boiler (alternating operation)

Space heating application by either the Daikin unit or by an auxiliary boiler connected in the system. The decision whether either the E(D/B)* unit or the boiler will operate can be achieved by an auxiliary contact or an E(D/B)* indoor controlled contact.

The auxiliary contact can e.g. be an outdoor temperature thermostat, an electricity tariff contact, a manually operated contact, etc. See "Field wiring configuration A" on page 10.

The E(D/B)* unit controlled contact (also called 'permission signal for the auxiliary boiler") is determined by the outdoor temperature (thermistor located at the outdoor unit). See "Field wiring configuration B" on page 10.


Bivalent operation is only possible for space heating operation, **not** for the domestic water heating operation. Domestic hot water in such an application is always provided by the domestic hot water tank which is connected to the Daikin unit.

The auxiliary boiler must be integrated in the piping work and in the field wiring according to the illustrations below.




CAUTION

- Be sure that the boiler and the integration of the boiler in the system is in accordance with relevant local laws and regulations.
- Always install a 3-way valve, even if no domestic hot water tank is installed. This to ensure that the freeze protection function (see "[4-04] Freeze protection function" on page 28) can operate when the boiler is active.

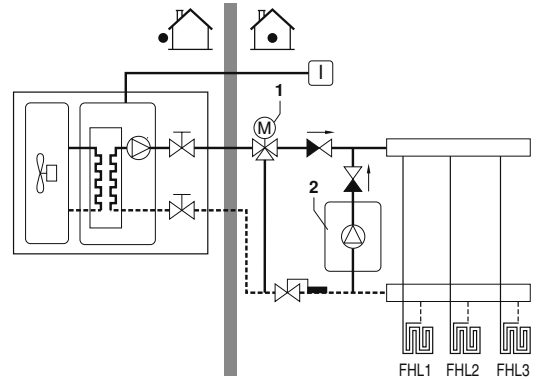


- 1 Motorised 3-way valve
- 2 Boiler

■ Daikin can not be put responsible for incorrect or unsafe situations in the boiler system.

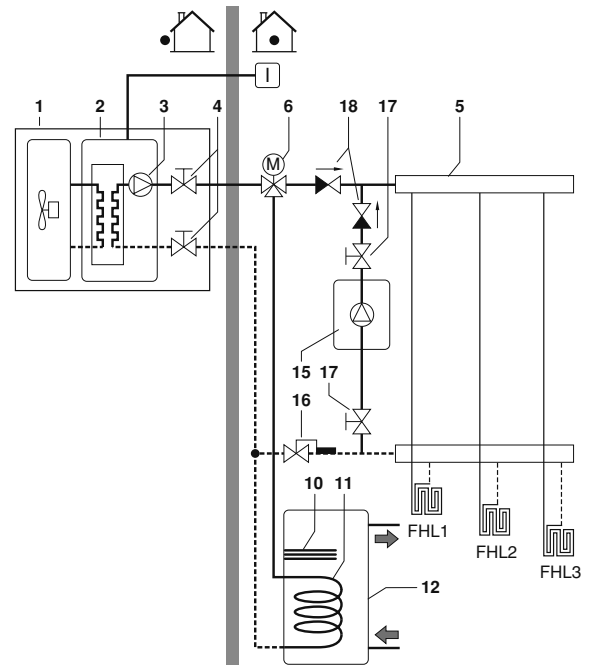


- | | |
|--|--|
| 1 Outdoor unit | 12 Domestic hot water tank (optional) |
| 2 Heat exchanger | 15 Boiler (field supply) |
| 3 Pump | 15 Aquastat valve (field supply) |
| 4 Shut-off valve | 16 Shut-off valve (field supply) |
| 5 Collector (field supply) | 17 Non-return valve (field supply) |
| 6 Motorised 3-way valve (delivered with the domestic hot water tank) | FHL1...3 Floor heating loop (field supply) |
| 10 Booster heater | |
| 11 Heat exchanger coil | |

Field wiring configuration A

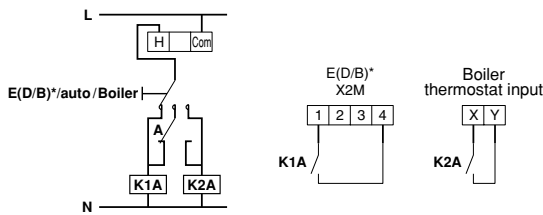

- Boiler thermostat input** Boiler thermostat input
- A** Auxiliary contact (normal closed)
- H** Heating demand room thermostat (optional)
- K1A** Auxiliary relay for activation of E(D/B)* unit (field supply)
- K2A** Auxiliary relay for activation of boiler (field supply)

Field wiring configuration B

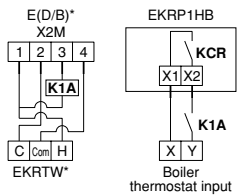

- Boiler thermostat input** Boiler thermostat input
- C** Cooling demand room thermostat (optional)
- H** Heating demand room thermostat (optional)
- Com** Common room thermostat (optional)
- K1A** Auxiliary relay for activation of boiler unit (field supply)
- KCR** Permission signal for the auxiliary boiler

Operation

■ **Configuration A**

When the room thermostat requests heating, either the E(D/B)* unit or the boiler starts operating, depending on the position of the auxiliary contact (A).

■ **Configuration B**

When the room thermostat requests heating, either the E(D/B)* unit or the boiler starts operating, depending on the outdoor temperature (status of "permission signal for the auxiliary boiler").

When the permission is given towards the boiler, the space heating operation by the E(D/B)* unit will be automatically switched off.

For more details see field setting [C-02~C-04].

NOTE



■ **Configuration A**

Make sure that auxiliary contact (A) has sufficient differential or time delay so as to avoid frequent changeover between the E(D/B)* unit and the boiler. If the auxiliary contact (A) is an outdoor temperature thermostat, make sure to install the thermostat in the shade, so that it is not influenced or turned ON/OFF by the sun.

■ **Configuration B**

Make sure that the bivalent hysteresis [C-04] has sufficient differential to avoid frequent changeover between the E(D/B)* unit and the boiler. As the outdoor temperature is measured via the outdoor unit, air thermistor make sure to install the outdoor unit in the shade, so that it is not influenced by the sun.

Frequent switching may cause corrosion of the boiler in an early stage. Contact the manufacturer of the boiler.

■ During heating operation of the E(D/B)* unit, the unit will operate so as to achieve the target leaving water temperature as set on the user interface. When weather dependent operation is active, the water temperature is determined automatically depending on the outdoor temperature.

During heating operation of the boiler, the boiler will operate so as to achieve the target leaving water temperature as set on the boiler controller.

Never set the target leaving water temperature set point on the boiler controller above 131°F (55°C).

■ Make sure to only have 1 expansion vessel in the water circuit. An expansion vessel is already premounted in the Daikin unit.

NOTE



Make sure to configure the DIP switch SS2-3 on the PCB of the E(D/B)* switchbox correctly. Refer to "Room thermostat installation configuration" on page 23.

For configuration B: Make sure to configure the field settings [C-02, C-03 and C-04] correctly. Refer to "Bivalent operation" on page 33.



CAUTION

Make sure that return water to the E(D/B)* heat exchanger never exceeds 131°F (55°C).

For this reason, never put the target leaving water temperature set point on the boiler controller above 131°F (55°C) and install an aquastat^(a) valve in the return water flow of the E(D/B)* unit.

Make sure that the non-return valves (field supply) are correctly installed in the system.

Make sure that the room thermostat (th) is not frequently turned ON/OFF.

Daikin shall not be held liable for any damage resulting from failure to observe this rule.

(a) The aquastat valve must be set for 131°F (55°C) and must operate to close the return water flow to the unit when the measured temperature exceeds 131°F (55°C). When the temperature drops to a lower level, the aquastat valve must operate to open the return water flow to the E(D/B)* unit again.



Manual permission towards the E(D/B)* unit on the boiler.

In case only the E(D/B)* unit should operate in space heating mode, disable the bivalent operation via setting [C-02].

In case only the boiler should operate in space heating mode, increase the bivalent ON temperature [C-03] to 77°F (25°C).


Application 6

Space heating with room thermostat application through floor heating loops and fan coil units. The floor heating loops and fan coil units require different operating water temperatures.

The floor heating loops require a lower water temperature in heating mode compared to fan coil units. To achieve these two set points, a mixing station is used to adapt the water temperature according to requirements of the floor heating loops. The fan coil units are directly connected to the unit water circuit and the floor heating loops after the mixing station. The control of this mixing station is not done by the unit.

The operation and configuration of the field water circuit is the responsibility of the installer.

Daikin only offers a dual set point control function. By this function two set points can be generated. Depending on the required water temperature (floor heating loops and/or fan coil units are required) first set point or second set point can be activated.

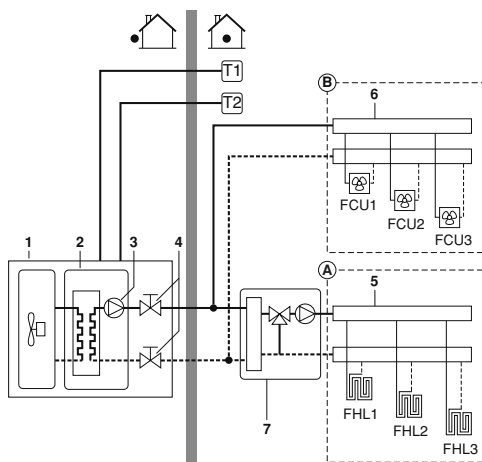

- 1 Outdoor unit
- 2 Heat exchanger
- 3 Pump
- 4 Shut-off valve
- 5 Collector zone A (field supply)
- 6 Collector zone B (field supply)
- 7 Mixing station (field supply)
- T1 Room thermostat for zone A (optional)
- T2 Room thermostat for zone B (optional)
- FCU1...3 Fan coil unit (optional)
- FHL1...3 Floor heating loop (field supply)

! The advantage of the dual set point control is that the heat pump will/can operate at the lowest required leaving water temperature when only floor heating is required. Higher leaving water temperatures are only required in case fan coil units are operating. This results in a better performance of the heat pump.

Pump operation and space heating

When the room thermostat for the floor heating loop (T1) and the fan coil units (T2) are connected to the indoor unit, the pump (4) will operate when there is a request for heating from T1 and/or T2. The outdoor unit will start operating to achieve the target leaving water temperature. The target leaving water temperature depends on which room thermostat is requesting heating.

	Set point	Field setting	Thermo status			
Zone A	First	UI	ON	OFF	ON	OFF
Zone B	Second	[7-03]	OFF	ON	ON	OFF
Resulting water temperature		UI	[7-03]	[7-03]		—
Result pump operation			ON	ON	ON	OFF

When the room temperature of both zones is above the thermostat set point, the outdoor unit and pump will stop operating.


- NOTE**
- Make sure to connect the thermostat wires to the correct terminals (see "Overview of the unit" on page 11).
 - Make sure to configure the field settings [7-02], [7-03] and [7-04] correctly. Refer to "Dual set point control" on page 30.
 - Make sure to configure the DIP switch SS2-3 on the PCB of the E(D/B) switch box correctly. Refer to "Room thermostat installation configuration" on page 23.

- NOTE**
- The request signals for space heating can be implemented in two different ways (installer choice).
 - Thermo ON/OFF signal from room thermostat
 - Status signal (active/not active) from the mixing station
 - It is the installers responsibility to make sure no unwanted situations can occur (e.g. too high water temperatures towards floor heating loops, etc.)
 - Daikin does not offer any type of mixing station. Dual set point control only provides the possibility to use two set points.
 - When only zone A request heating, zone B will be fed with water at a temperature equal to the first set point. This can lead to unwanted heating of zone B.
 - When only zone B request heating, the mixing station will be fed with water at a temperature equal to the second set point. Depending on the control of the mixing station, the floor heating loop can still receive water at a temperature equal to set point of the mixing station.

! Be aware that the actual water temperature through the floor heating loops depends on the control and setting of the mixing station.

OVERVIEW OF THE UNIT

Opening the unit

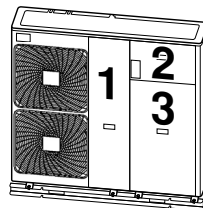

- Door 1 gives access to the compressor compartment and electrical parts
- Door 2 gives access to the electrical parts of the hydraulic compartment
- Door 3 gives access to the hydraulic compartment

! Switch off all power supply — i.e. unit power supply and backup heater and domestic hot water tank power supply (if applicable) — before removing doors 1 and 2.

! Parts inside the unit can be hot.

12. Installation - Monobloc

12.1 Installation Location

- The equipment is not intended for use in a potentially explosive atmosphere.
- Choose a place solid enough to bear the weight and vibration of the unit, where operation sounds will not be amplified.
- Choose a location where the hot/cold air discharged from the unit and the operation sounds will not be bothersome to neighbors or users.
- Avoid places such as bedrooms so that operation sounds are not a problem.
- Allow sufficient space for carrying the unit into and out of the site.
- Ensure there is sufficient space for air passage and a lack of obstructions around the air inlet and the air outlet.
- The site must be free from the possibility of flammable gas leakage in any nearby area.
- Install units, power cable, and inter-unit cables at least 10 feet (3 m) away from televisions and radios to prevent interference.
- Depending on radio wave conditions, electromagnetic interference may still occur even if installed more than 10 ft. (3 m) away.
- In coastal areas or other places with salty atmosphere of sulfate gas, corrosion may shorten the life of the outdoor unit.
- Since condensate flows out of the outdoor unit, do not place anything under the unit that must be kept from moisture.

IN COLD CLIMATES:

- To prevent exposure to wind, install the outdoor unit with its suction side facing the wall.
- Never install the outdoor unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, install a baffle plate on the air discharge side of the outdoor unit.
- Unit should be installed with a minimum of 4" (10 cm) free space below the unit's bottom plate at all condition, e.g., heavy snowfall (construct a pedestal if necessary).
- In heavy snowfall areas, it is very important to select an installation site where the snow will not affect the unit. If lateral snowfall is possible, make sure the heat exchanger coil is not affected by the snow (construct a lateral canopy if necessary). See Figure 1:



- 1 Construct a large canopy.
- 2 Construct a pedestal.
Install the unit high enough off the ground to prevent burying in snow.

12.2 Installation Space

A. NON STACKED INSTALLATION

Obstacle	A	B1	B2	C	D1	D2	E	L1/L2
✓	≥4 [100]	≥4 [100]	≥4 [100]	≥4 [100]				
✓	≥4 [100]	≥4 [100]	≥4 [100]	≥4 [100]				
✓	≥6 [150]	≥6 [150]	≥6 [150]	≥6 [150]				
✓		≥20 [500]			≥20 [500]			
✓		≥4 [100]			≥20 [500]			
✓		≥4 [100]			≥20 [500]			
✓	L1<L2				≥30 [750]			
✓	L2<L1				≥40 [1000]			
✓	L1<L2				L1<L2			0<L1<L2/2H 0<L1<L2/2H
✓	L2<L1				L2<L1			0<L2<L1/2H 1/2H<L2<L1/2H
✓		≥8 [200]	≥12 [300]		≥40 [1000]			
✓		≥8 [200]	≥12 [300]		≥40 [1000]			
✓			≥20 [500]		≥40 [1000]			
✓	L1<L2				≥40 [1000]			
✓	L2<L1				≥60 [1500]			0<L2<L1/2H 1/2H<L2<L1/2H
✓	L1<L2				≥40 [1000]			
✓	L2<L1				≥50 [1250]			0<L1<L1/2H 1/2H<L1<L1/2H
✓		≥10 [250]	≥12 [300]		L1<L2			
✓		≥10 [250]	≥12 [300]		L2<L1			
✓		≥10 [250]	≥12 [300]		≥60 [1500]			0<L2<L1/2H 1/2H<L2<L1/2H

B. STACKED INSTALLATION

1. OBSTACLES EXIST IN FRONT OF THE OUTLET SIDE

2. OBSTACLES EXIST IN FRONT OF THE AIR INLET

LEGEND (Unit: inch (mm))

Discharge side obstacle
 Left side obstacle
 Right side obstacle
 Top side obstacle
 Obstacle is present

This situation is not allowed

- In these cases, close bottom of the installation frame to prevent discharged air from being bypassed
- In these cases, only 2 units can be installed

Do not stack more than one unit.
About 4 in. (100mm) is required as the dimension for laying the upper outdoor unit's drain pipe.
Get the portion A sealed so that air from the outlet does not bypass.

C. MULTIPLE-ROW INSTALLATION


1. INSTALLATION OF ONE UNIT PER ROW

2. INSTALLING MULTIPLE UNITS (2 units or more) IN LATERAL CONNECTION PER ROW

Relation of dimensions of H, A and L are shown in the table below.

L	H	A
0<L<1/2H	10 [250]	
1/2H<L	12 [300]	
H<L		Installation not allowed

13. Hydronic Performance - Monobloc


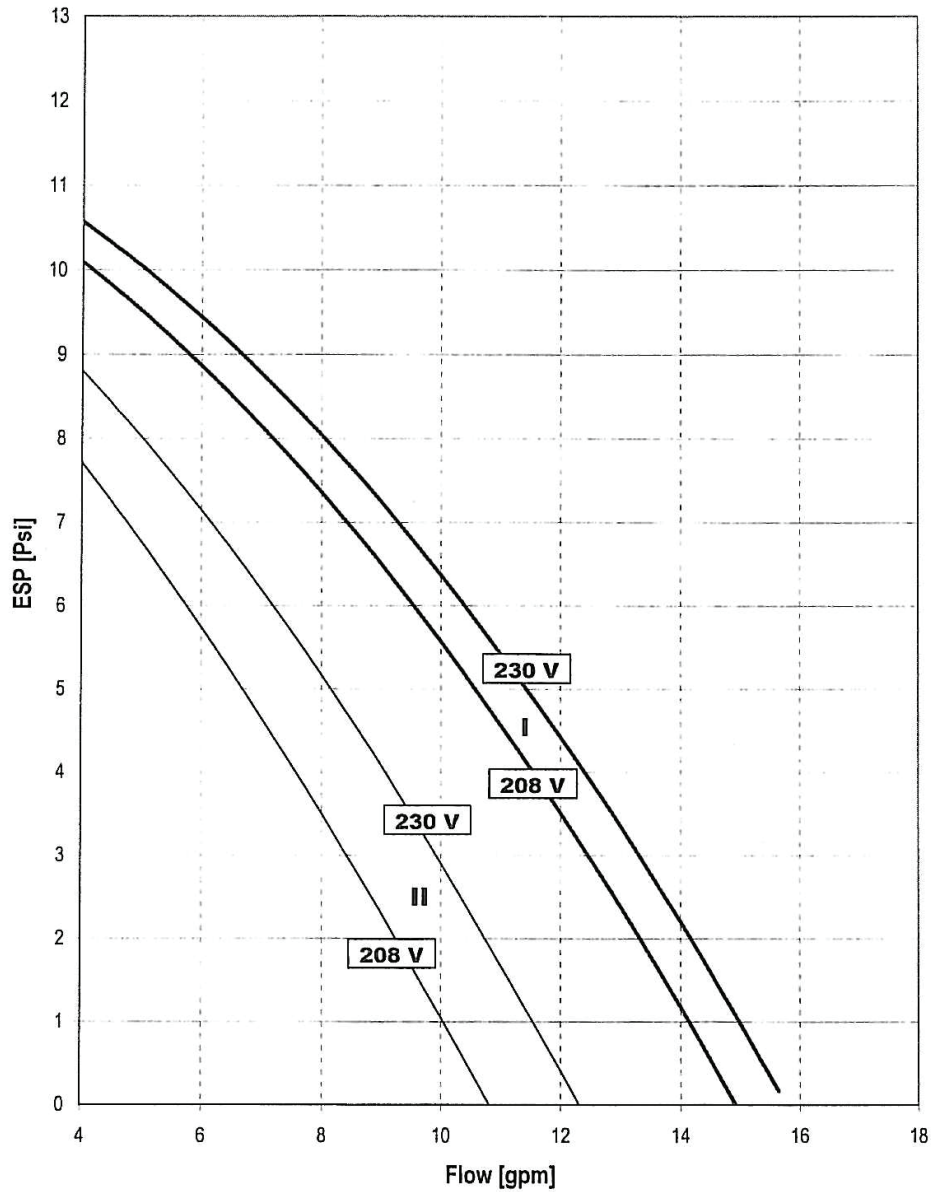


I high speed
 II medium speed
 ESP : external static pressure
 Flow : waterflow through the unit

IMPERIAL UNITS OF MEASURE


Caution :
 Selecting a flow outside the curves can cause damage to or malfunction of the unit. See also minimum and maximum allowed water flowrange in the technical specifications.

14. Glycol Correction Factors-Power Input & Capacity

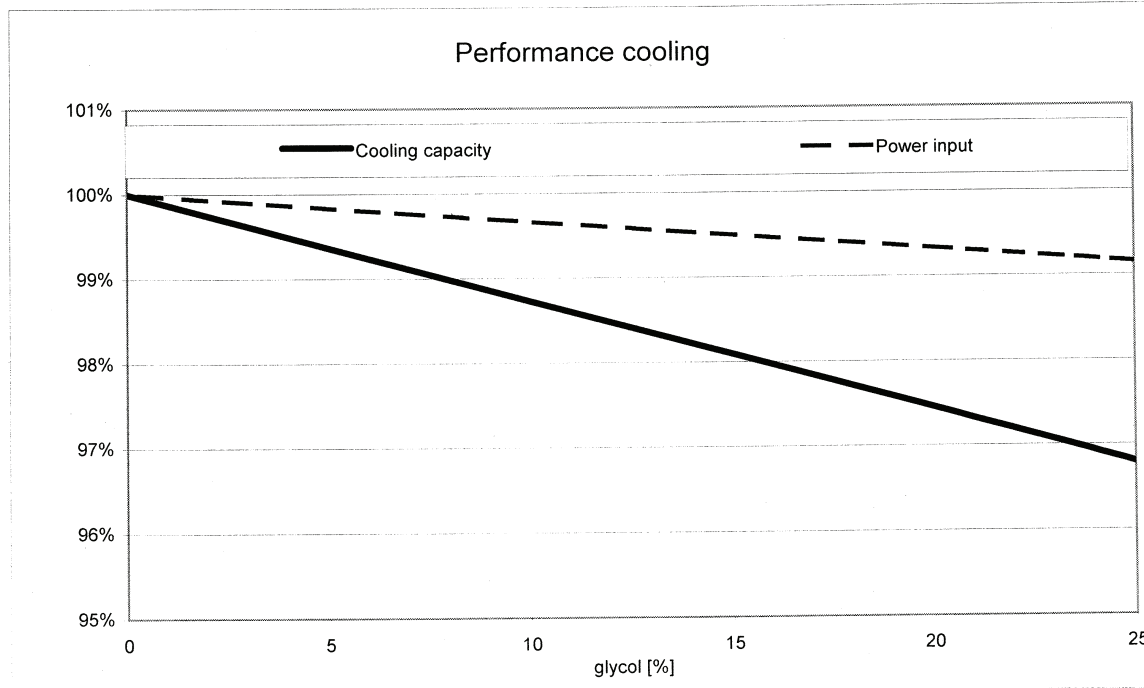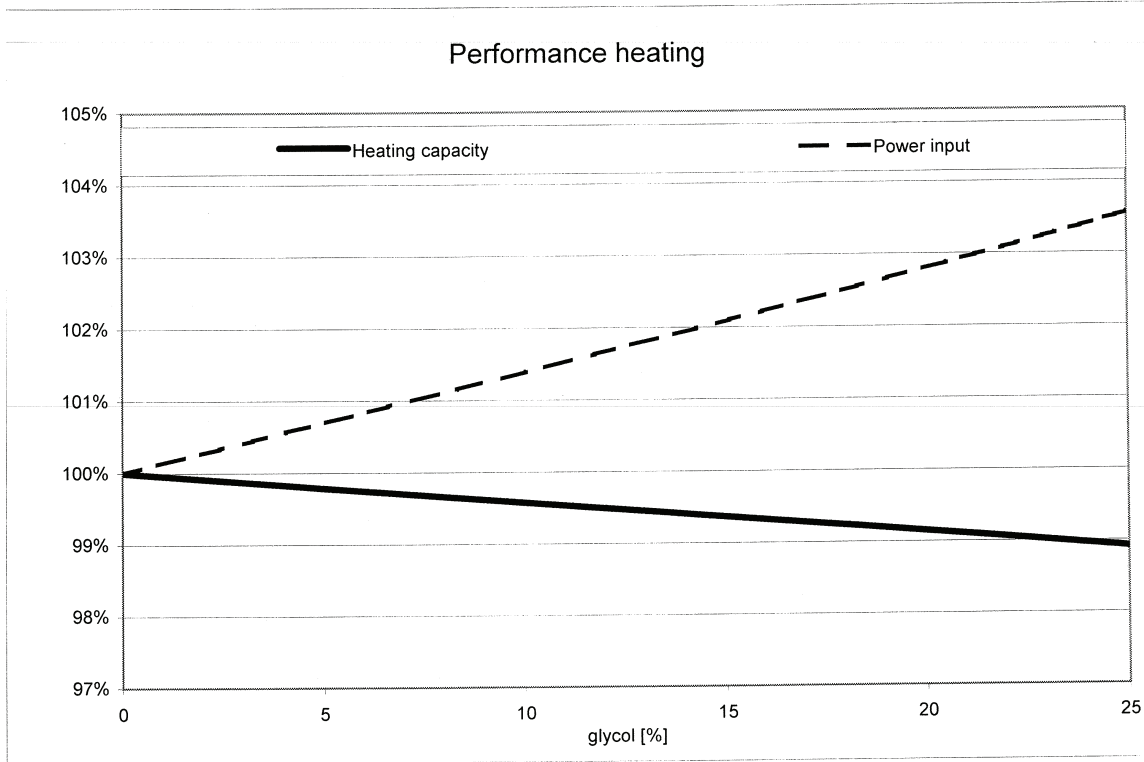


15. Glycol Correction Factors - Flow Rate & Pressure Drop

I Water
II Water / propylene glycol (25%) at 50°F
III Water / propylene glycol (25%) at 35°F
ESP: External Static Pressure
Flow: Waterflow through the unit

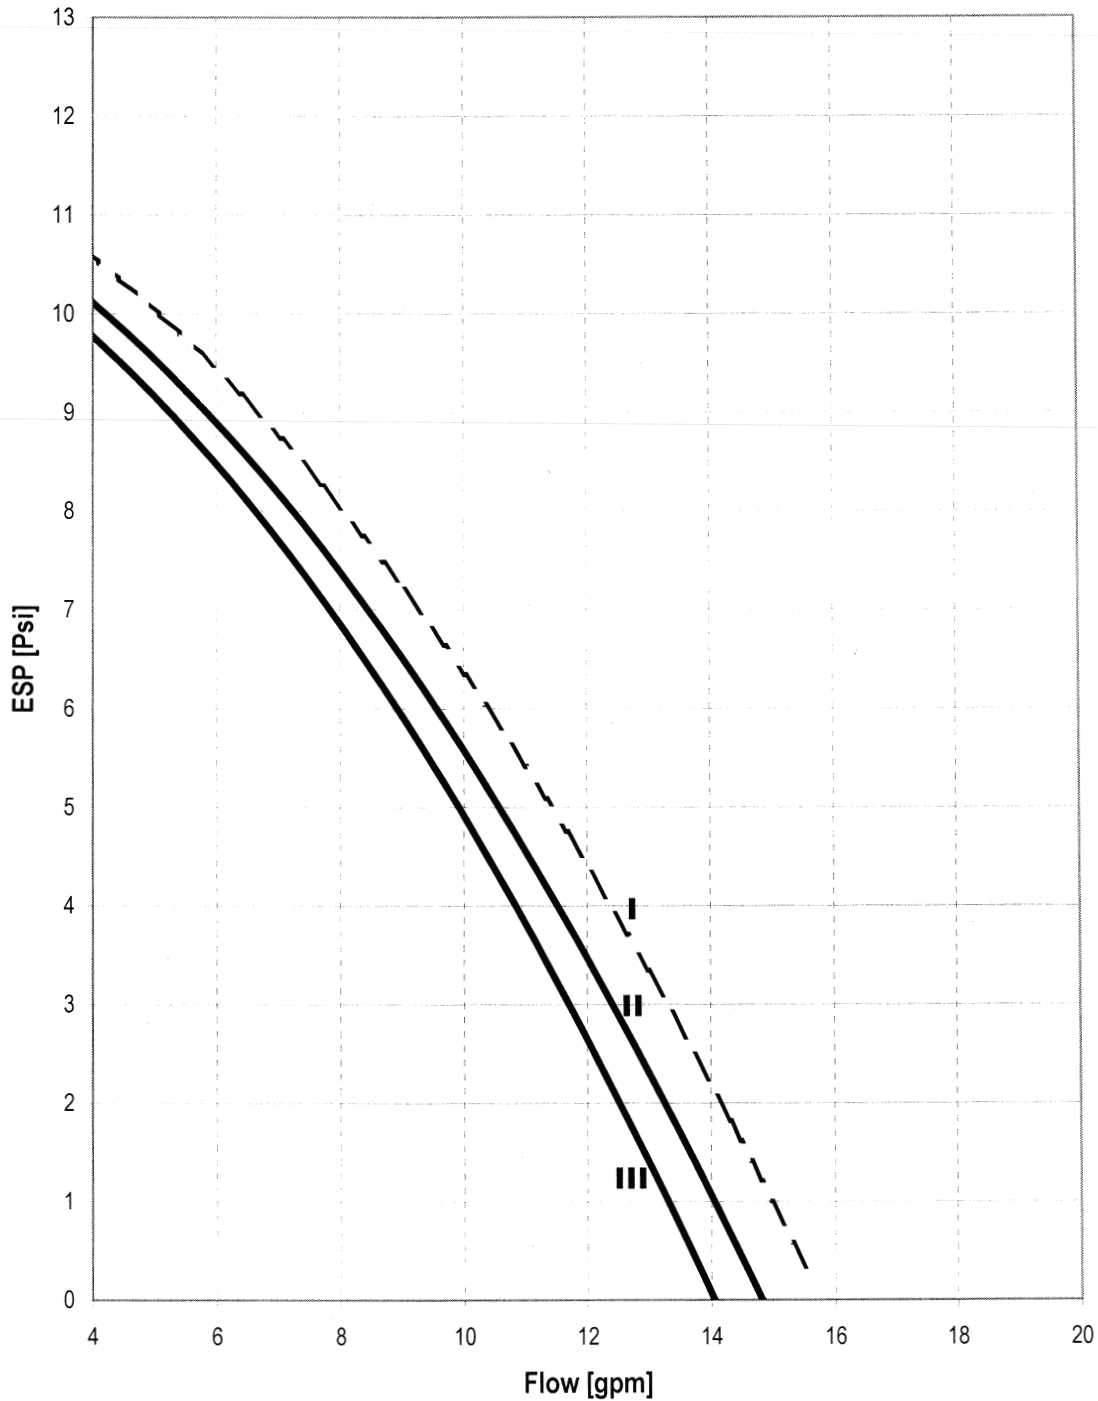

16. Operation Range - Monobloc

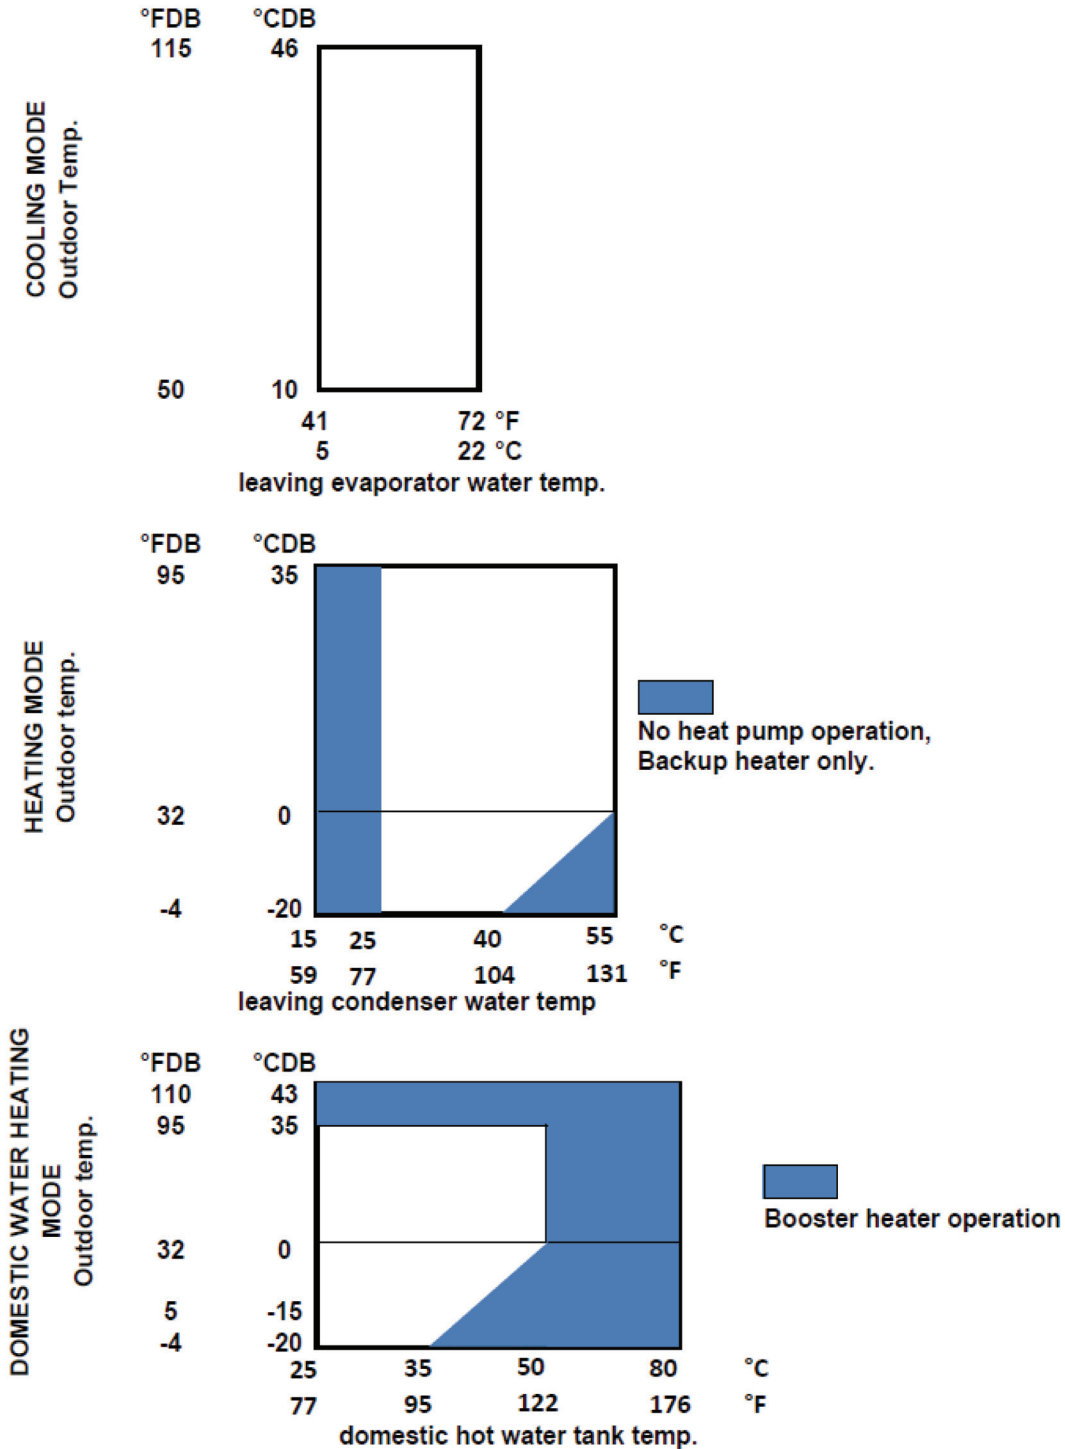

1. Domestic Hot Water Tank

1.1 Features

- Stainless steel domestic hot water tank & heat exchanger
- Integrated 3kW electric booster heater
- Two sizes (50 gal & 80 gal)
- 3-way valve included



Domestic Hot Water (DHW) Tank

The EKHWS domestic hot water tank with integrated 3 kW electric booster heater can be connected to both the split system hydrobox or monobloc. The domestic hot water tank is available in two sizes: 50 gallon (200 liter) or 80 gallon (300 liter). These domestic hot water tanks are for floor-standing indoor installations.



2. Specifications - DHW

2-1 TECHNICAL SPECIFICATIONS				EKHWS050BA3VJU	EKHWS080BA3VJU
Casing	Color		Neutral white		
	Material		Epoxy-coated mild steel		
Dimensions	Packing	Height	in (mm)	47-1/4 (1,200)	65 (1,650)
		Width	in (mm)	23-5/8 (600)	23-5/8 (600)
		Depth	in (mm)	23-5/8 (600)	23-5/8 (600)
	Unit	Height	in (mm)	45-3/8 (1,150)	63 (1,600)
		Width	in (mm)	22-7/8 (580)	22-7/8 (580)
		Depth	in (mm)	22-7/8 (580)	22-7/8 (580)
Weight	Unit	lb (kg)	99.2 (45)	130 (59)	
	Packed Unit	lb (kg)	112.4 (51)	145.5 (66)	
Packing	Material		EPS		
	Weight		Carton		
Main components	Tank	Water volume	gal (l)	50 (200)	80 (300)
		Material		Stainless steel 316LSS	
	Max. temperature	°F (°C)	185 (85)	185 (85)	
	Max. water pressure	PSI (bar)	145 (10)	145 (10)	
Tank	Insulation	Material		Polyurethane foam	
		Min. thickness	in (mm)	1-5/8 (40)	1-5/8 (40)
Main components	Heat exchanger	Quantity		1	1
		Material		Stainless steel 316LSS	
	Booster heater	Quantity		1	1
		Capacity	BTU/hr (kW)	10,255 (3)	10,255 (3)
	3-Way Valve	Coefficient of flow at 14.5 PSI (1 bar)	gpm (m ³ /h)	44 (10)	44 (10)
		Inlet	inch	Rp1	
Outlet		inch	2xRp1		
Temperature sensor	Cable length		ft (m)	39.4 (12)	39.4 (12)
Piping connections	Water inlet H/E Diameter		inch (BSPP)	G 3/4 (female)	
	Water outlet H/E Diameter		inch (BSPP)	G 3/4 (female)	
	Cold water in Diameter		inch (BSPP)	G 3/4 (female)	
	Hot water out Diameter		inch (BSPP)	G 3/4 (female)	
	Recirculation connection		inch (BSPP)	G 3/4 (female)	

2-2 ELECTRICAL SPECIFICATIONS				EKHWS050BA3VJU	EKHWS080BA3VJU	
Unit	Power Supply	Phase		1~	1~	
		Frequency		Hz	60	60
		Voltage		V	208/230	208/230
	Current	Minimum Circuit Amps (MCA)		A	14.3	14.3
		Maximum Overcurrent Protection (MOP)		A	20	20

3. Domestic Hot Water Basic Performance Overview

The Daikin Altherma heat pump in combination with the optional domestic hot water tank provides hot water for household usage (Altherma TW DHW).

The following data provides information to select the proper sized domestic hot water tank to ensure maximum comfort and efficiency.

(1) Domestic hot water volume:

The volume of hot water available for domestic usage depends on the physical volume of the tank, the domestic hot water setpoint temperature, and the temperature spreading in the tank. Therefore the *equivalent hot water volume* is termed **EHWV**.

Definition EHWV = The volume of hot water available for domestic usage at a temperature of 104° (40°C), which is considered a comfortable domestic hot water temperature.

Tank	Setpoint temp °F (°C)	EHWV gal (l)	Usage Pattern		
50 gal (200 l)	131 (55)	42 (160)	Modest	Medium	High
	149 (65)	53 (200)	+	-	-
	167 (75)	63 (240)	++	+	-
80 gal (300 l)	131 (55)	78 (205)	++	++	-
	149 (65)	102 (385)	++	++	-
	167 (75)	102 (435)	++	++	+

Grade:
 ++ excessive availability of domestic hot water
 + sufficient availability of domestic hot water
 - temporary shortage of domestic hot water can occur

Usage Pattern:
 Modest: Daily demand up to 58 gal (220 l) = typical 2-person usage pattern
 Medium: Daily demand up to 85 gal (325 l) = typical 3 - 4 person usage pattern
 High: Daily demand up to 145 gal (550 l) = typical 4 - 6 person usage pattern

(2) Heat up time:

Definition of **Heat-Up Time**: The time required to reheat the domestic hot water tank to 131 F (55 C) after tapping a certain volume of hot water. NOTE: Changing the field settings (see installation manual) can influence the heat-up time.


Tank	Setpoint °F (°C)	Heat up time for 39 gal (150 l) bath (min)	Heat up time for 13 gal (50 l) bath (min)
50 gal (200 l)	131 (55)	60	40
80 gal (300 l)	131 (55)	50	30

Conditions for testing: Ta =44.6°CDB / 42.8°F WB, Troom =68°F, Tstart = 50°F, outdoor unit type: ERLQ054*VJU

Conditions for testing: Ta = 7°CDB / 6 °CWB, Troom = 20°C, Tstart = 10°C, outdoor unit type: ERLQ054*VJU

(3) Efficiency of domestic hot water production:








In the Daikin Altherma system, both the heat pump and the electric booster heater supply the energy to produce domestic hot water. The higher the portion of energy supplied by the heat pump, the more energy efficient the system is. Lowering the setpoint temperature increases the portion of energy supplied by the heat pump and thus the efficiency of the system. The percentage of energy supplied by the heat pump in relation to total energy need for domestic hot water is displayed in the following graph:

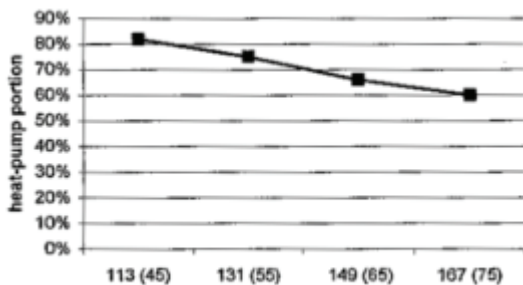

Conditions:
 Simulation of daily real-life conditions based upon medium usage.
 Outdoor temp: 44.6°F DB / 42.8° FWB (7°CDB / 6°CWB)
 Room temp: 68 F (20 C)
 Tank Type: 50 gal (200 l)
 Field Settings: Default field settings (see Installation Manual)


4. Dimensional Drawing & Center of Gravity - DHW

- 1 WATER MAINS IN G 3/4 (FEMALE)
- 2 WATER MAINS OUT G 3/4 (FEMALE)
- 3 THERMISTOR CONNECTION
- 4 FLOW (FROM EKHBH/X)** G 3/4 (FEMALE)
- 5 RETURN (TO EKHBH/X)** G 3/4 (FEMALE)
- 6 SWITCHBOX
- 7 THERMAL PROTECTOR
- 8 ANODE
- 9 CABLE ENTRY: POWER SUPPLY BOOSTER HEATER
- 10 CABLE ENTRY: THERMAL PROTECTION CABLE
- 11 RE-CIRCULATION CONNECTION G 3/4 (FEMALE)
- 12 CABLE ENTRY FOR EKSOLOH**
- 13 POWER SUPPLY FROM EKHBH/X
- 14 CABLE ENTRY FOR EKSOLOH**
- 15 POWER SUPPLY TO EKSOLOH** PUMP
- 16 THERMISTOR CONNECTION (SEE EKSOLOH**)

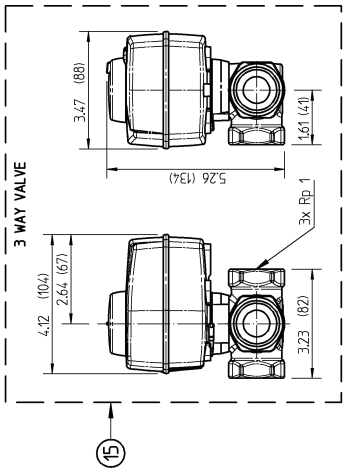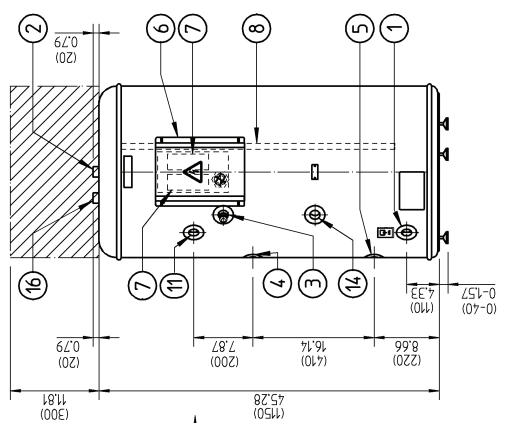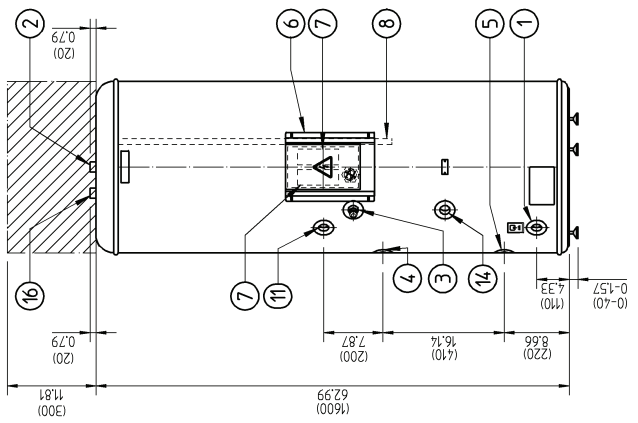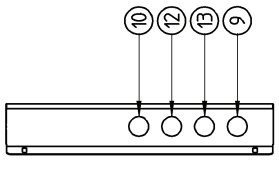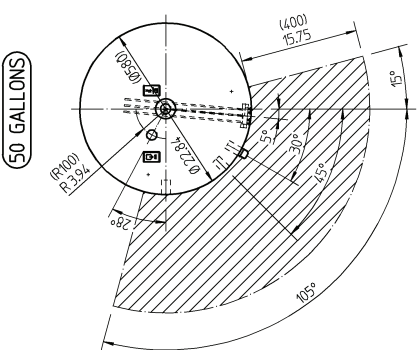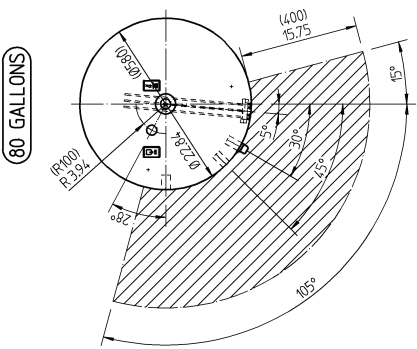

NOTE: UNIT OF MEASURE: inch (mm)
 REQUIRED SERVICE SPACE AROUND THE TANK

4.1 Domestic Hot Water Tank Summary


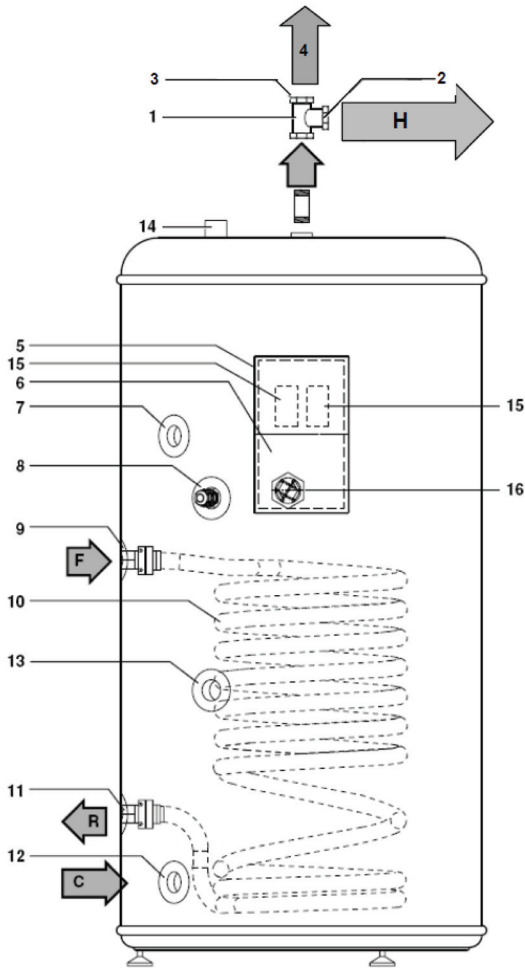


- 1 Field supply
 - 2 Hot water connection (H)
 - 3 Pressure relief valve connection
 - 4 Pressure relief valve (field supply)
 - 5 Electrical box
 - 6 Electrical box lid
 - 7 Recirculation hole
 - 8 Thermistor socket
 - 9 Flow inlet connection (F) (from the main unit)
 - 10 Heat exchanger coil
 - 11 Return outlet connection (R) (to the main unit)
 - 12 Cold water connection (C)
 - 13 Threaded thermistor hole for use with the solar kit option. Refer to the installation manual EKSOLHW*.
 - 14 Temperature and pressure relief valve connection
 - 15 Thermal protectors (Q2L, Q3L)
 - 16 Booster heater
- ➔ Flow direction


5. Three-Way Valve Summary

Connecting the 3-way valve

- 1 Refer to the figure below before making the connection. Values between brackets are the conversion from inch to mm.

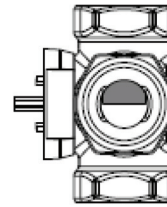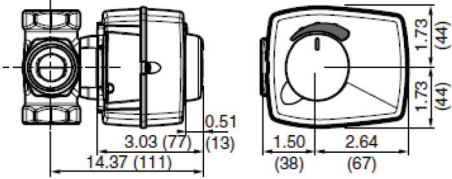


Installation in accordance with figure A and figure B

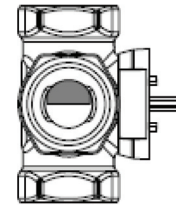

Installation in accordance with figure C and figure D


- 2 Installation position.

It is advised to connect the 3-way valve as close as possible to the unit. It can be installed in accordance with one of the following four configurations.

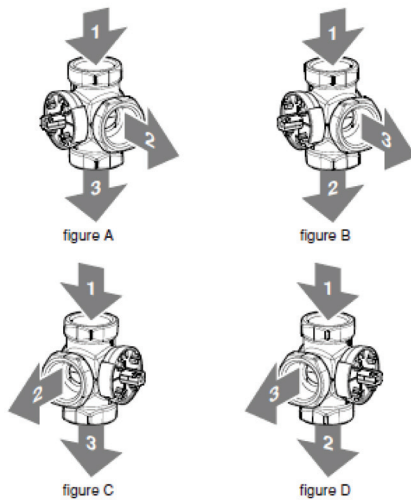

- 1 From indoor unit
- 2 To domestic hot water tank
- 3 To room heating

- 3 Unpack the 3-way valve body and 3-way valve motor. Verify that following accessories are provided with the motor.

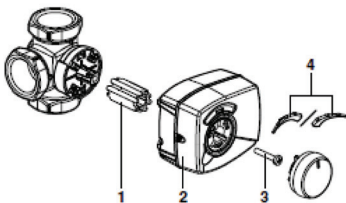


- 1 Sleeve
- 2 Valve motor cover
- 3 Screw
- 4 Scale

- 4 Install the 3-way valve body in the pipework.
 - Make sure the shaft will be positioned in such a way that the motor can be mounted and replaced.
 - Put the sleeve on the valve and turn the valve to the middle position of the scale plate. Check that the valve is positioned as in the figure below. It shall be blocking the outlet connection to the domestic hot water for 50% and the outlet connection to the room heating also for 50%.

NOTE If the valve is not positioned in this way before mounting the motor, the valve will give way to both domestic water and room heating during operation.


- 5 When installing in accordance with figure A or figure D, open the valve motor cover by loosening the screw and change the jumper so as to change the rotation direction of the valve. By default the jumper is factory set to apply for installation in accordance with figure B and figure C.

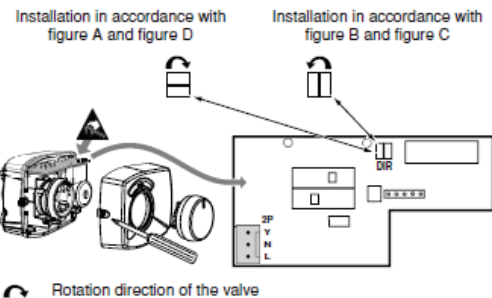

- 6 Push the motor on the motor sleeve. Make sure not to rotate the sleeve during this action, so as to maintain the valve position as set during step 4.




- 8 Put the scale on the valve as shown below.

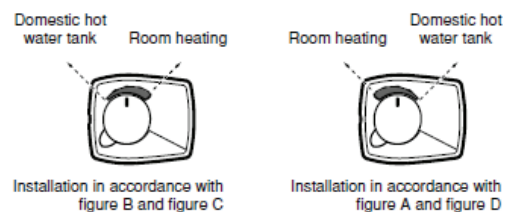

- 9 Make sure to firmly fix the power supply cord onto the 3-way valve body with a field supplied cable tie like in illustration below.



- 10 Perform the wiring in the unit in accordance with the following figure:

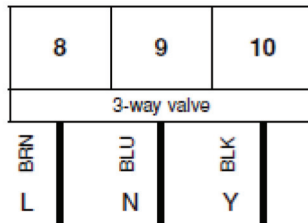

Refer also to the drawing on page 8.

- 11 Connect the water inlet and water outlet.
- 12 Connect the hot and cold water supply tubes.
- 13 Connect the pressure relief valve (field supply, opening pressure maximum 145 psi (10 bar)) and drain.



CAUTION

If a discharge pipe is connected to the pressure relief device it must be installed in a continuously downward direction and in a frost-free environment. It must be left open to the atmosphere.

Options

1. Solar Kit (EKSOLHWBAVJU)

1.1 Features

- Connectable to solar collectors
- Easy connection to EKHWS* DHW tanks
- Enables DHW heating by means of the sun




The solar kit is to be connected to the Daikin domestic hot water tank. The solar kit will enable domestic hot water to be heated by the sun when it is available. The solar kit integrates the field-supplied solar thermal panels with the pump station and the Daikin domestic hot water tank.




1.2 Specifications – Solar Kit

2-1 TECHNICAL SPECIFICATIONS				EKSOLHWBAVJU
Dimensions	Packing	Height	in (mm)	31-3/8 (795)
		Width	in (mm)	13-1/2 (340)
		Depth	in (mm)	11-5/8 (295)
	Unit	Height	in (mm)	30-3/8 (770)
		Width	in (mm)	12-1/8 (305)
		Depth	in (mm)	10-3/4 (270)
Weight	Unit	lb (kg)		17.6 (8)
	Packed Unit	lb (kg)		19.8 (9)
Packing	Material			Carton
	Weight		lb (kg)	1
Heat Exchanger	Type			Brazed plate
	Pressure drop	Solar side	PSI (kPa)	3.12 (21.5)
	Maximum inlet temperature	Solar side	°F (°C)	230°F (110°C)
	Capacity		W/K	1,400
	Logarithmic mean temperature difference (LMTD)		K	5
Pump	Type			water cooled
	Number of speeds			3
	Power input		W	46
Sound	Sound Pressure		dBA	27
Water circuit	Piping connections diameter		inch FBSP	3/4
Insulation material				EPP
Ambient temperature	Maximum		°F (°C)	95 (35)
	Minimum		°F (°C)	1
2-2 ELECTRICAL SPECIFICATIONS				EKSOLHWBAVJU
Unit	Power Supply	Phase		1~
		Frequency	Hz	60
		Voltage	V	208/230
Voltage range	Minimum			-10%
	Maximum			+10%
Power Supply Intake				indoor unit

1.3 Dimensional Drwg. & Center of Gravity - Solar Kit

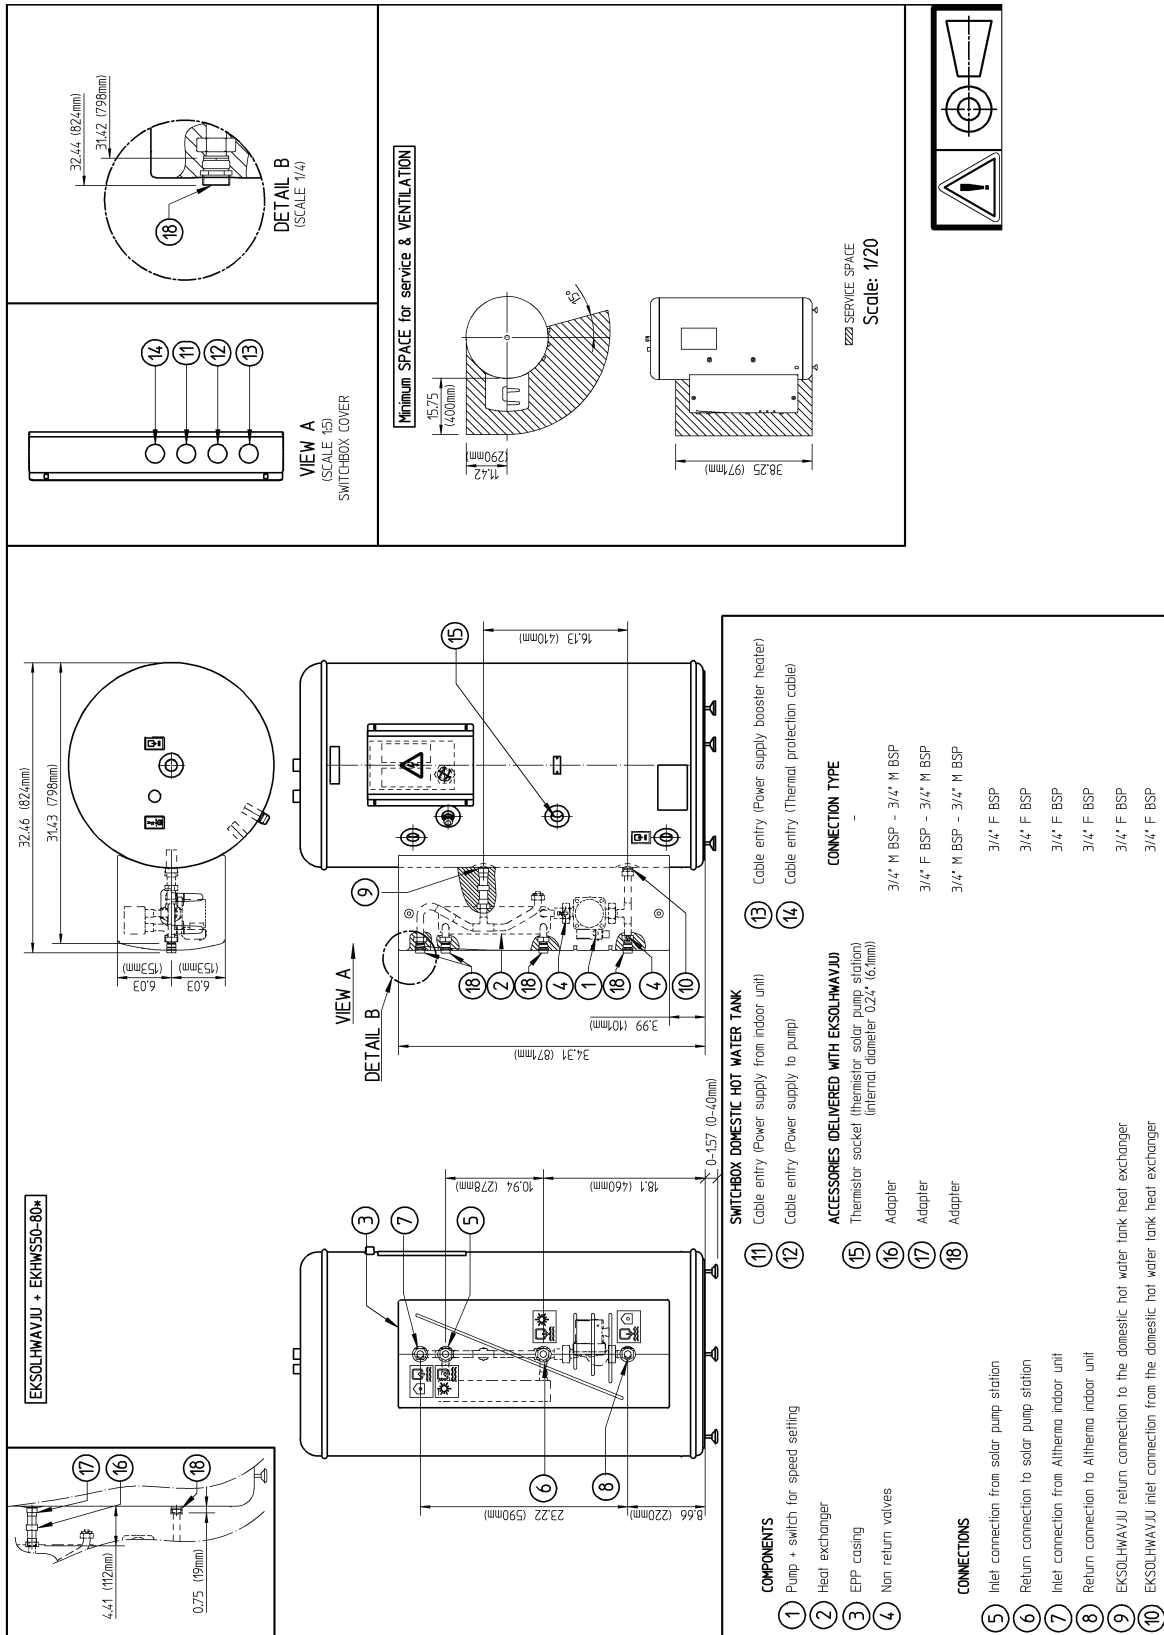

1.4 Piping Diagram - Solar Kit

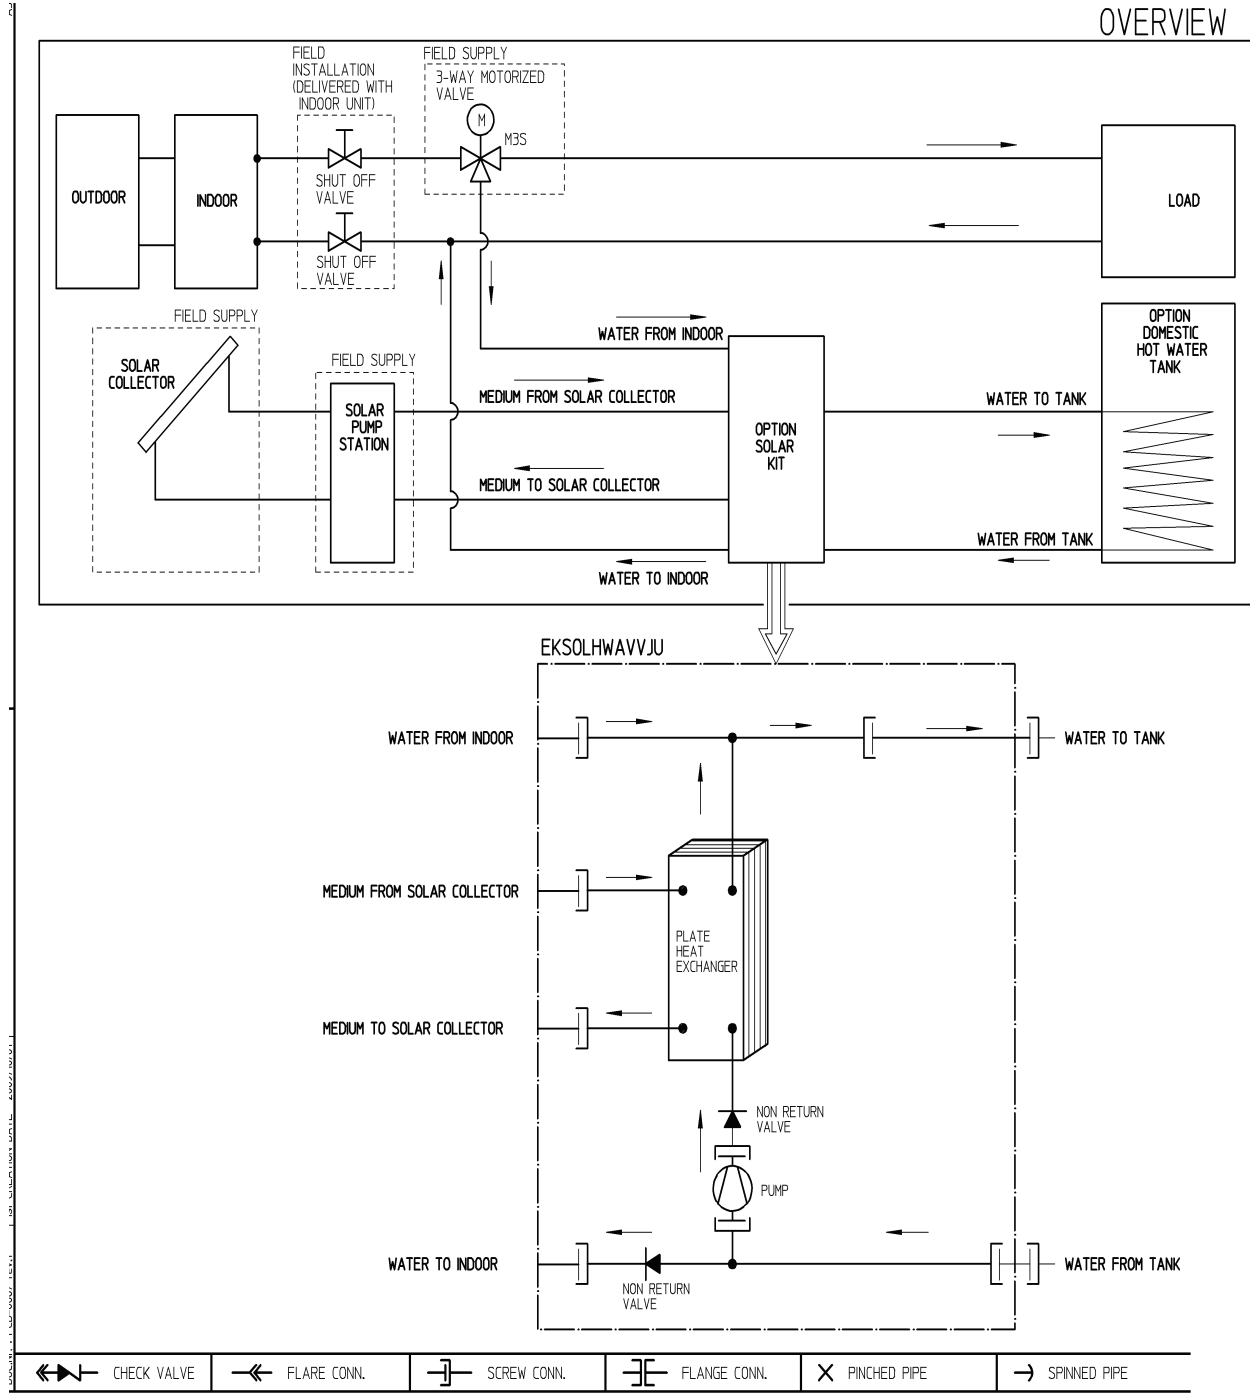

2. Room Thermostat – EKRTWA

Functions	Wired room thermostat EKRTWA
Heating only	✓
Heating and cooling	✓
Comfort function mode	✓
Reduced function mode	✓
Scheduled function mode	✓
Number of setpoint changes	12/day
Holiday function mode	✓
Off function	✓
Setpoint limitation	✓
Keylock function	✓




2.1 Specifications - Room Thermostat


4-1 TECHNICAL SPECIFICATIONS				EKRTW
Dimensions	Unit	Height	in (mm)	3-1/2 (87)
		Width	in (mm)	5 (125)
		Depth	in (mm)	1-3/8 (34)
	Packing	Height	in (mm)	2-5/8 (65)
		Width	in (mm)	7 (175)
		Depth	in (mm)	4 (100)
Weight	Unit	Net	oz (g)	7.6 (215)
		Gross	oz (g)	15.5 oz (440 g)
Packing	Material			Carton
	Weight		oz (g)	2 (55)
Ambient temperature	Storage		°F (°C)	-4~140 (-20~60)
	Operation		°F (°C)	32~122 (0~50)
Temperature setting range	Heating		°F (°C)	39.2~98.6 (4~37)
	Cooling		°F (°C)	39.2~98.6 (4~37)
Temperature setting resolution			°F (°C)	32.9 (0.5)
Clock				Yes
Regulation function				Proportional band
Features	Item	Heating only		
		Heating and cooling		
		Comfort function mode (= comfort setpoint)		
		Reduced function mode (=night setback setpoint)		
		Scheduled function mode(= schedule timer)		
		Number of setpoint changes		
	Note	12/day		
	Item	Holiday function mode		
		Off function (with integrated frost protection)		
		Setpoint limitation		
Keylock function				

4-2 ELECTRICAL SPECIFICATIONS				EKRTW
Power Supply	Voltage		battery powered 3* AA-LR6 (alkaline)	
Connection				Wired
Output relays				Maximum load 1A - 24 VAC


2.2 Dimensions - Room Thermostat

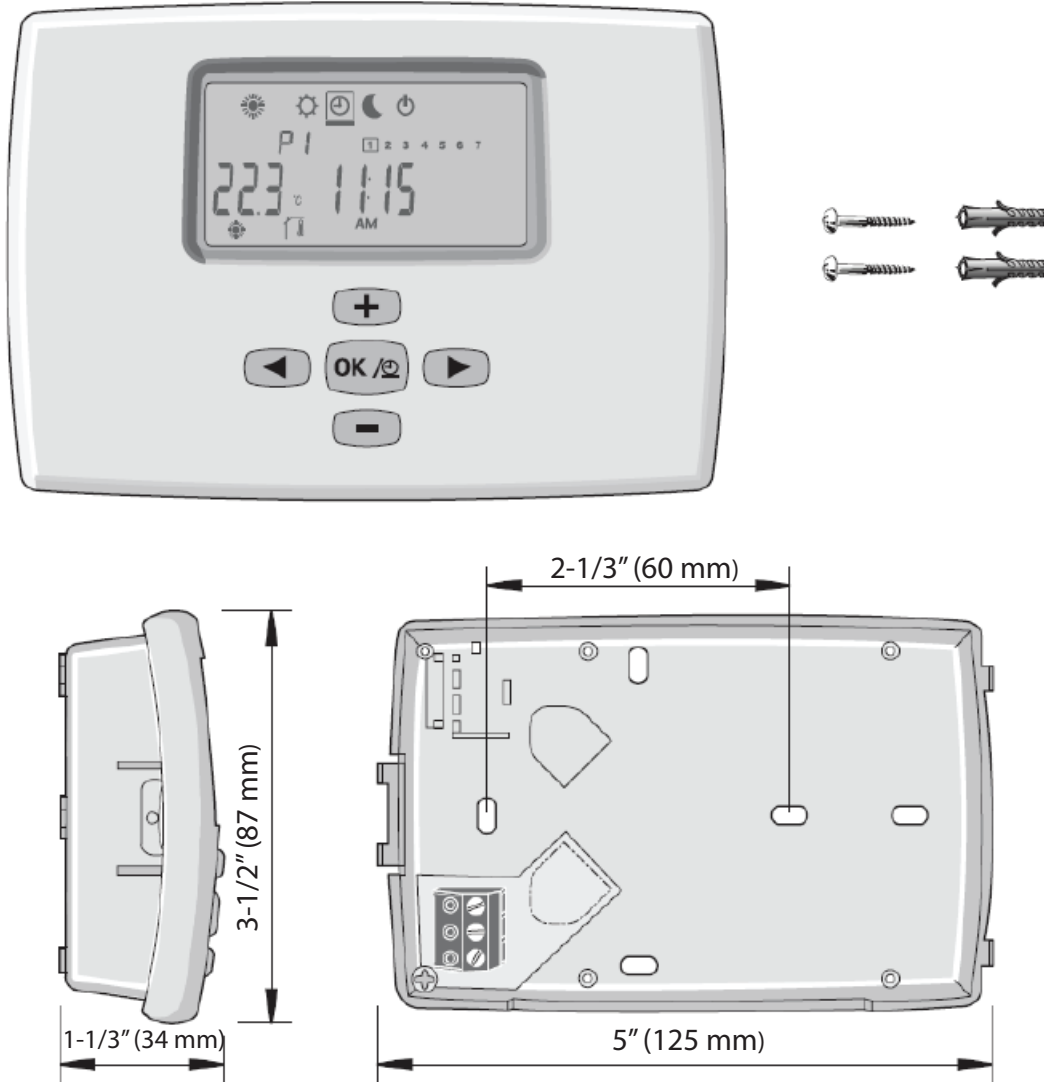

2.3 Application Example - Room Thermostat

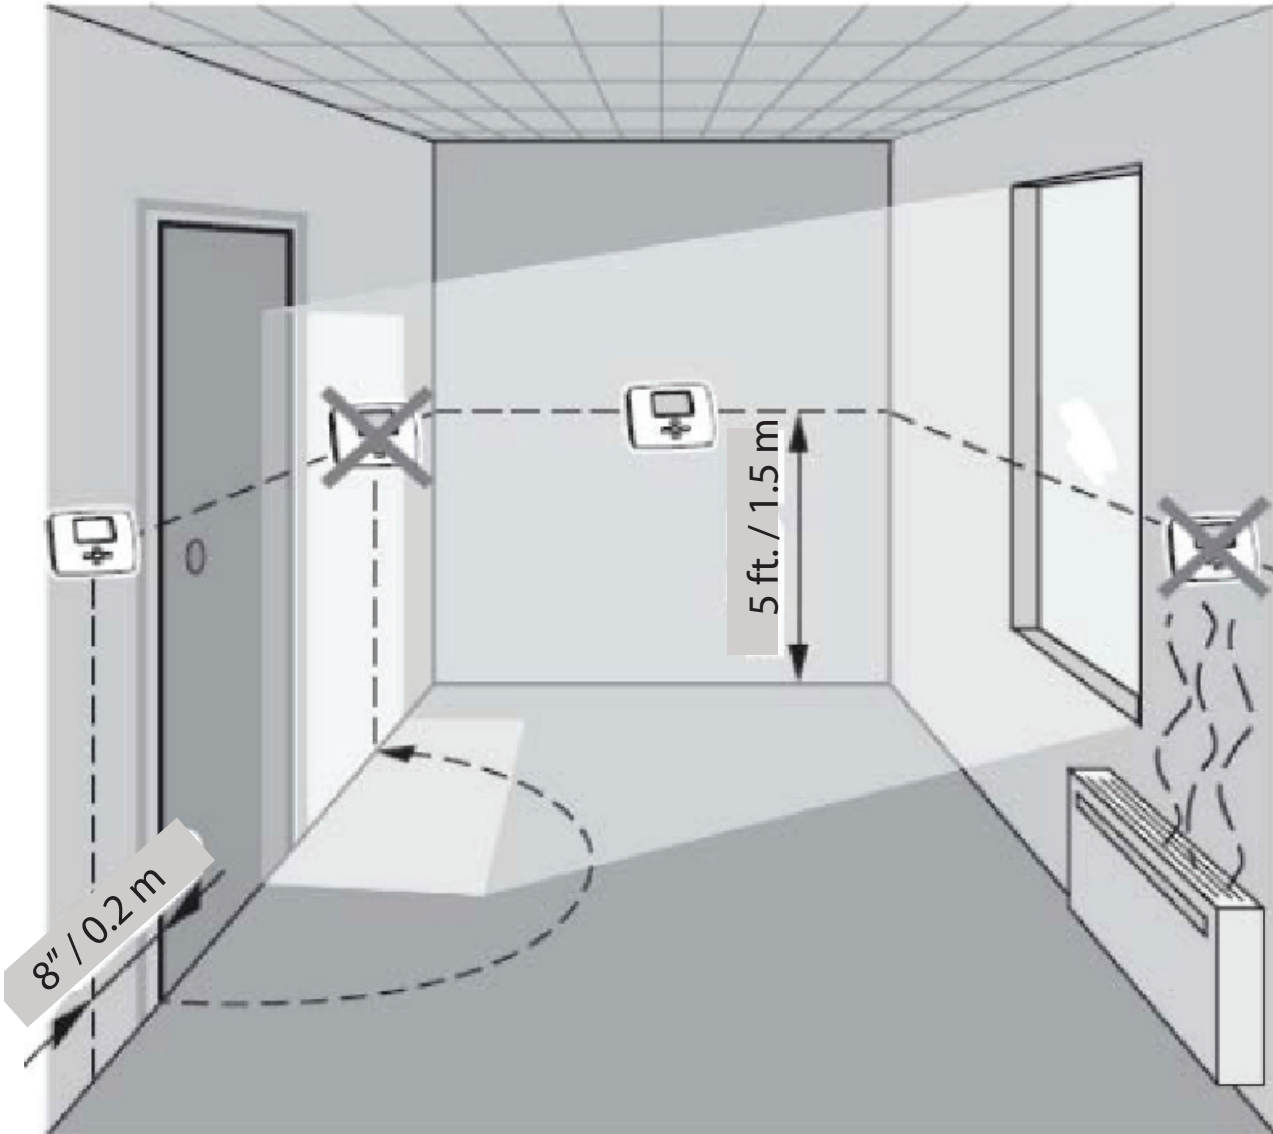

2.4 Wiring Connection - Room Thermostat

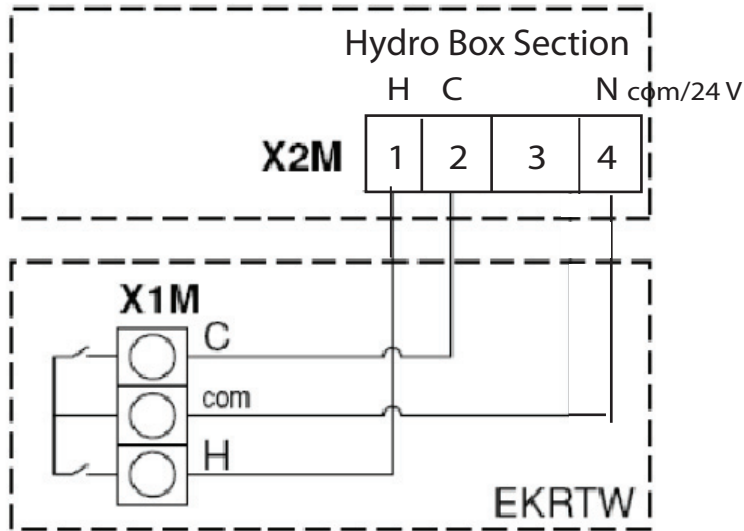

Use field supplied 18 gauge wires to connect thermostat to hydro box section terminals


H	Heating demand
C	Cooling demand

For heating-only applications, wire 2-C is not to be installed.

2.5 User Display - Room Thermostat

1	Cooling/heating mode selection
2	Comfort function mode
3	Schedule timer function mode
4	Reduced function mode
5	OFF function mode (with integrated frost protection)
6	Holiday function mode
7	Schedule timer setting menu
8	Date and clock setting menu
9	Manual override of the scheduled mode
10	Active wireless communication between thermostat and its receiver
11	Day of the week
12	Percentage sign for humidity indication
13	Not used.
14	Error occurred: intervention needed.
15	Active user or installation menu or error occurred. Refer to "Troubleshooting" on page 16.
16	Selected program (schedule timer) or code
17	Room temperature or setpoint (when flashing)

18	Thermostat ON (heating or cooling requested)
19	AM - PM indication
20	Room or floor temperature symbol. Floor temperature symbol is flashing if floor protection function is active.
21	Degrees type indication (°C or °F)
22	When manually overriding a schedule or when consulting the active scheduled setpoints by pressing \oplus or \ominus , the current and next setpoint together with the starting hour of the next action are displayed. <ul style="list-style-type: none"> • \uparrow is shown in case the next action setpoint goes up. • \downarrow is shown in case the next action setpoint goes down. • \updownarrow is shown in case the setpoints are equal.
23	Actual time
24	"Low batteries" indication
25	Key lock function
26	Humidity indication or indication of next scheduled temperature setpoint

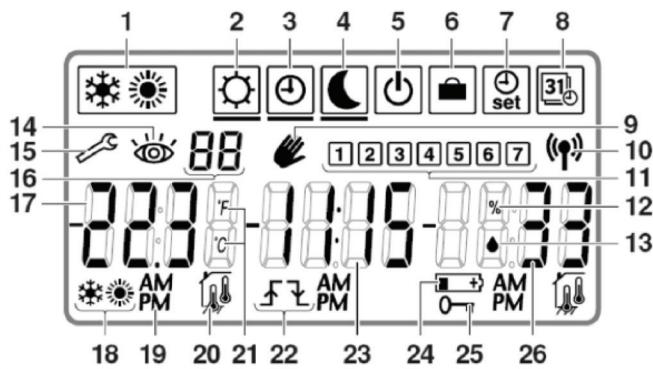

2.6 Functional Summary - Room Thermostat

- Room temperature control, base on the measurements of the internal sensor.
- Cooling and heating mode, with possibility to disable cooling function if not required.
- Automatic daylight-saving time change.
- Battery driven so no external power required.

The thermostats are preprogrammed with a set of 5 modes:

In the Comfort mode, the temperature is kept fixed at an adjustable set value. Default values are 70°F (21°C) in heating mode and 75°F (24°C) in cooling mode.


In the Reduced mode, the temperature is kept fixed at an adjustable set value. Default values are 62.5°F (17°C) in heating mode and 82.5°F (28°C) in cooling mode.

In the Off mode, the thermostat is still active as a frost protection which keeps the temperature above 39°F (4°C).


In the Holiday mode, the temperature is kept fixed at an adjustable set value. Default values are 57°F (14°C) in heating mode and 86°F (30°C) in cooling mode for a programmed duration.

In the Schedule mode, the temperature is adjusted in accordance with a pre-planned schedule of either of the preprogrammed standard schedules, or one of the 2 schedules the user can program on his own. One can also choose whether the programmed times are when the heat pump starts adjusting temperatures or at what time the temperatures are to be reached.

3. Condensate Kit – EKHBDP

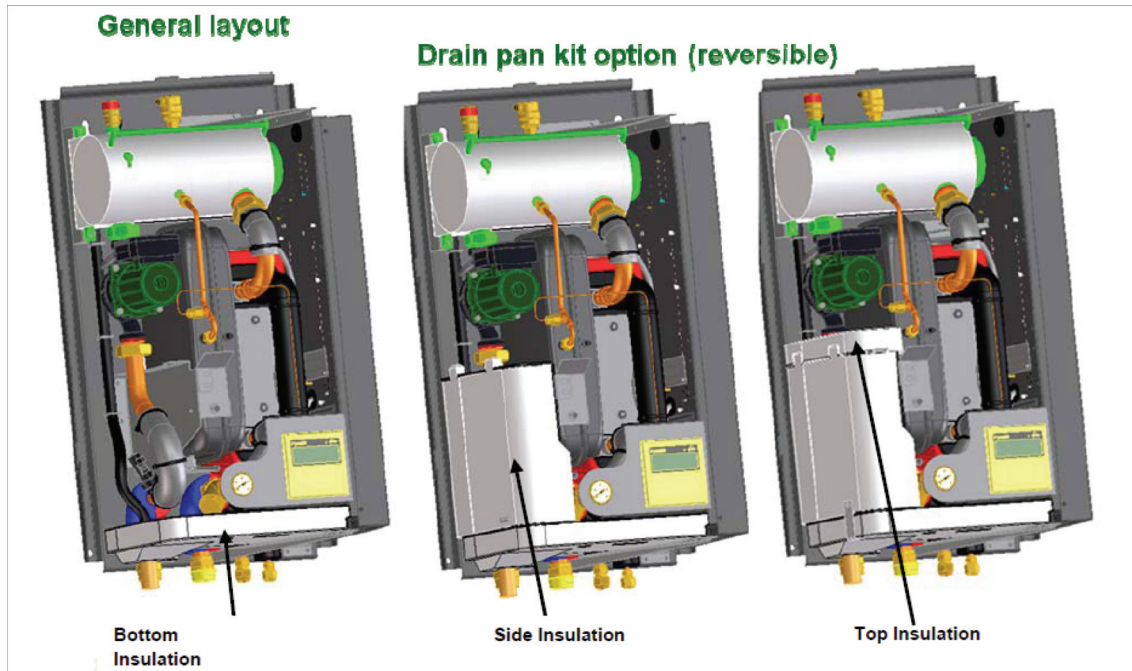


NOTE: Condensate Kit must be used with EKHBX054* Heat Pump Hydrobox

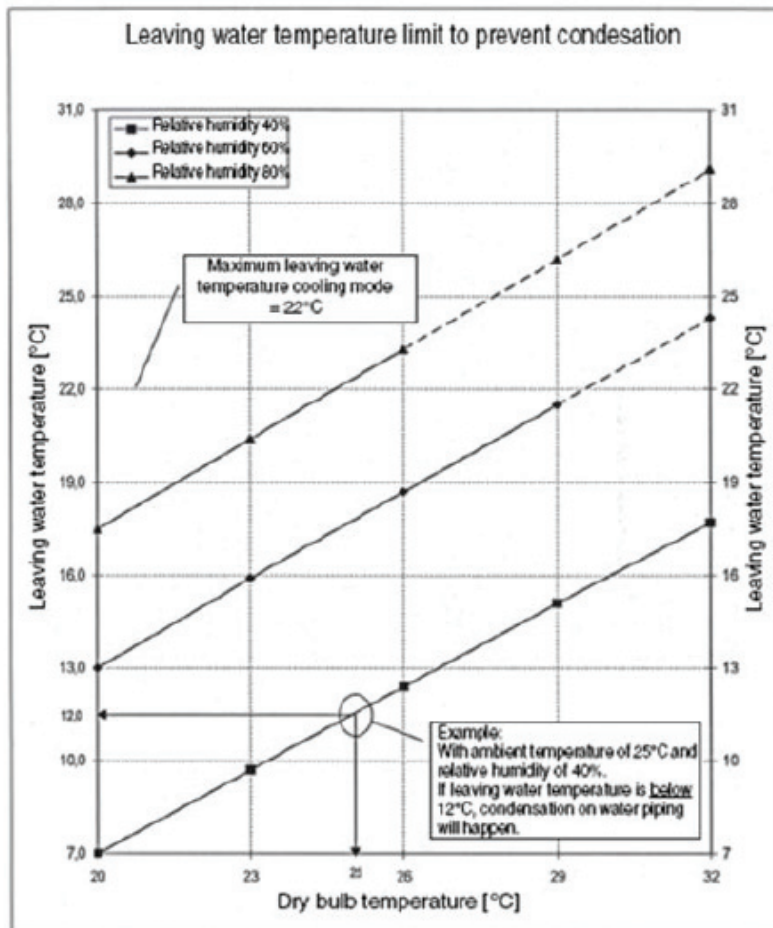

4. Digital I/O PCB Kit – EGRP1HBAAU

- An optional EGRP1HB digital I/O PCB can be connected to the indoor hydrobox or the outdoor monobloc unit and allows:
- Remote Alarm Output
- Bivalent operation (permission signal for the auxiliary boiler)
- Solar DHW priority mode
- Refer to the operation manual of the indoor unit and to the installation manual of the digital I/O PCB for more information.
- Refer to the wiring diagram or connection diagram for connecting this PCB to the unit

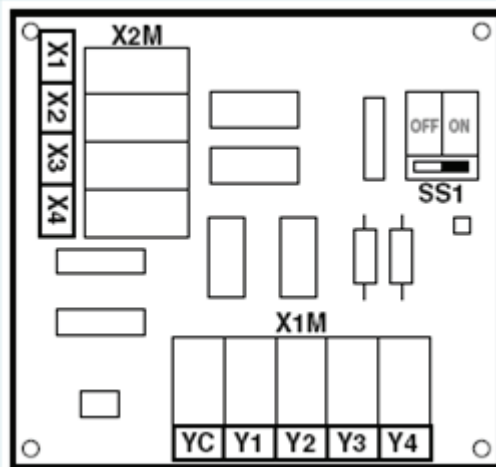

5. DHW Kit Option - DACA - DHW Kit -1


<p>Daikin Kit Model Number:</p> <p>DACA-DHW- KIT-1</p> <p>(3PW42338-7F)</p>	<p>Contents:</p> <ol style="list-style-type: none"> 1. Thermistor Assy – Connects to X9A (Main PCB) 2. Booster Heater Contactor Assy K3M – Mounted to hydro section 3. Booster Heater Fuse/Breaker Assy F2B – Mounted to hydro section 4. Tapping Screw (qty): M4 x 8(4) 5. Tapping Screw (qty): DIN7516(2) 6. Accessory Bag (Power Supply Sticker)
---	--



Selection considerations for the 3rd party indirect tank:

To maintain the integrity, design intent and performance of the Daikin Altherma system in the Domestic Hot Water (DHW) mode of operation the following guidance and recommendations are offered in selecting a 3rd party tank: -


1. Only utilize 3rd party tanks that are “Electrical Indirect”.
2. A single Daikin Altherma system will support and control the connection of a single DHW tank.
3. Where possible, use a 3rd party tank where the indirect heat exchanger is located at the bottom of the tank.
4. If it is intended for the Daikin Altherma to operate in DHW mode based on the tank conditions, ensure a tank is selected that has the ability to integrate the thermistor that measures the tank temperature and communicates this to the Daikin Altherma hydrobox. The thermistor (sensor) location is optimal in the middle section of the tank above the top of the integral heat exchanger.
5. If a 3rd party tank is being utilized and Booster Heat capability is desired, the contactor/fuse assembly provided can handle up to 3kW of Booster Heat capacity.
6. Basic recommended 3rd tank layout scope: -

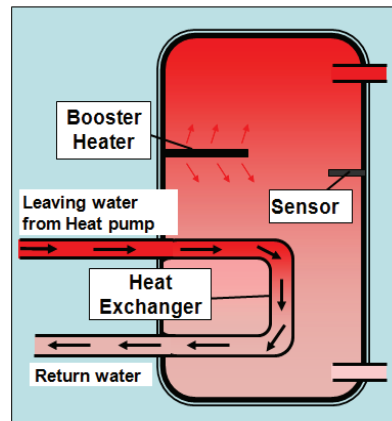

Key specification guidelines: -

Spec	Range Supported
Tank Volume	40, 50, 80, 119 (Gallon)
Water Temperature	Maximum of 185°F
Water Pressure	Maximum of 145 PSI
Tank Material	Stainless Steel
Heat Exchange Material	Stainless Steel
Heat Exchanger Length	Min 35ft – Max 75ft
Heat Exchanger Surface	Min 15.6sqft – Max 33sqft
Tank Power Supply	208-230V / 1ph / 60Hz

If a quicker DHW recovery time is required, it is advised to select a tank with a larger Heat Exchanger Length / Surface within the range supported. Typically, you will see recovery times reduced up to about 1/3 versus the minimum range supported (based on a 70°F temperature rise).

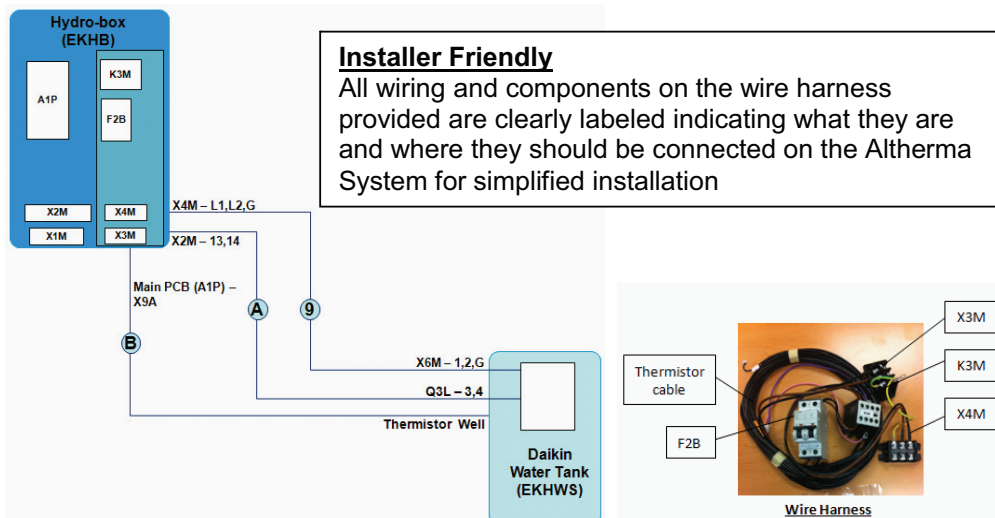
Wiring diagram:

(Installation should be in compliance with ALL local electrical codes)

Connections to (Hydrobox) indoor unit switch box: -

1. Mount the prewired contactor (K3M), circuit breaker (F2B) and terminal blocks (X3M, X4M). The contactor must be fixed with the 2 supplied contactor screws and the terminal blocks must be fixed with the 2x 2 supplied tapping screws.
2. Plug the connector connected to the contactor K3M in the socket X13A on the PCB.
3. Plug the thermistor cable connector in the socket X9A on the main PCB.
4. Connect the prewired ground wires of the terminal block X3M and X4M to the grounding screw.
5. Connect the booster heater power supply and thermal protection cable (field supply) to terminal X4M ground, 1, 2, and X2M 13, 14.
6. Connect the booster heater power supply cable to the terminal block X3M.
7. Fix the cables to the cable tie mountings with cable ties to ensure strain relief.
8. Set DIP switch SS2-2 on the PCB to ON.
9. When routing out cables, make sure that these do not obstruct mounting of the indoor unit cover.


6. BSP to NPT Adaptor Kits

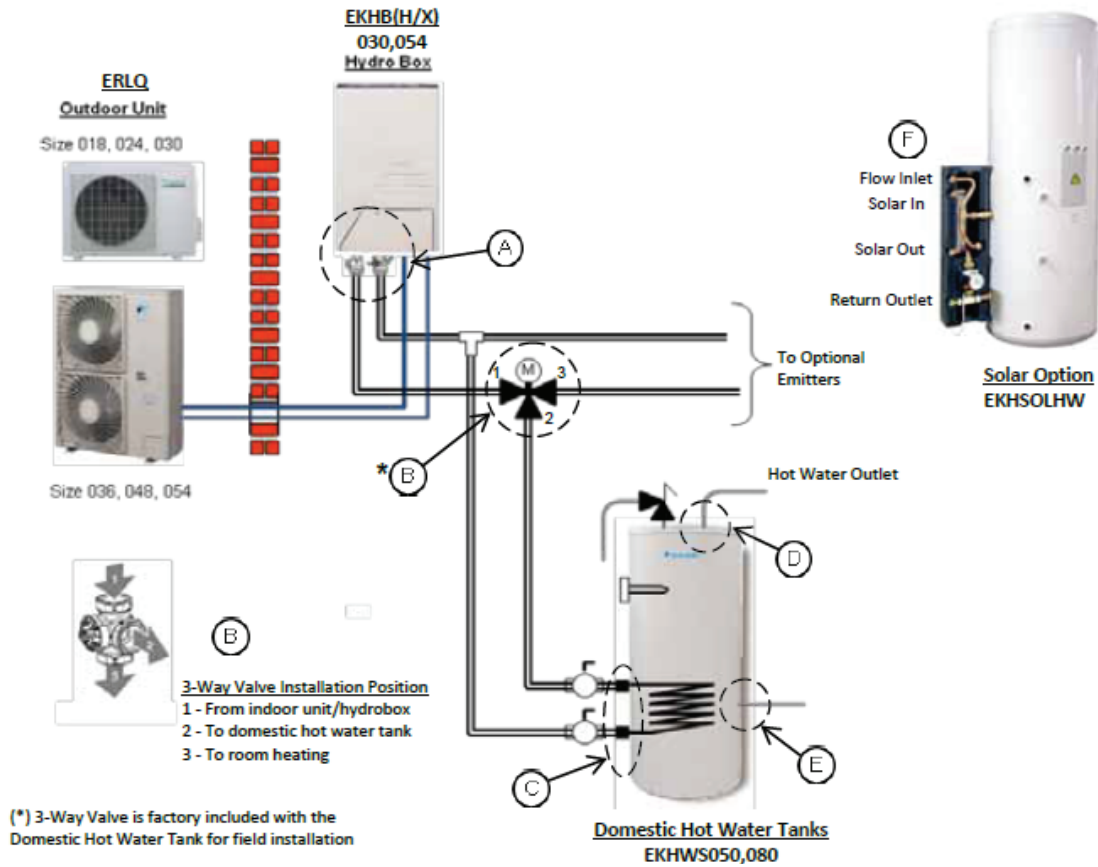

Split System: ERLQ with EKHB

Item	Connections	Connections Type	QTY	Part No.	Indoor Section	OD Section
A	1"BSPT (Female) x 1" NPT (Male)	Hydrobox Inlet / Outlet	2	DACA-HBA-2	EKHB(H/X)030	ERLQ 018 024 030
B	1"BSPT (Male) x 1" NPT (Female)	3-Way Valve	3	DACA-3WVTH-1	EKHWS050,080	
C	3/4"BSPT (Male) x 1" NPT (Female)		DHW Tank Inlet/Outlet	2	DACA-THXA-1	
D	3/4"BSPT (Male) x 3/4" NPT (Female)	Hot Water Outlet	1	DACA-DHWTA-1	EKHWS050,080	
E	3/4"BSPT (Male) x 3/4" NPT (Female)	Cold Water Inlet	1	DACA-DHWTA-1	EKHWS050,080	
A	1-1/4"BSPT (Female) x 1-1/4" NPT (Male)	Hydrobox Inlet/Outlet	2	DACA-HBA-1	EKHB(H/X)054	ERLQ 036 048 054
B	1" BSPT (Male) x 1-1/4" NPT (Female)	3-Way Valve	2	DACA-3WVTA-1	EKHWS050,080	
	1" BSPT (Male) x 1" NPT (Female)		1	DACA-3WVTH-1		
C	3/4" BSPP (Male) x 1" NPT (Female)	DHW Tank Inlet/Outlet	2	DACA-THXA-1	EKHWS050,080	
D	3/4" BSPP (Male) x 3/4" NPT (Female)	Hot Water Outlet	1	DACA-DHWTA-1	EKHWS050,080	
E	3/4" BSPP (Male) x 3/4" NPT (Female)	Cold Water Inlet	1	DACA-DHWTA-1	EKHWS050,080	
F	1" BSPP (Male) x 1" NPT (Female)	Solar Loop Inlet/Outlet	2	DACA-THXA-1	EKHSOLHW	ERLQ
Replace-ment	1" BSPP (Male) Plug for Re-Circ or Anode Tank Holes	DHW Tank Plug	2	DACA-MP-1	EKHWS050,080	ERLQ

BSPT - British Standard Pipe Thread Tapered
 BSPP - British Standard Pipe Thread Parallel
 NPT - American Standard Tapered Pipe Thread

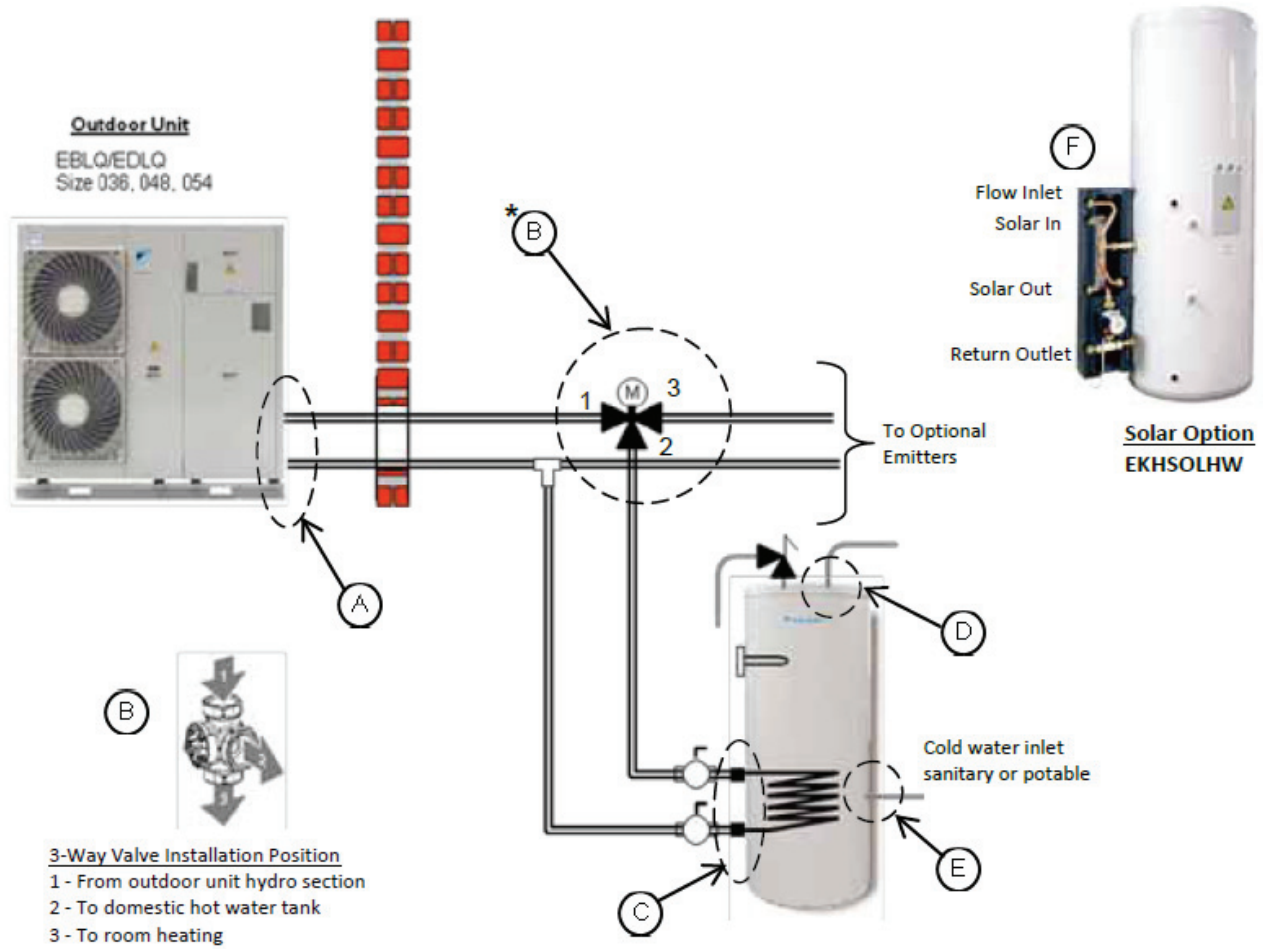

(*) 3-Way Valve is factory included with the Domestic Hot Water Tank for field installation

Monobloc: EB_EDLQ036, 048, 054

Item	Connections Type	Connections	QTY	DACA Part No.	Model	OD Section Monobloc
A	1-1/4"BSPP (Male)x 1-1/4" NPT (Male)	Outdoor Water Inlet/Outlet	2	DACA-HBA-3	EDLQ/EBLQ	EDLQ/EBLQ
B	1" BSPT (Male) x 1-1/4" NPT (Female)	3-Way Valve	2	DACA-3WVTA-1	EKHWS050,080	036 048 054
	1" BSPT (Male) x 1" NPT (Female)		1	DACA-3WVTH-1		
C	3/4" BSPP (Male) x 1" NPT (Female)	DHW Tank Inlet/Outlet	2	DACA-THXA-1	EKSOLHW	
D	3/4" BSPP (Male) x 3/4" NPT (Female)	Hot Water Outlet	1	DACA-DHWTA-1	EKHWS050,080	
E	3/4" BSPP (Male) x 3/4" NPT (Female)	Cold Water Inlet	1	DACA-DHWTA-1	EKHWS050,080	
F	3/4" BSPP (Male) x 1" NPT (Female)	Solar Loop Inlet/Outlet	2	DACA-THXA-1	EKHSOLHW	EDLQ/EBLQ
Replacement	3/4" BSPP (Male) Plug for Re-Circ or Anode Tank Holes	DHW Tank Plug	2	DACA-MP-1	EKHWS050,080	EDLQ/EBLQ

BSPT - British Standard Pipe Thread Tapered
BSPP - British Standard Pipe Thread Parallel
NPT - American Standard Tapered Pipe Thread

1. Appendix - Field Settings Overview

The unit shall be configured by the installer to match the installation environment (outdoor climate, installed options, etc.) and user demand. Thereto, a number of so called field settings are available. These field settings are accessible and programmable through the user interface.

Each field setting is assigned a 3-digit number or code, for example [5-03], which is indicated on the user interface display. The first digit [5] indicates the 'first code' or field setting group. The second and third digit [03] together indicate the 'second code'.

A list of all field settings and default values is given under "Field settings table" on page 35. In this same list, we provided for 2 columns to register the date and value of altered field settings at variance with the default value.

A detailed description of each field setting is given under "Detailed description" on page 26.


Procedure

To change one or more field settings, proceed as follows.



Temperature values displayed on the digital controller (user interface) are in °C.

Temperature values in °C are between brackets. Conversion from °C to °F is for information only.

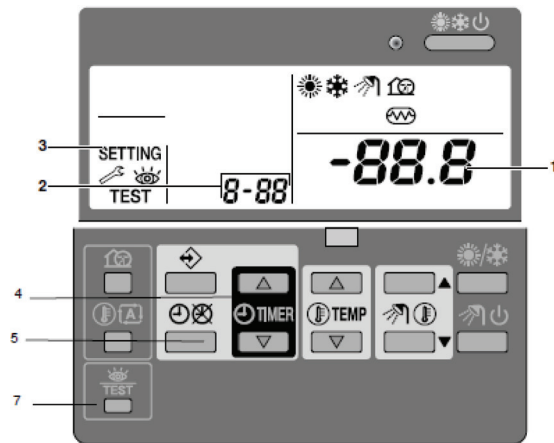

- 1 Press the button for a minimum of 5 seconds to enter FIELD SET MODE.
The **SETTING** icon (3) will be displayed. The current selected field setting code is indicated **8-88** (2), with the set value displayed to the right **-88.8** (1).
- 2 Press the button to select the appropriate field setting first code.
- 3 Press the button to select the appropriate field setting second code.
- 4 Press the button and button to change the set value of the select field setting.
- 5 Save the new value by pressing the button.
- 6 Repeat step 2 through 4 to change other field settings as required.
- 7 When finished, press the button to exit FIELD SET MODE.



NOTE Changes made to a specific field setting are only stored when the button is pressed. Navigating to a new field setting code or pressing the button will discard the change made.

NOTE



- Before shipping, the set values have been set as shown under "Field settings table" on page 35.
- When exiting FIELD SET MODE, "88" may be displayed on the user interface LCD while the unit initialises itself.

Detailed description

[0] User permission level

If required, certain user interface buttons can be made unavailable for the user.


Three permission levels are defined (see the table below). Switching between level 1 and level 2/3 is done by simultaneously pressing buttons \ominus TIMER \blacktriangle and \ominus TIMER \blacktriangledown immediately followed by simultaneously pressing buttons Lo_Ti and Hi_Ti , and keeping all 4 buttons pressed for at least 5 seconds (in normal mode). Note that no indication on the user interface is given. When level 2/3 is selected, the actual permission level — either level 2 or level 3 — is determined by the field setting [0-00].

Button	Icon	Permission level		
		1	2	3
Quiet mode button	Lo_Ti	operable	—	—
Weather dependent set point button	Hi_Ti	operable	—	—
Schedule timer enable/disable button	\ominus \otimes	operable	operable	—
Programming button	\blacklozenge	operable	—	—
Time adjust buttons	\ominus TIMER	operable	—	—
	\blacktriangle			
	\blacktriangledown			
Inspection/test operation button	TEST	operable	—	—

[1] Weather dependent set point (heating operation only)

The weather dependent set point field settings define the parameters for the weather dependent operation of the unit. When weather dependent operation is active the water temperature is determined automatically depending on the outdoor temperature: colder outdoor temperatures will result in warmer water and vice versa. During weather dependent operation, the user has the possibility to shift up or down the target water temperature by a maximum of 41°F (5°C). See the operation manual for more details on weather dependent operation.

- [1-00] Low ambient temperature (Lo_A): low outdoor temperature.
- [1-01] High ambient temperature (Hi_A): high outdoor temperature.
- [1-02] Set point at low ambient temperature (Lo_Ti): the target outgoing water temperature when the outdoor temperature equals or drops below the low ambient temperature (Lo_A).
Note that the Lo_Ti value should be *higher* than Hi_Ti, as for colder outdoor temperatures (i.e. Lo_A) warmer water is required.
- [1-03] Set point at high ambient temperature (Hi_Ti): the target outgoing water temperature when the outdoor temperature equals or rises above the high ambient temperature (Hi_A).
Note that the Hi_Ti value should be *lower* than Lo_Ti, as for warmer outdoor temperatures (i.e. Hi_A) less warm water suffices.

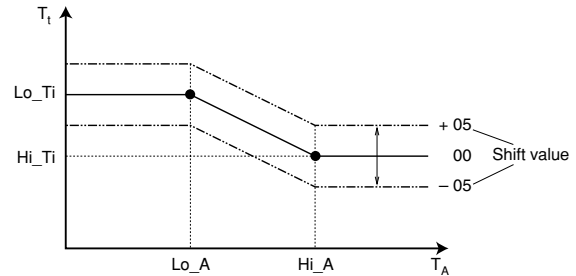

T_t Target water temperature

T_A Ambient (outdoor) temperature

Shift value = Shift value

[2] Disinfection function

Applies only to installations with a domestic hot water tank.


The disinfection function disinfects the domestic hot water tank by periodically heating the domestic water to a specific temperature.



CAUTION

The disinfection function field settings must be configured by the installer according to local laws and regulations.

- [2-00] Operation interval: day(s) of the week at which the domestic water should be heated.
- [2-01] Status: defines whether the disinfection function is turned on (1) or off (0).
- [2-02] Start time: time of the day at which the domestic water should be heated.
- [2-03] Set point: high water temperature to be reached.
- [2-04] Interval: time period defining how long the set point temperature should be maintained.

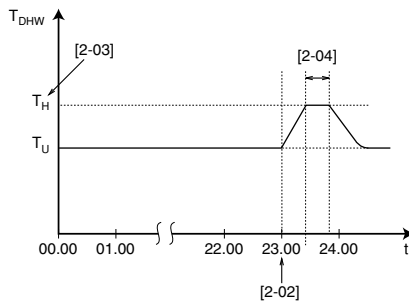

T_{DHW}	Domestic hot water temperature
T_U	User set point temperature (as set on the user interface)
T_H	High set point temperature [2-03]
t	Time



WARNING

Be aware that the domestic hot water temperature at the hot water tap will be equal to the value selected in field setting [2-03] after a disinfection operation.

If this high domestic hot water temperature can be a potential risk for human injuries, a mixing valve (field supply) shall be installed at the hot water outlet connection of the domestic hot water tank. This mixing valve shall secure that the hot water temperature at the hot water tap never rise above a set maximum value. This maximum allowable hot water temperature shall be selected according to local laws and regulations.

[3] Auto restart

When power returns after a power supply failure, the auto restart function reapplies the user interface settings at the time of the power supply failure.



NOTE It is therefore recommended to leave the auto restart function enabled.

Note that with the function disabled the schedule timer will not be activated when power returns to the unit after a power supply failure. Press the button to enable the schedule timer again.

- [3-00] Status: defines whether the auto restart function is turned **ON (0)** or **OFF (1)**.



NOTE If the benefit kWh rate power supply is of the type that power supply is interrupted, then always allow the auto restart function.

[4] Backup heater operation and space heating off temperature

Backup heater operation

The operation of the backup heater can be enabled or disabled, or it can be disabled depending on operation of the booster heater.

- [4-00] Status: defines whether backup heater operation is enabled (1) or disabled (0).



NOTE Even in case the backup heater operation status field setting [4-00] is set to disabled (0), the backup heater can operate during start-up and defrost operation.

- [4-01] Priority: defines whether backup heater and booster heater can operate simultaneously (0), or if the booster heater operation has priority over the backup heater operation (1), or if the backup heater operation has priority over the booster heater operation (2).



NOTE When the priority field setting is set to ON (1), space heating performance of the system might be decreased at low outdoor temperatures, since in case of domestic water heating demand the backup heater will not be available for space heating (space heating will still be provided by the heat pump).

When the priority field setting is set to ON (2), domestic water heating performance of the system might be decreased at low outdoor temperatures, since in case of space heating demand the booster heater will not be available for domestic water heating. However domestic water heating by heat pump will still be available.

When the priority field setting is set to OFF (0), make sure that electrical power consumption does not exceed supply limits.

Space heating off temperature

- [4-02] Space heating off temperature: outdoor temperature above which space heating is turned off, to avoid overheating.

Booster heater operation

Applies only to installations with a domestic hot water tank.

The operation of the booster heater can be enabled or limited depending on outdoor temperature (T_A), domestic hot water temperature (T_{DHW}) or operation mode of the heat pump.

- [4-03] Booster heater operation: defines whether the optional booster heater operation is enabled (1) or has certain limitations (0/2/3).

Explanation of settings of [4-03]

Booster heater will/can only operate if domestic hot water mode is activated (☞).

- [4-03]=0, then booster heater operation is only allowed during "[2] Disinfection function" and "Powerful domestic water heating" (see operation manual).
This setting is only recommended in case the capacity of the heat pump can cover the heating requirements of the house and domestic hot water over the complete heating season.
The result of this setting is that the domestic hot water will never be heated by the booster heater except for "[2] Disinfection function" and "Powerful domestic water heating" (see operation manual).



If the booster heater operation is limited ([4-03]=0) and the ambient outdoor temperature T_A is lower than the field setting to which parameter [5-03] is set and [5-02]=1, then the domestic hot water will not be heated.

The consequence of this setting is that the domestic hot water temperature (T_{DHW}) can be maximum the heat pump OFF temperature ($T_{HP OFF}$). Refer to setting of [6-00] and [6-01] in "[6]" on page 29.

- [4-03]=1, then booster heater operation is only determined by booster heater OFF temperature ($T_{BH OFF}$), booster heater ON temperature ($T_{BH ON}$) and/or schedule timer. Refer to setting "[7-00]" on page 30 and "[7-01]" on page 30.
- [4-03]=2, then booster heater operation is only allowed if heat pump is out of "operation range" of heat pump domestic water heating mode ($T_A < [5-03]$ or $T_A > 95^\circ\text{F}(35^\circ\text{C})$) or domestic hot water temperature is $3.6^\circ\text{F}(2^\circ\text{C})$ lower than the heat pump OFF temperature ($T_{HP OFF}$) for domestic hot water mode ($T_{DHW} > T_{HP OFF} - 3.6^\circ\text{F}(2^\circ\text{C})$). (Refer to setting [5-03] on page 28, [6-00] on page 29 and [6-01] on page 29). Results in the most optimum coverage of domestic hot water heated by the pump.
- [4-03]=3, then booster heater operation is the same as setting 1, except that booster heater is OFF when the heat pump is active in domestic hot water mode. The consequence of this functionality is that setting [8-03] is not relevant.
Results in optimum coverage of domestic hot water heated by heat pump in relation with [8-04].



- When setting [4-03]=1/2/3, the booster heater operation can still be restricted by the schedule timer as well. I.e., when booster heater operation is preferred during certain period of the day. (See operation manual)
- When setting [4-03]=2, the booster heater will be allowed to operate when $T_A < [5-03]$ independent of the status of [5-02]. If bivalent operation is enabled and permission signal for auxiliary boiler is ON, the booster heater will be restricted even when $T_A < [5-03]$. (See "[C-02]" on page 33).
- Booster heater is always allowed during powerful and disinfection function, except for the period that the backup heater operation is required for safety reasons and [4-02]=1.

- [4-04] Freeze protection function: avoids freezing of the water piping between home and unit. In case of low ambient temperatures it will activate the pump and in case of low water temperatures it will additionally activate the backup heater. Monobloc only.
Default freeze protection function takes into account freezing of water piping which is insufficiently insulated.
Basically it means that the pump is activated whenever ambient temperatures become close to freezing, independently of the working temperature.

[5] Equilibrium temperature and space heating priority temperature

Equilibrium temperature — The 'equilibrium temperature' field settings apply to operation of the **backup heater**.

When the equilibrium temperature function is enabled, operation of the backup heater is restricted to low outdoor temperatures, i.e. when the outdoor temperature equals or drops below the specified equilibrium temperature. When the function is disabled, operation of the backup heater is possible at all outdoor temperatures. Enabling this function reduces the working time of the backup heater.

- [5-00] Equilibrium temperature status: specifies whether the equilibrium temperature function is enabled (1) or disabled (0).
- [5-01] Equilibrium temperature: outdoor temperature below which operation of the backup heater is allowed.

Space heating priority temperature — Applies only to installations with a domestic hot water tank. — The 'space heating priority temperature' field settings apply to operation of the 3-way valve and the **booster heater** in the domestic hot water tank.


When the space heating priority function is enabled, it is assured that the full capacity of the heat pump is used for space heating only when the outdoor temperature equals or drops below the specified space heating priority temperature, i.e. low outdoor temperature. In this case the domestic hot water will only be heated by the booster heater.

- [5-02] Space heating priority status: specifies whether space heating priority is enabled (1) or disabled (0).
- [5-03] Space heating priority temperature: outdoor temperature below which the domestic hot water will be heated by the booster heater only, i.e. low outdoor temperature.



If the booster heater operation is limited ([4-03]=0) and the ambient outdoor temperature T_A is lower than the field setting to which parameter [5-03] is set and [5-02]=1, then the domestic hot water will not be heated.

- [5-04] Set point correction for domestic hot water temperature: set point correction for the desired domestic hot water temperature, to be applied at low outdoor temperature when space heating priority is enabled. The corrected (higher) set point will make sure that the *total* heat capacity of the water in the tank remains approximately unchanged, by compensating for the colder bottom water layer of the tank (because the heat exchanger coil is not operational) with a warmer top layer.

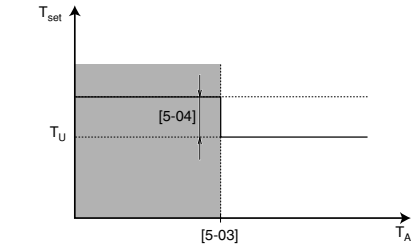

T_{set} Domestic hot water set point temperature
 T_U User set point (as set on the user interface)
 T_A Ambient (outdoor) temperature
 Space heating priority



WARNING

Be aware that the domestic hot water temperature will be automatically increased with the value selected in field setting [5-04] (if the outdoor temperature drops below field setting [5-03]) compare to the user set point for domestic hot water (T_U). Refer to field setting [5-03], [7-00] and the operation manual to select preferable set point.

If this high domestic hot water temperature can be a potential risk for human injuries, a mixing valve (field supply) shall be installed at the hot water outlet connection of the domestic hot water tank. This mixing valve shall secure that the hot water temperature at the hot water tap never rise above a set maximum value. This maximum allowable hot water temperature shall be selected according to local laws and regulations.

[6] DT for heat pump domestic water heating mode



Applies only to installations with a domestic hot water tank.

The 'DT (temperature difference) for heat pump domestic water heating mode' field settings determine the temperatures at which heating of the domestic hot water by the heat pump will be started (i.e., the heat pump ON temperature) and stopped (i.e., the heat pump OFF temperature).

When the domestic hot water temperature drops below the heat pump ON temperature ($T_{HP ON}$), heating of the domestic hot water by the heat pump will be started. As soon as the domestic hot water temperature reaches the heat pump OFF temperature ($T_{HP OFF}$) or the user set point temperature (T_U), heating of the domestic hot water by the heat pump will be stopped (by switching the 3-way valve).

The heat pump OFF temperature, and the heat pump ON temperature, and its relation with field settings [6-00] and [6-01] are explained in the illustration below.

- [6-00] Start: temperature difference determining the heat pump ON temperature ($T_{HP ON}$). See illustration.
- [6-01] Stop: temperature difference determining the heat pump OFF temperature ($T_{HP OFF}$). See illustration.

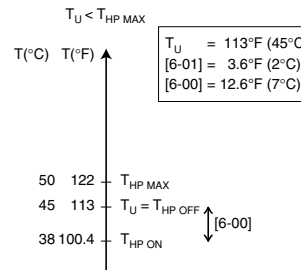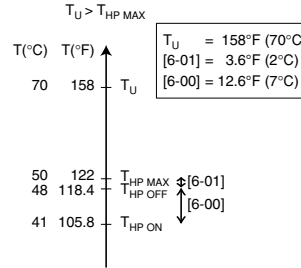

T_U User set point temperature (as set on the user interface)
 $T_{HP MAX}$ Maximum heat pump temperature at sensor in domestic hot water tank (122°F)(50°C)(depending on T_A)^(a)
 $T_{HP OFF}$ Heat pump OFF temperature
 $T_{HP ON}$ Heat pump ON temperature

(a) 122°F (50°C) = $T_{HP MAX}$ at $T_A \leq 77°F$ (25°C).
 118.4°F (48°C) = $T_{HP MAX}$ at $T_A > 77°F$ (25°C).



The maximum domestic hot water temperature that can be reached with the heat pump is 122°F (50°C). It is advised to select $T_{HP OFF}$ not higher than 118.4°F (48°C) in order to improve performance of the heat pump during domestic water heating mode.

When setting [4-03]=0 or 2 special attention to setting [6-00] is recommended. A good balance between the required domestic hot water temperature and heat pump ON temperature ($T_{HP ON}$) is a must.

[7] DT for booster heater and dual set point control



DT for booster heater

Applies only to installations with a domestic hot water tank.

When the domestic hot water is heated and the domestic hot water set point temperature (as set by the user) has been reached, the booster heater will continue to heat the domestic hot water to a temperature a few degrees above the set point temperature, i.e. the booster heater OFF temperature. These extra degrees are specified by the domestic hot water step length field setting. Correct setting prevents the booster heater from repeatedly turning on and off (i.e. chattering) to maintain the domestic hot water set point temperature. Note: the booster heater will turn back on when the domestic hot water temperature drops [7-01] (field setting) below the booster heater OFF temperature.

! If the schedule timer for booster heater (see the operation manual) is active, the booster heater will only operate if allowed by this schedule timer.

■ [7-00] Domestic hot water step length: temperature difference above the domestic hot water set point temperature before the booster heater is turned off.

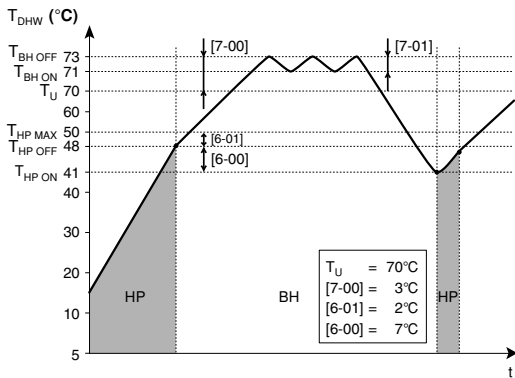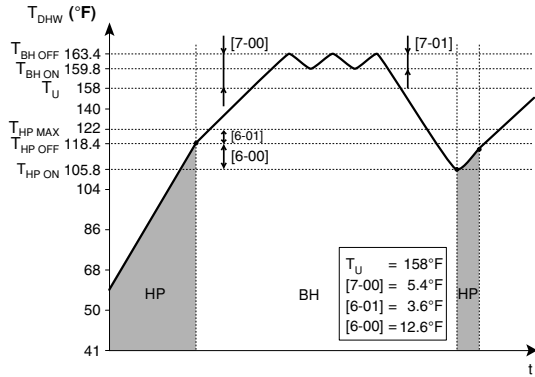

- BH Booster heater
- HP Heat pump. If heating up time by the heat pump takes too long, auxiliary heating by the booster heater can take place
- $T_{BH\ OFF}$ Booster heater OFF temperature ($T_U + [7-00]$)
- $T_{BH\ ON}$ Booster heater ON temperature ($(T_{BH\ OFF} - 4^\circ F)$ ($T_{BH\ OFF} - 2^\circ C$))
- $T_{HP\ MAX}$ Maximum heat pump temperature at sensor in domestic hot water tank
- $T_{HP\ OFF}$ Heat pump OFF temperature ($T_{HP\ MAX} - [6-01]$)
- $T_{HP\ ON}$ Heat pump ON temperature ($T_{HP\ OFF} - [6-00]$)
- T_{DHW} Domestic hot water temperature
- T_U User set point temperature (as set on the user interface)
- t Time

! WARNING

Be aware that the domestic hot water temperature will be automatically increased (always) with the value selected in field setting [7-00] compare to the user set point for domestic hot water (T_U). Refer to field setting [7-00] and the operation manual to select preferable set point.

If this high water temperature can be a potential risk for human injuries, a mixing valve (field supply) shall be installed at the hot water outlet connection of the domestic hot water tank. This mixing valve shall secure that the hot water temperature at the hot water tap never rise above a set maximum value. This maximum allowable hot water temperature shall be selected according to local laws and regulations.

! If the booster heater operation is limited ([4-03]=0), then set point of field setting parameter [7-00] has only meaning for powerful domestic water heating.

■ [7-01] Hysteresis value booster heater: temperature difference determining the booster heater ON temperature ($T_{BH\ ON}$): $T_{BH\ ON} = T_{BH\ OFF} - [7-01]$

! The minimum value for booster heater ON temperature ($T_{BH\ ON}$) is 3.6°F (2°C) (fixed) below heat pump OFF temperature ($T_{HP\ OFF}$).

Dual set point control

Applies only to installations with different heat emitter which require different set points.

Dual set point control makes it possible to generate 2 different set points.


NOTE There is no indication available which set point is active!

- [7-02] Dual set point control status: defines whether the dual set point control is enabled (1) or disabled (0).
- [7-03] Second set point heating: specifies the second set point temperature in heating operation.
- [7-04] Second set point cooling: specifies the second set point temperature in cooling operation.

NOTE



- The first set point heating/cooling is the set point selected on the user interface.
 - In heating mode the first set point can be a fixed value or weather dependent.
 - In cooling mode the first set point is always a fixed value.
- The second set point heating [7-03] should be linked to the heat emitters which requires the highest set point in heating mode. Example: fan coil unit.
- The second set point cooling [7-04] should be linked to the heat emitters which requires the lowest set point in cooling mode. Example: fan coil unit.
- The actual second set point heating value depends on the selected value of setting [7-03].
 - In case [7-03]=1.8~43.2°F (1~24°C), the actual second set point will be first set point heating increased with [7-03] (the maximum is 131°F (55°C)).
In this way the second set point heating is linked to the first set point heating.
 - In case [7-03]=77~131°F (25~55°C), the actual second set point heating is equal to [7-03].
- The selection of second set point or first set point is determined by the terminals (X2M: 1, 2, 4).
The second set point has always priority on the first set point.



When dual set point control is enabled, heating/cooling selection always has to be done on the user interface.

NOTE



It is the responsibility of the installer to make sure no unwanted situations can occur.
It is very important that the water temperature to the floor heating loops never becomes too high in heating mode or never too cold in cooling mode. Failure to observe this rule can result in construction damage or discomfort. For example in cooling mode condensation on the floor can occur when water towards the floor heating loops is too cold (dew point).

[8] Domestic water heating mode timer

Applies only to installations with a domestic hot water tank.


The 'domestic water heating mode timer' field settings defines the minimum and maximum domestic water heating times, minimum time between two domestic water heating cycles by heat pump, and booster heater delay time.

- [8-00] Minimum running time: specifies the minimum time period during which heat pump domestic water heating mode should be activated, even when the target domestic hot water temperature for heat pump ($T_{HP\ OFF}$) has already been reached.
- [8-01] Maximum running time: specifies the maximum time period during which heat pump domestic water heating mode can be activated, even when the target domestic hot water temperature for heat pump ($T_{HP\ OFF}$) has not yet been reached.
The actual maximum running time will automatically variate between [8-01] and [8-01]+[8-04] depending on the outdoor temperature. See figure in chapter "[8-04]" on page 32.



Note that when the unit is configured to work with a room thermostat (refer to "Room thermostat installation configuration" on page 23), the maximum running timer will only be taken into account when there is a request for space cooling or space heating. When there is no request for room cooling or room heating, domestic water heating by the heat pump will continue until the 'heat pump OFF temperature' (see field settings [6] on page 29) is reached. When no room thermostat is installed, the timer is always taken into account.

- [8-02] Anti-recycling time: specifies the minimum required interval between two heat pump domestic water heating mode cycles.
The actual anti-recycling time will automatically variate between [8-02] and 0 depending on the outdoor temperature. See figure in chapter "[8-04]" on page 32.

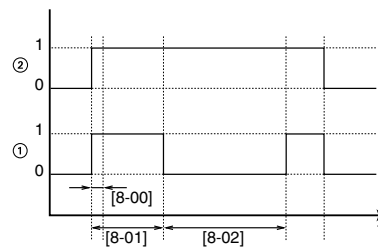

- 1 Domestic water heating (1 = active, 0 = not active)
- 2 Hot water request (1 = request, 0 = no request)
- t Time




If the outdoor temperature is higher than the field setting to which parameter [4-02] is set, then field settings of parameters [8-01], [8-02], and [8-04] are not considered.

- [8-03] Booster heater delay time: specifies the start-up time delay of the booster heater operation when heat pump domestic water heating mode is active.



- When heat pump is active in domestic water heating mode, the delay time of booster heater is [8-03].
- When heat pump is not active in domestic water heating mode, the delay time is 20 min.
- The delay timer starts from booster heater ON temperature ($T_{BH\ ON}$)

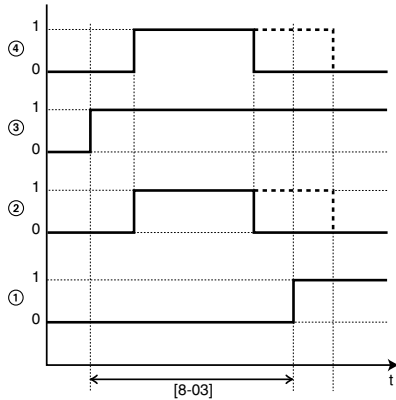

- 1 Booster heater operation (1 = active, 0 = not active)
- 2 Heat pump domestic water heating mode (1 = active, 0 = not active)
- 3 Hot water request for booster heater (1 = request, 0 = no request)
- 4 Hot water request for heat pump (1 = request, 0 = no request)
- t Time




- By adapting the booster heater delay time versus the maximum running time, an optional balance can be found between the energy efficiency and the heat up time.
- However, if the booster heater delay time is set too high, it might take a long time before the domestic hot water reaches its set temperature upon domestic hot water mode request.
- The purpose of [8-03] is to delay the booster heater in relation with the heat pump operation time in domestic water heating mode.
- The setting [8-03] has only meaning if setting [4-03]=1. Setting [4-03]=0/2/3 limits the booster heater automatically in relation to heat pump operation time in domestic water heating mode.
- Take care that [8-03] is always in relation with the maximum running time [8-01].

Example: [4-03]=1

	Energy saving settings	Quick heating settings (default)
[8-01]	20~95 min	30 min
[8-03]	[8-01] + 20 min	20 min

- [8-04] Additional running time at [4-02]/[F-01]: specifies the additional running time on the maximum running time at outdoor temperature [4-02] or [F-01]. See figure below.

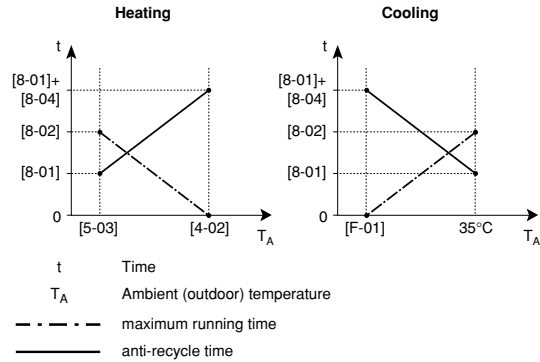

The full advantage of [8-04] will be applicable if setting [4-03] is not 1.

[9] The purpose of this field setting is to prevent the user from selecting a wrong (i.e., too hot or too cold) leaving water temperature. There to the heating temperature set point range and the cooling temperature set point range available to the user can be configured.



CAUTION

- In case of a floor heating application, it is important to limit the maximum leaving water temperature at heating operation according to the specifications of the floor heating installation.
- In case of a floor cooling application, it is important to limit the minimum leaving water temperature at cooling operation (field setting of parameter [9-03]) to 60.8~64.4°F (16~18°C) to prevent condensation on the floor.

- [9-00] Heating set point upper limit: maximum leaving water temperature for heating operation.
- [9-01] Heating set point lower limit: minimum leaving water temperature for heating operation.
- [9-02] Cooling set point upper limit: maximum leaving water temperature for cooling operation.
- [9-03] Cooling set point lower limit: minimum leaving water temperature for cooling operation.
- [9-04] Overshoot setting: defines how much the water temperature may rise above the set point before the compressor stops. This function is only applicable in heating mode.

[A] Quiet mode

This field setting allows to select the desired quiet mode. Two quiet modes are available: quiet mode A and quiet mode B.

In quiet mode A, priority is given to the unit operating quietly under all circumstances. Fan and compressor speed (and thus performance) will be limited to a certain percentage of the speed at normal operation. In certain cases, this might result in reduced performance.

In quiet mode B, quiet operation might be overridden when higher performance is required. In certain cases, this might result in less quiet operation of the unit to meet the requested performance.

- [A-00] Quiet mode type: defines whether quiet mode A (0) or quiet mode B (2) is selected.
- [A-01] Parameter 01: do not change this setting. Leave it set to its default value.

NOTE Do not set other values than the ones mentioned.



[C] Setup on EKRP1HB digital I/O PCB

Solar priority mode

- [C-00] Solar priority mode setting: for information concerning the EKSOLHW solar kit, refer to the installation manual of that kit.

Alarm output logic

- [C-01] Alarm output logic: defines the logic of the alarm output on the EKRP1HB digital I/O PCB.
[C-01]=0, the alarm output will be powered when an alarm occurs (default).
[C-01]=1, the alarm output will not be powered when an alarm occurs. This field setting allows for distinction between detection of an alarm and detection of a power failure to the unit.

[C-01]	Alarm	No alarm	No power supply to unit
0 (default)	Closed output	Open output	Open output
1	Open output	Closed output	Open output

Bivalent operation

Applies only to installations with an auxiliary boiler (alternating operation, parallel connected). The purpose of this function is to determine —based on the outdoor temperature— which heating source can/will provide the space heating, either the Daikin unit or an auxiliary boiler.

The field setting "bivalent operation" apply only the unit space heating operation and the permission signal for the auxiliary boiler.


When the "bivalent operation" function is enabled, the unit will stop automatically in space heating operation when the outdoor temperature drops below "bivalent ON temperature" and the permission signal for the auxiliary boiler becomes active.

When the bivalent operation function is disabled, the space heating by unit is possible at all outdoor temperatures (see operation ranges) and permission signal for auxiliary boiler is always deactivated.

- [C-02] Bivalent operation status: defines whether bivalent operation is enabled (1) or disabled (0).
- [C-03] Bivalent ON temperature: defines the outdoor temperature below which the permission signal for the auxiliary boiler will be active (closed, KCR on EKRP1HB) and space heating by indoor unit will be stopped.

- [C-04] Bivalent hysteresis: defines the temperature difference between bivalent ON temperature and bivalent OFF temperature.

Permission signal X1–X2 (EKRP1HB)

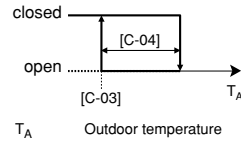


CAUTION

Make sure to observe all rules mentioned in application 5 when bivalent operation function is enabled.

Daikin shall not be held liable for any damage resulting from failure to observe this rule.



- In case the unit is single phase, the combination of setting [4-03]=0/2 with bivalent operation at low outdoor temperature can result in domestic hot water shortage.
- The bivalent operation function has no impact on the domestic water heating mode. The domestic hot water is still and only heated by the unit.
- The permission signal for the auxiliary boiler is located on the EKRP1HB (digital I/O PCB). When it is activated, the contact X1, X2 is closed and open when it is deactivated. See figure for the schematic location of this contact.

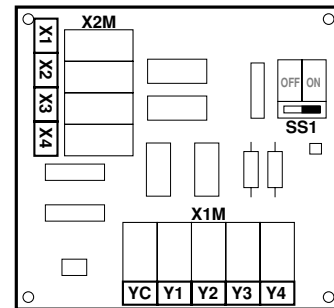

[D] Benefit kWh rate power supply/Local shift value weather dependent

Benefit kWh rate power supply

- [D-00] Switching off heaters: Defines which heaters are switched off when the benefit kWh rate signal of the electricity company is received.
If [D-01]=1 or 2 and the benefit kWh rate signal of the electricity company is received, following devices will be switched off:

[D-00]	Compressor	Back up heater	Booster heater
0 (default)	Forced off	Forced off	Forced off
1	Forced off	Forced off	Permitted
2	Forced off	Permitted	Forced off
3	Forced off	Permitted	Permitted



[D-00] settings 1, 2 and 3 are only meaningful if the benefit kWh rate power supply is of the type that power supply is not interrupted.

Field settings table



Temperature values displayed on the digital controller (user interface) are in °C.

Temperature values in °C are between brackets. Conversion from °C to °F is for information only.

First code	Second code	Setting name	Installer setting at variance with default value				Default value	Range	Step	Unit
			Date	Value	Date	Value				
0	User permission level									
00	User permission level						3	2/3	1	—
1	Weather dependent set point									
00	Low ambient temperature (Lo_A)						14 (-10)	-4-41 (-20-5)	1.8 (1)	°F (°C)
01	High ambient temperature (Hi_A)						59 (15)	50-68 (10-20)	1.8 (1)	°F (°C)
02	Set point at low ambient temperature (Lo_TI)						104 (40)	77-131 (25-55)	1.8 (1)	°F (°C)
03	Set point at high ambient temperature (Hi_TI)						77 (25)	77-131 (25-55)	1.8 (1)	°F (°C)
2	Disinfection function									
00	Operation interval						Fri	Mon-Sun, All	—	—
01	Status						1 (ON)	0/1	—	—
02	Start time						23:00	0:00-23:00	1:00	hour
03	Set point						158 (70)	104-176 (40-80)	9 (5)	°F (°C)
04	Interval						10	5-60	5	min
3	Auto restart									
00	Status						0 (ON)	0/1	—	—
4	Backup/booster heater operation and space heating off temperature									
00	Status						1 (ON)	0/1	—	—
01	Priority						0 (OFF)	0/1/2	—	—
02	Space heating off temperature						95 (35)	57.2-95 (14-35)	1.8 (1)	°F (°C)
03	Booster heater operation						3	0/1/2/3	—	—
04	Freeze-up protection function (monobloc only)						0 (active) Read only	—	—	—
5	Equilibrium temperature and space heating priority temperature									
00	Equilibrium temperature status						1 (ON)	0/1	—	—
01	Equilibrium temperature						32 (0)	5-95 (-15-35)	1.8 (1)	°F (°C)
02	Space heating priority status						0 (OFF)	0/1	—	—
03	Space heating priority temperature						32 (0)	5-68 (-15-20)	1.8 (1)	°F (°C)
04	Set point correction for domestic hot water temperature						18 (10)	0-36 (0-20)	1.8 (1)	°F (°C)
6	DT for heat pump domestic water heating mode									
00	Start						3.6 (2)	3.6-36 (2-20)	1.8 (1)	°F (°C)
01	Stop						3.6 (2)	0-18 (0-10)	1.8 (1)	°F (°C)
02	Not applicable						0	Read only	—	—
7	DT for booster heater and dual set point control									
00	Domestic hot water step length						0	0-7.2 (0-4)	1.8 (1)	°F (°C)
01	Hysteresis value booster heater						3.6 (2)	3.6-72 (2-40)	1.8 (1)	°F (°C)
02	Dual set point control status						0	0/1	—	—
03	Second set point heating						18 (10)	1.8-43.2 / 77-131 (1-24 / 25-55)	1.8 (1)	°F (°C)
04	Second set point cooling						44.6 (7)	41-71.6 (5-22)	1.8 (1)	°F (°C)
8	Domestic water heating mode timer									
00	Minimum running time						5	0-20	1	min
01	Maximum running time						30	5-60	5	min
02	Anti-recycling time						3	0-10	0.5	hour
03	Booster heater delay time						50	20-95	5	min
04	Additional running time at [4-02]/[F-01]						95	0-95	5	min

First code	Second code	Setting name	Installer setting at variance with default value				Default value	Range	Step	Unit
			Date	Value	Date	Value				
9 Cooling and heating set point ranges										
	00	Heating set point upper limit					131 (55)	98.6~131 (37~55)	1.8 (1)	°F (°C)
	01	Heating set point lower limit					77 (25)	59~98.6 (15~37)	1.8 (1)	°F (°C)
	02	Cooling set point upper limit					71.6 (22)	64.4~71.6 (18~22)	1.8 (1)	°F (°C)
	03	Cooling set point lower limit					41 (5)	41~64.4 (5~18)	1.8 (1)	°F (°C)
	04	Overshoot setting ^(a)					1.8 (1)	1.8~7.2 (1~4)	1.8 (1)	°F (°C)
A Quiet mode										
	00	Quiet mode type					0	0/2	—	—
	01	Parameter 01					3	—	—	—
	02	Not applicable					1	Read only	—	—
	03	Not applicable					0	Read only	—	—
	04	Not applicable					0	Read only	—	—
b Not applicable										
	00	Not applicable					0	Read only	—	—
	01	Not applicable					0	Read only	—	—
	02	Not applicable					0	Read only	—	—
	03	Not applicable					0	Read only	—	—
	04	Not applicable					0	Read only	—	—
C Setup on EKR1HB digital I/O PCB										
	00	Solar priority mode setting					0	0/1	1	—
	01	Alarm output logic					0	0/1	—	—
	02	Bivalent operation status					0	0/1	—	—
	03	Bivalent ON temperature					32 (0)	-13~77 (-25~25)	1.8 (1)	°F (°C)
	04	Bivalent hysteresis					5.4 (3)	3.6~18 (2~10)	1.8 (1)	°F (°C)
D Benefit kWh rate power supply/local shift value weather dependent										
	00	Switching off heaters					0	0/1/2/3	—	—
	01	Unit connection to benefit kWh rate power supply					0 (OFF)	0/1/2	—	—
	02	Not applicable. Do not change the default value.					0	—	—	—
	03	Local shift value weather dependent					0	0/1/2/3/4	—	—
E Unit information readout										
	00	Software version					Read only	—	—	—
	01	EEPROM version					Read only	—	—	—
	02	Unit model identificatio					Read only	—	—	—
	03	Liquid refrigerant temperature					Read only	—	—	°F (°C)
	04	Inlet water temperature					Read only	—	—	°F (°C)
F Option setup										
	00	Pump operation					0	0/1	—	—
	01	Space cooling permission temperature					68 (20)	50~95 (10~35)	1.8 (1)	°F (°C)
	02	Bottom plate heater ON temperature					37.4 (3)	37.4~50 (3~10)	1.8 (1)	°F (°C)
	03	Bottom plate heater hysteresis					9 (5)	3.6~9 (2~5)	1.8 (1)	°F (°C)
	04	Functionality of X14A					1	0/1	—	—

(a) Only possible to modify the first 3 minutes after power ON.

The present publication is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V. Daikin Europe N.V. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Europe N.V.

In all of us,
a green heart



Daikin's unique position as a manufacturer of air conditioning equipment, compressors and refrigerants has led to its close involvement in environmental issues. For several years, Daikin has had the intention of becoming a leader in the provision of products that have limited impact on the environment. This challenge demands the eco design and development of a wide range of products and an energy management system, resulting in energy conservation and reduction of waste.

DAIKIN EUROPE N.V.
Naamloze Vennootschap
Zandvoordestraat 300
B-8400 Oostende, Belgium
www.daikin.eu
BTW: BE 0412 120 336
RPR Oostende

DAIKIN AC (AMERICAS), INC.
1645 Wallace Drive, Suite 110
Carrollton, TX 75006
info@daikinac.com
www.daikinac.com



ISO14001 assures an effective environmental management system in order to help protect human health and the environment from the potential impact of our activities, products, and services and to assist in maintaining and improving the quality of the environment.



Daikin Europe N.V. is approved by LRQA for its Quality Management System in accordance with the ISO9001 standard. ISO9001 pertains to quality assurance regarding design, development, and manufacturing, as well as to services related to the product.



Daikin units comply with the European regulations that guarantee the safety of the product.



DACA-EEDEN11-720
Printed in U.S.A. 04/2011 B AK